TELEDYNE LECROY
Everywhereyoulook™

PROTOCOL SOLUTIONS GROUP
3385 SCOTT BLVD
SANTA CLARA, CA 95054

PE*Tracer* Edge
PCI Express Multi-Lane Protocol Analyzer
User Manual

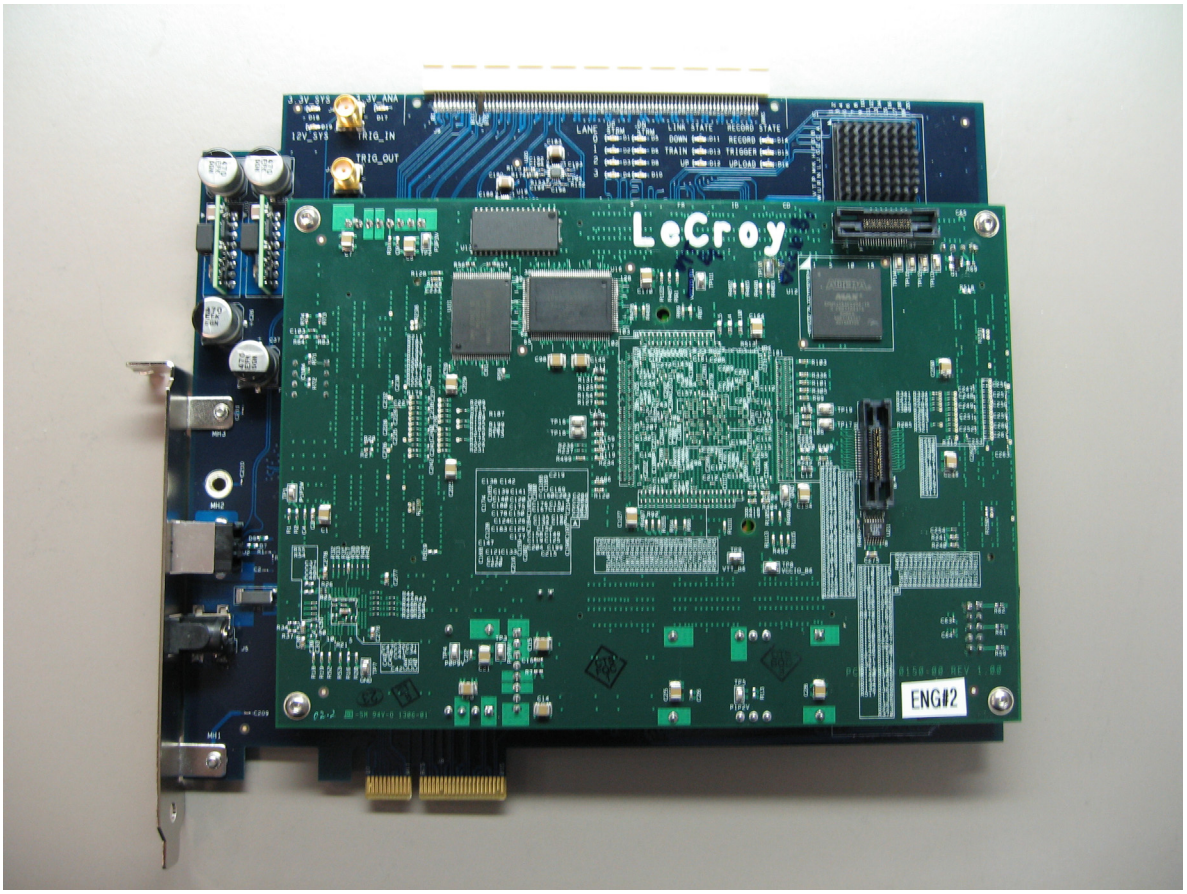

For Software Version 6.7x

September 2012

Document Disclaimer

The information in this document has been carefully checked and is believed to be reliable. However, no responsibility can be assumed for inaccuracies that may not have been detected.

Teledyne LeCroy reserves the right to revise the information in this document without notice or penalty.

Trademarks and Servicemarks

Teledyne LeCroy, CATC Trace, PCI Express, PETracer Edge, PETracer EML, PETracer ML, PETracer, PETrainer EML, PETrainer ML, PETracer Summit, Summit T2-16, Summit Z2-16, Universal Protocol Analyzer System, UPAS, and *BusEngine* are trademarks of Teledyne LeCroy.

Microsoft and *Windows* are registered trademarks of Microsoft Inc.

All other trademarks are property of their respective companies.

Copyright

© 2012 Teledyne LeCroy, Inc. All Rights Reserved.

This document may be printed and reproduced without additional permission, but all copies should contain this copyright notice.

WEEE Program

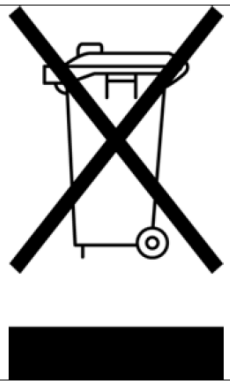

This electronic product is subject to disposal and recycling regulations that vary by country and region. Many countries prohibit the disposal of waste electronic equipment in standard waste receptacles. For more information about proper disposal and recycling of your Teledyne LeCroy product, please visit teledynelecroy.com/recycle.

TABLE OF CONTENTS

Section 1. General. 1

Chapter 1 Overview 3

1.1 PETracer Analyzer Hardware and Software 3
1.2 CATC Trace Software 4
1.3 PETracer Edge 5
1.4 Other Documents 7

Chapter 2 Hardware Description 9

2.1 System Components 9
2.2 Host Machine Requirements 9
2.3 PETracer Edge Analyzer LED Descriptions 10
2.4 Specifications for PETracer Edge 11

Chapter 3 Installation 13

3.1 Installing the PETracer Software 13
3.2 Setting Up the PETracer Edge Card 15
3.3 Connecting the PETracer Edge Analyzer to the Device Under Test 16
Connect USB Cable and Power on the Analyzer and DUTs 17
3.4 Networking an Analyzer 17
Browsing to a Networked Analyzer 18

Section 2. PETracer Analyzer Software . . 19

Chapter 4 Software Overview 21

4.1 The PETracer Software 21
4.2 Application Layout 22
4.3 Using the Toolbar 23
Multi-Segment Toolbar 25
Toolbar Hide Buttons 26
4.4 Using the Menus 28
4.5 Tool Tips 34
4.6 Keyboard Shortcuts 34
4.7 Status Bar 35
4.8 Making a PCI Express Recording 37
4.9 Recording Multi-Segmented CATC Traces 39
How to Create a Multisegment Recording 39
4.10 PETracer Files 41
CATC Trace Files 41
Recording Options Files 41
Display Options Files 41
4.11 Opening CATC Trace Files 42
4.12 Saving CATC Trace Files 43
Using the Save As Function 43
Saving a Portion of a CATC Trace 43
4.13 Exporting a CATC Trace File 44

4.14 Printing Data Files 45
4.15 Analyzer Chat Window 46

Chapter 5 Reading CATC Traces 47

5.1 Viewing PCI Express CATC Traces 47
5.2 Expand and Collapse Data Fields 47
5.3 Resizing Cells 47
5.4 Pop-up Menus 48
5.5 View Data Block 48
5.6 Show Raw 10b Codes 49
5.7 Show Header Fields 50
5.8 Packet Cell Popup Menus 51
Packet Header R-> Cell Popup Menu 51
Packet Header G1 Cell Popup Menu 52
5.9 Set Marker 53
5.10 Edit or Clear Marker 54
5.11 Decoding Traffic 55
Packet 55
Link 55
Split 55

Chapter 6 Searching CATC Traces 57

6.1 CATC Trace Search Overview 57
6.2 Go to Trigger 57
6.3 Go to Packet 57
6.4 Go to Time 58
6.5 Go to Marker 58
2. Markers 59
Markers Overview 59
Functionality of Markers 60
Attaching Markers 62
Adding an Attachment 62
5. Recording an Audio File 63
Video Files supported 63
Attachment Types and Visualization 64
Embedded Attachments to a Marker 64
Viewing Attachments of a Marker 65
Text 65
Audio 67
Video 67
File Attachment 67
URL Link 68
YouTube Video 68
Images 69
Other Attachments 69
Edit Marker 69
All Markers Window 70
6.6 CATC Walk Playlist 72
Playlist Functionality 73
Playback Window 75
Playlist Playback Controls 76

6.7 Go To Menu 77
6.8 Search Direction 78
6.9 Find 79
Event Groups 81
6.10 Search for the Next Packet Type 81

Chapter 7 Display Options 83

7.1 Setting Display Options 83
7.2 Specifying General Display Options 84
Analysis Tools Checkboxes 84
Fonts 84
Configuration Name 85
7.3 Color, Format, and Hiding Options 85
Setting Field Colors 86
Changing Field Formats 88
7.4 Load a Previously Saved Display Options File 92
7.5 Saving Display Options 92

Chapter 8 Recording Options 93

8.1 Setting Recording Options 93
8.2 General Tab 94
Recording Type 95
Buffer Size 95
Target Analyzer 96
Trigger Position 96
Trigger On 96
Trace Filename and Path 96
Options Name 97
Save As MultiSegment Trace 98
Viewing Multisegmented Files 98
Misc 99
Link for PETracer Edge 100
Saving and Loading Previously Saved Recording Options 102
Setting Default Recording Options 102
8.3 Recording Rules Overview 103
Global State vs. Sequences 104
8.4 Recording Rules Buttons 105
8.5 Creating Recording Rules 105
8.6 Recording Rules Logic: How Contradictory Rules are Resolved 108
Recording Rules Examples 108
8.7 Properties Dialog Boxes 115
8.8 Event Properties Dialog 116
Accessing the Properties Dialog 116
Dialog Settings and Features 116
Error Properties Dialog 117
Actions Properties Dialog 117
TLP Header Properties Dialog 118
TLP Prefix Properties Dialog 118
Payload Properties Dialog 119
DLLP Packet Properties Dialog 119
Ordered Set Properties Dialog 120

8.9 Counting Events 120
8.10 Creating a Payload Match 122
8.11 Trigger 124
8.12 Filter In and Filter Out 125

Chapter 9 Reports and Tools 127

9.1 File Information 128
9.2 Error Summary 129
9.3 Traffic Summary 130
Using the Traffic Summary Window to Search the CATC Trace 130
Traffic Summary Buttons 131
9.4 Bus Utilization 132
Bus Utilization Pop-up Menu 133
Bus Utilization Buttons 135
9.5 Link Tracker 137
Using the Link Tracker Window 138
Link Tracker Buttons 141
9.6 Data Flow Window 143
9.7 Using the Trace Navigator 144
Displaying the Navigator 144
Navigator Toolbar 145
Navigator Ranges 145
Navigator Panes 147
9.8 LTSSM Flow Graph 150
9.9 Packet Header Bar 151
9.10 Packet Data Window 152
9.11 Configuration Space View 153
9.12 Using Unit Metrics 155
Show Metrics in the CATC Trace Display 156
Show Metrics in the Traffic Summary Window 158
Show Metrics in the Bus Utilization Window 160
9.13 Real-Time Statistics Window 163
Real-Time Statistics Buttons 164
Real-Time Statistical Monitor Pop-up Menu 166
Real-Time Statistics Graph Areas 167
9.14 TC to VC Mapping 168
9.15 Timing and Bus Usage Calculations 169
9.16 Running Verification Scripts 171

Chapter 10 Updates and Licensing 173

10.1 Updating the Card 173
10.2 License Keys 174
10.3 License Information 174

Appendix A Configuration Space Decoding 175

A.1 Mandatory Definitions 175
A.2 Mandatory Module Functions 175
A.3 Configuration Register Types 176
A.4 Primitives 176
A.5 Helper File 177

Appendix B China Restriction of Hazardous Substances Table178
How to Contact Teledyne LeCroy 179
Index 181

Section 1. General

Chapter 1: Overview

Designed for developers and validators, the Teledyne LeCroy PE*Tracer* Edge is a PCI Express™ Multi-Lane advanced verification system.

By leveraging years of experience in protocol analysis tools for emerging markets, PE*Tracer* Edge blend sophisticated functionality with practical features to speed the development of PCI Express™ IP cores, semiconductors, bridges, switches, add-in boards, and systems.

1.1 PE*Tracer* Analyzer Hardware and Software

Features and Benefits

PE*Tracer* Edge analyzers have these features and benefits:

Features	Benefits
Powerful and Intuitive CATC Trace™ Analysis Software	Faster interpretation and debug of PCI Express traffic with color-coded, clearly labeled protocol elements in a graphical display. Reduces coding and deciphering.
Extensive Decoding	Complete, accurate and reliable decoding of TLPs (Transaction Layer Packets), DLLPs (Data Link Layer Packets), and all PCI Express Primitives
Monitoring and Link Utilization	View link utilization and other performance measurements changing in real time. Save this data to view as post-session statistics.
Advanced Triggering	Isolate important traffic, specific errors, or data patterns. Trigger condition setup is made simple with drag and drop tools to link events to trigger or filter actions.
Hardware Filtering	Analyze faster and understand transactions more clearly by removing non-essential fields from the CATC Trace.
Intelligent Reporting	Quickly identify and track error rates and abnormal link or timing conditions. Display configuration space and protocol specification details.
Sophisticated Viewing	View Packet, Link and Split Transaction levels of the PCI Express protocol. Collapsible/expandable headers with Tool tip explanations make it easy to navigate and interpret packet contents, headers, and commands. View packets, transactions of TLPs and DLLPs in classic CATC Trace™ format or in raw 10b code for deeper analysis.
2 GB Recording Capacity	Capture long recording sessions for analysis and problem solving

Hi-Speed USB Port	Access PCI Express recordings up to 40x faster than USB 1.1. No complicated setup required.
Downloadable CATC Trace Viewer	Share and annotate CATC Trace recordings within a development team. Freely distributable PE*Tracer* software enables collaborative analysis across sites and time zones.
Taps non-intrusively into a single x1, 2.5 gigabit/second PCI Express port using MicroGigaCN receptacle and one standard x4 cable	Accurate and non-intrusive collection of PCI Express CATC Trace data
Field-upgradeable firmware and recording engine	Upgrades available for download direct from Teledyne LeCroy website
Flexible probing options	Active and passive slot interposers MidBus probe Flying lead probe Gen1 AMC interposer Gen1 XMC interposer Gen1 SIOM interposer Gen1 Express card interposer
External interface for probing and monitoring auxiliary digital signals	Enables cross triggering between other test instruments.
Dword to Transaction Level Viewer	View Dwords, Packet, Link and Split Transaction levels of the PCI Express protocol.
CRC checking	Know that info being displayed is accurate.

1.2 CATC Trace Software

PE*Tracer* Edge utilizes the CATC Trace™ to assist users in analyzing how PCI Express components work together, diagnose problems, and test for interoperability and standards compliance.

The CATC Trace is a powerful and intuitive expert software system embedding detailed knowledge of the protocol hierarchy and intricacies, as defined in the protocol specification. The software allows the user to control the Analyzer and set specific real-time triggering and filtering conditions. The CATC Trace utilizes a Windows-based graphical display that has been optimized for fast and easy navigation through a captured traffic session. Users are alerted as violations are detected at all levels of the protocol layering and can easily drill down on areas of interest or collapse and hide fields that are not relevant.

1.3 PE*Tracer* Edge

The PE*Tracer* Edge Analyzer uses a high-impedance, non-intrusive probing technology, allowing full, unaltered data pass-through. The analyzer supports bidirectional x1, x2, and x4 PCI Express link data capture and analysis. It supports PCI Express specification version 2.0 at 2.5 GB/s per lane. This product is ideal for anyone doing protocol development for add-in boards, servers, desktops, and workstations.

The PE*Tracer* Edge Analyzer installs directly in the PCI Express downstream slot, between the Root Complex and the card under test.

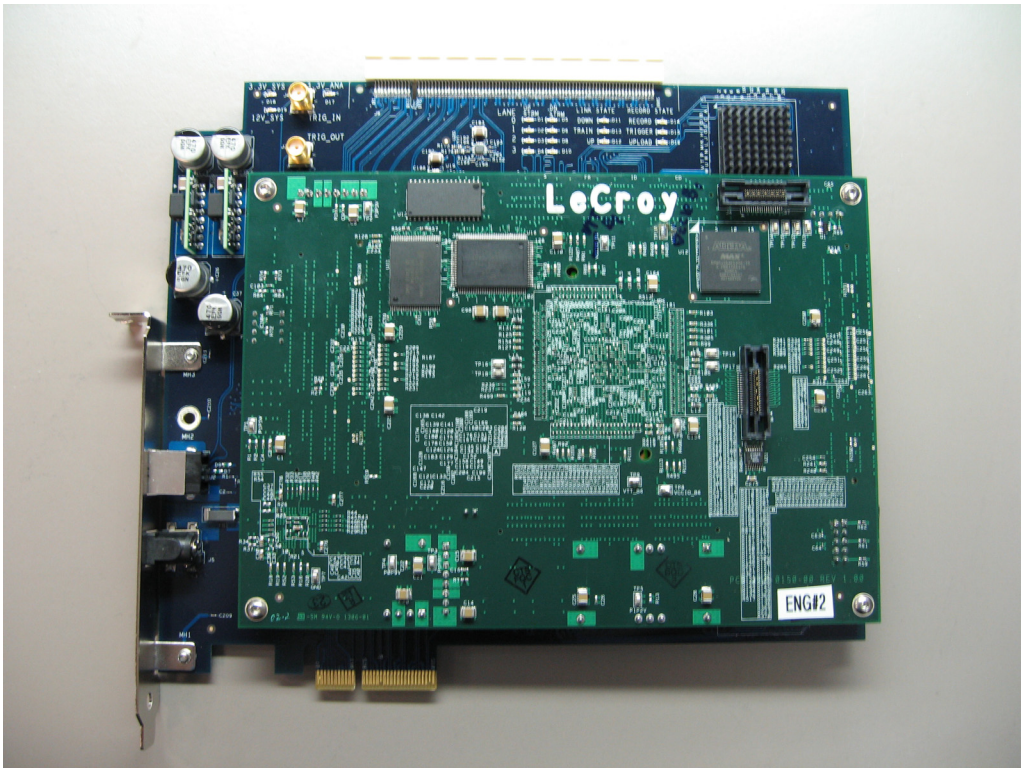

The PCI Express PE*Tracer* Edge is offered in two classes: PRO and EXPERT.
PRO users will appreciate a low cost but highly featured class of analyzer.
EXPERT users will recognize advanced features that enable deep analysis for error troubleshooting of bus management and protocol operation issues. Both classes of the PCI Express PE*Tracer* Edge have many innovative features that dramatically reduce debugging time, accelerating time-to-market for PCI Express solutions.

The PCI Express PE*Tracer* Edge utilizes the CATC Trace to assist users in analyzing how PCI Express components work together in diagnosing problems. The CATC Trace is a powerful and intuitive expert software system, embedding detailed knowledge of the protocol hierarchy and intricacies, as defined in the protocol specification.

The CATC Trace utilizes a Windows-based graphical display that has been optimized for fast and easy navigation through a captured traffic session. Users are alerted as violations are detected at all levels of the protocol layering and can easily drill down to areas of interest or can collapse and hide fields that are not relevant. Protocol data can be viewed in several ways from logical to chronological, as well as by events unique to PCI Express.

You can find errors quickly by using powerful triggering, filtering, and error reporting. You can view meaningful reports about performance and protocol behavior in real time and as post-captured traffic. You can know that your data is accurate through CRC rechecking, which produces reliable and complete decodes of Transaction Layer Packets (TLPs), Data Link Layer Packets (DLLPs), and all PCI Express primitives. For deeper analysis, you can display packet contents as raw 10-bit codes.

Powerful display views allow for easy analysis of protocol traffic.

PCI Express PE*Tracer* Edge users who are budget conscious today can get started with the PRO and move to EXPERT functionality later.

Features	**PRO**	**EXPERT**
Protocol Hierarchical Display	**x**	**x**
DWORD View	**x**	**x**
Link Tracker	**x**	**x**
Trace Navigator	**x**	**x**
TLP Packet Script Decoding	**x**	**x**
Trigger/Filter Control	**x**	**x**
Power Search	**x**	**x**
Header Field Viewer	**x**	**x**
Config Space Viewer	**x**	**x**
Advanced Hide	**x**	**x**
Timing Calculator	**x**	**x**
x4 / x2 / x1 lane width support	**x**	**x**
Performance Metrics	**x**	**x**
Flow Control Credit Tracking	**x**	**x**
Automation API	**x**	**x**
Expert Recording Buffer Size	256 MB	2 GB
Expert Real-time Bus Monitoring		**x**
Expert Triggering		**x**
Expert Traffic Summary View		**x**
Expert Graphical Bus Utilization View		**x**
Verification Script Engine		**x**
Compliance Ready		**x**

1.4 Other Documents

For more information, refer to the following documents:

- *Teledyne LeCroy Analyzers File-based Decoding Manual*
- *PETracer/Trainer Automation Manual*
- *PETracer VSE Manual*
- *PETracer Gen2 Multi Lead Probe User Manual*
- *PETrainer Scripting Language Reference Manual*
- PE*Tracer* Online Help

Chapter 2: Hardware Description

2.1 System Components

- **PE*Tracer* Edge system:**
  - PE*Tracer* Edge card
  - One USB Cable
  - 12 V external power supply
  - PE*Tracer* Software program CD-ROM

2.2 Host Machine Requirements

PE*Tracer* Edge connects to a host machine. Please consult the **readme** file on the installation CD for the latest host machine requirements.

2.3 PE*Tracer* Edge Analyzer LED Descriptions

When powered on, the PE*Tracer* Edge activates the user-accessible controls and LEDs on the top of the Edge card:

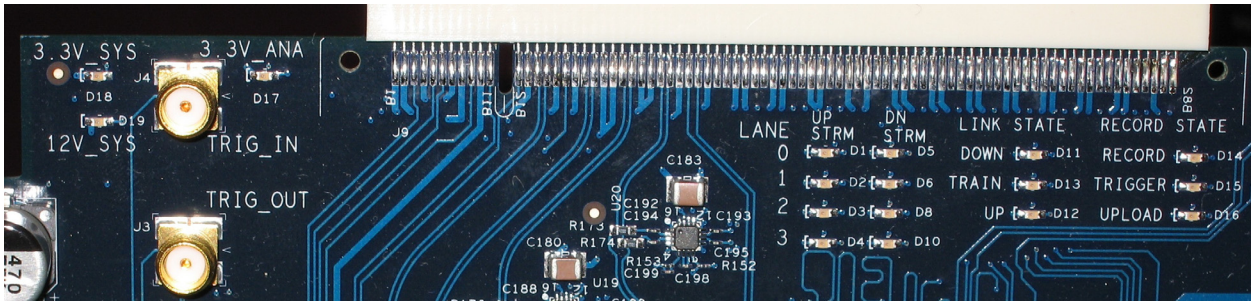

- **3.3V_SYS (D18)**: Lights when 3.3 Volt power is provided by the slot under test.
- **12V_SYS (D19)**: Lights when 12 Volt power is provided by the slot under test.
- **3.3V_ANA (D17)**: Lights when external power is provided to the Edge card.
- **LANE 0 UP STRM (D1)**: Lights when there is activity on the Upstream physical lane number 0.
- **LANE 0 DN STRM (D5)**: Lights when there is activity on the Downstream physical lane number 0.
- **LANE 1 UP STRM (D2)**: Lights when there is activity on the Upstream physical lane number 1.
- **LANE 1 DN STRM (D6)**: Lights when there is activity on the Downstream physical lane number 1.
- **LANE 2 UP STRM (D3)**: Lights when there is activity on the Upstream physical lane number 2.
- **LANE 2 DN STRM (D8)**: Lights when there is activity on the Downstream physical lane number 2.
- **LANE 3 UP STRM (D4)**: Lights when there is activity on the Upstream physical lane number 3.
- **LANE 3 DN STRM (D10)**: Lights when there is activity on the Downstream physical lane number 3.
- **LINK STATE DOWN (D11)**: Indicates state of the physical PCI Express link. Lights when the link is down.
- **LINK STATE TRAIN (D13)**: Indicates state of the physical PCI Express link. Lights when the link is in training.
- **LINK STATE UP (D12)**: Indicates state of the physical PCI Express link. Lights when the link is up.
- **RECORD STATE RECORD (D14)**: Lights when the Edge is recording.
- **RECORD STATE TRIGGER (D15)**: Lights when the Edge triggers on an event.
- **RECORD STATE UPLOAD (D16)**: Lights when the Edge is uploading data to the host machine.

2.4 Specifications for PE*Tracer* Edge

The following specifications describe the standalone PE*Tracer* Edge card.

Package

Dimensions	8.0 x 7.4 x 0.6 inches (20.3 x 13.8 x 1.5 cm)
Connectors	2 Probe Data (HSSDC2 receptacle) UPAS AC power connection External trigger connection (TRIG IN/OUT, SMA) PC connection (USB2.0)
Weight	15 oz. (0.42 kg)

Power Requirements

Adapter	100 to 240 VAC, 47 to 63 Hz (universal input), 60 W maximum
Card	12 V DC, 50 W

Environmental Conditions

Operating Temperature	0 to 40 °C (32 to 104°F)
Storage Range	-20 to 80 °C (-4 to 176°F)
Operating Humidity	10 to 90%, non-condensing
Operating Altitude	Up to 6560 feet (2000 meters)

Probing Characteristics

Connection	Slot interposer card

Recording Memory Size

1 GB for CATC Trace capture, timing, and control information.

Host Machine Software Requirements

Operating System	Windows® XP and Vista

Trigger Events

Basic Trigger Events	Error, Link Up/Down, TX1, Ts2, FTS, Any TLP, Config Rd, Config Wr, IO Rd, IO Wr, Mem Rd, Mem Wr, Message, Completion, InitFC1, InitFC2, ACK, NAK, PM
Link Conditions	Link Alive, Electrical Idle Link Condition, TS1 Ordered Set, TS2 Ordered Set, Skip Ordered Set, Electrical Idle Ordered Set, FTS Ordered Set, DLLP, TLP
Payload	Customizable Payload, Mask, Match
Errors	Delimiter, EDB (End-of-Bad Packet), Disparity, Symbol, Idle data, Ordered Set Format

Reporting and Statistics

Transport Layer Packet (TLP)	Memory Read 32-bit, Memory Read 64-bit, Memory Write 32-bit, Memory Write 64-bit, I/O Read Request, I/O Write Request, Configuration Read Type 0, Configuration Write Type 0, Configuration Read Type 1, Configuration Write Type 1, Message, Message with Data, Completion, Completion with Data, Completion for Locked Memory Read, Completion for Locked Memory Read with Data, Requesters, Completers, Traffic Class Number, Virtual Channel ID Number
Data Link Layer Packet (DLLP)	Ack, Nak, PM, Vendor, InitFC1-P, InitFC1-NP, Init-FC1-Cpl, Update FC-P, Update FC-NP, Update FC-Cpl, InitFC2-P, InitFC2-NP, Init-FC2-Cpl, Flow Control
Link Transactions	Implicit, Explicit, Incomplete
Split Transaction	Successful Completion, Unsupported Request, Cfg Request Retry, Completer Abort, Incomplete
Error Reports	Invalid 10b code, Running Disparity Error, End of Bad Packet, Delimiter Error, Ordered Set Format Error, Idle Error

Chapter 3: Installation

PE*Tracer* Edge™ is a stand-alone card with an external 12-volt power supply.

You can begin making PCI Express™ recordings or begin traffic generation after following the steps in this chapter.

3.1 Installing the PE*Tracer* Software

PE*Tracer* software operates all of Teledyne LeCroy's PCI Express protocol products:

The PE*Tracer* software is installed on a Microsoft® Windows®-based host machine and serves as the interface.

After the card has been recognized as a USB device, install the PE*Tracer* software on the host machine:

Step 1 Insert the CD into the CD ROM drive of the host machine that controls the card. The installation window opens and displays links to the PE*Tracer* software, user manuals, a readme file, and Acrobat Reader.

Step 2 Select **Install Software** and follow the onscreen instructions.

The PE*Tracer* software installs automatically on the host machine's hard disk. During installation, all necessary USB drivers are loaded automatically. Drivers included in the installation are:

- **petrcedg.sys**: PE*Tracer* Edge driver

Step 3 To start the application, launch the PE*Tracer* program from the Start menu:
Start > Programs > LeCroy > PETracer > LeCroy PETracer

The PE*Tracer* program opens:

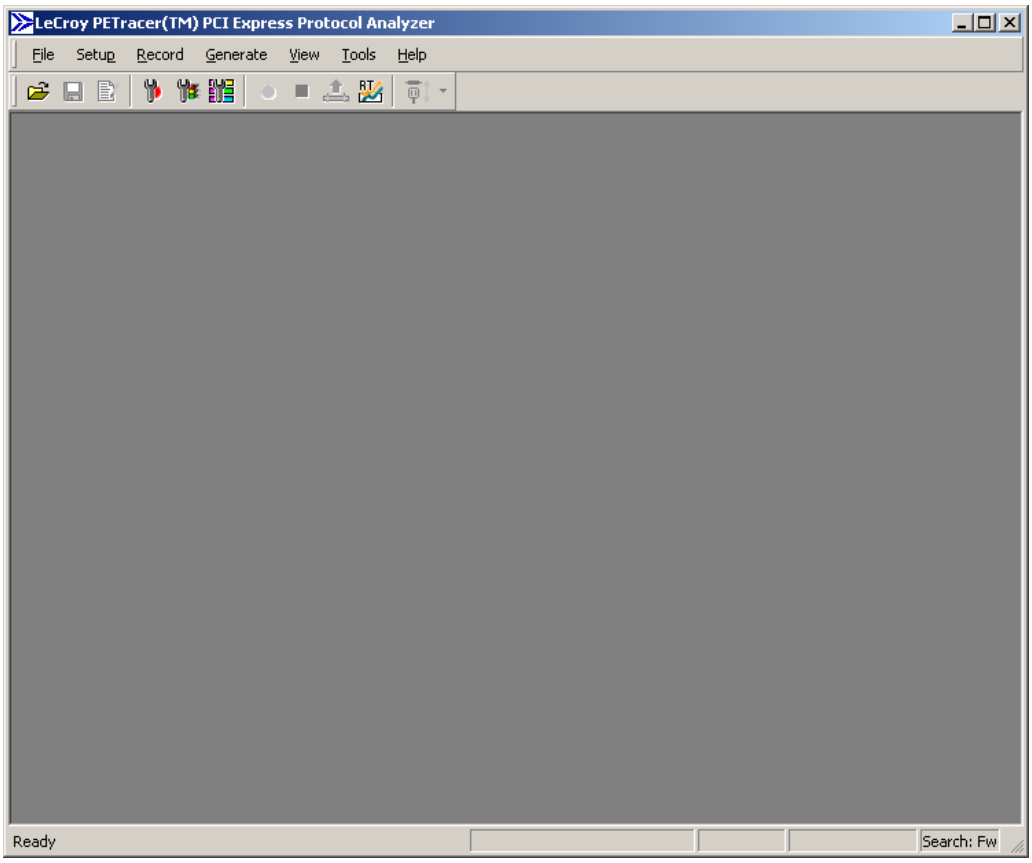

Note: The software may be used with or without the card. When used without an card attached to the computer, the program functions as a CATC Trace Viewer to view, analyze, and print captured traffic.

3.2 Setting Up the PE*Tracer* Edge Card

Step 1 Remove the card from its shipping container.

Step 2 Connect the USB cable between the USB port on the card and a USB port on the host machine.

Step 3 Connect the external 12-volt power supply to the Analyzer unit.

Step 4 Connect the external 12-volt power supply to a 100-volt to 240-volt, 50 Hz to 60 Hz, 60 W power outlet. This turns on the Analyzer, which has no power switch.

Step 5 Follow on-screen Plug-and-Play instructions for the automatic installation of the Analyzer as a USB device on the host machine (the required USB files are included on the installation CD). Step through the Windows® hardware wizard. If the wizard prompts you for driver information, point it to the CD which should be in your disk drive.

The host operating system detects the Analyzer and begins to install the USB driver.

3.3 Connecting the PE*Tracer* Edge Analyzer to the Device Under Test

Installing the Edge Card between the Devices Under Test (DUT)

To install the Edge card between the Devices Under Test (DUT), perform the following steps:

Step 1 If not already powered off, unplug the external 12-volt power supply from the power outlet and power off the DUTs.

Step 2 Insert the gold male connector on the Edge card into a PCI Express slot in the motherboard (or whatever board you are testing).

Step 3 Insert the PCI Express DUT into the white female device connector on the top edge of the Edge card. The Edge card's female device connector can accommodate an x1, x2, or x4 PCI Express device.

Step 4 The Edge card is shipped from Teledyne LeCroy with a metal face plate for attachment to a PC case. If you are working with a motherboard that is not in a PC case, you may prefer to remove the metal face plate so the Edge card can sit flat with the motherboard. To remove the face plate, unscrew the two screws that hold it onto the Edge card.

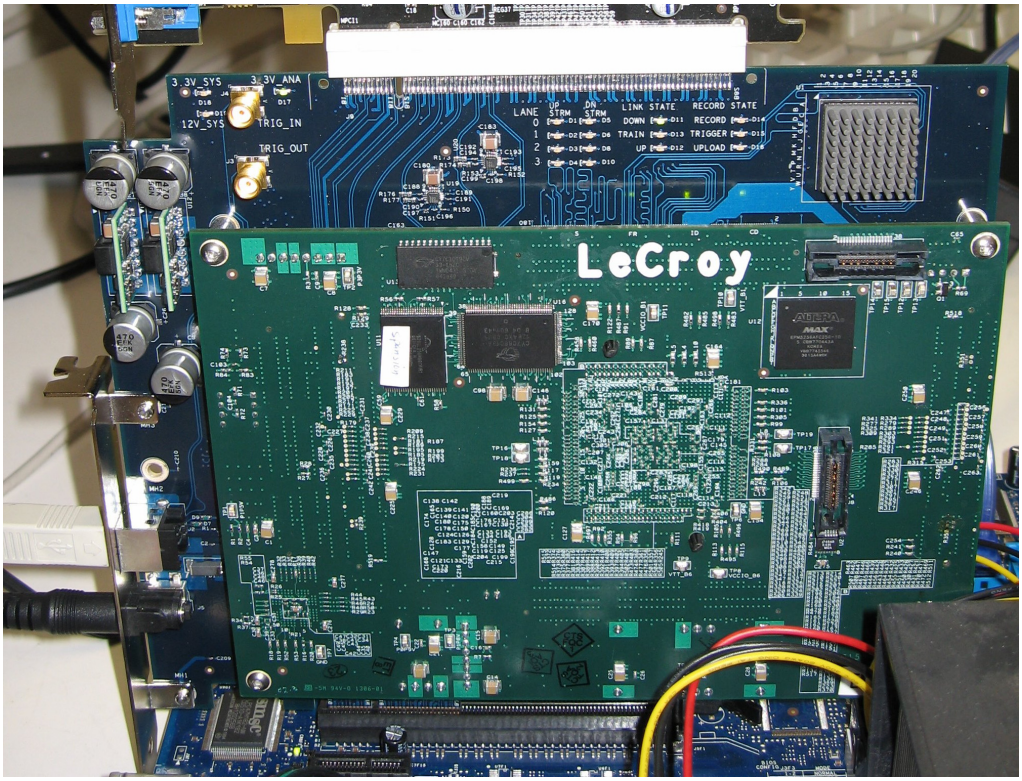

Connect USB Cable and Power on the Analyzer and DUTs

Step 1 If not already connected, connect the provided USB cable between the USB port on the Edge card and a USB port on the host machine that runs the PE*Tracer* software.

Step 2 If not already connected, connect the external 12-volt power supply to the Edge card.

Step 3 Connect the external 12-volt power supply to a 100-volt to 240-volt, 50 Hz to 60 Hz, 60 W power outlet. This turns on the Analyzer, which has no power switch.

Step 4 After 20 seconds, power on the PCI Express device under test.

Step 5 Open the PE*Tracer* software on the host machine. The Edge card is now ready for PCI Express traffic recording.

3.4 Networking an Analyzer

PETracer™ has a networking capability that allows users to run an Analyzer remotely over an IP-based LAN. Using the Network browse dialog, you can locate and connect to other host machines on the LAN, which, in turn, are connected to Analyzers. Through this connection, you can remotely control an Analyzer.

Setup for IP LAN Use
In order to connect to a remote Analyzer, the Analyzer must be attached to a host machine that is on the LAN. This host machine must have PETracer installed.

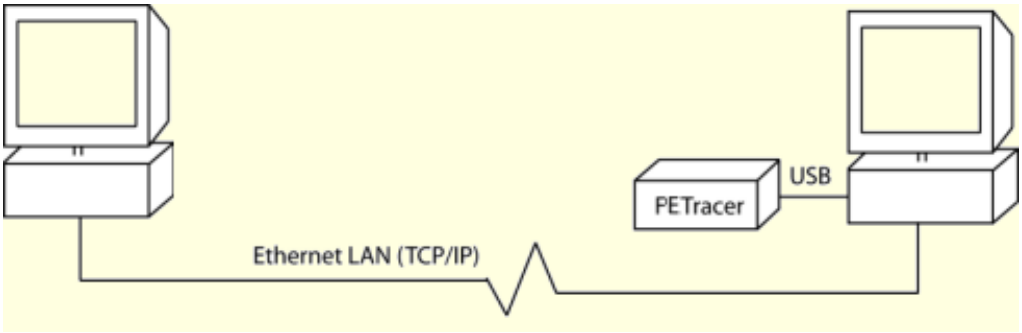

Browsing to a Networked Analyzer

For the PE*Tracer* Edge, you can browse to a networked analyzer.

To browse to a networked Analyzer:

Step 1 From the menu, select **Setup > Analyzer Network**. The Analyzer Network dialog box opens. Locally connected Analyzers (connected via USB) display in the list. The list may also show host machine and Analyzers identified in previous sessions.

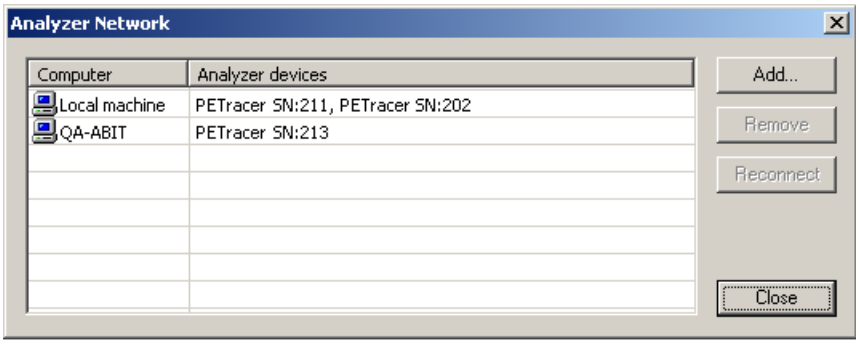

Step 2 If the desired host machine and Analyzer are not present in the list, click **Add**. The Add Analyzer dialog box opens.

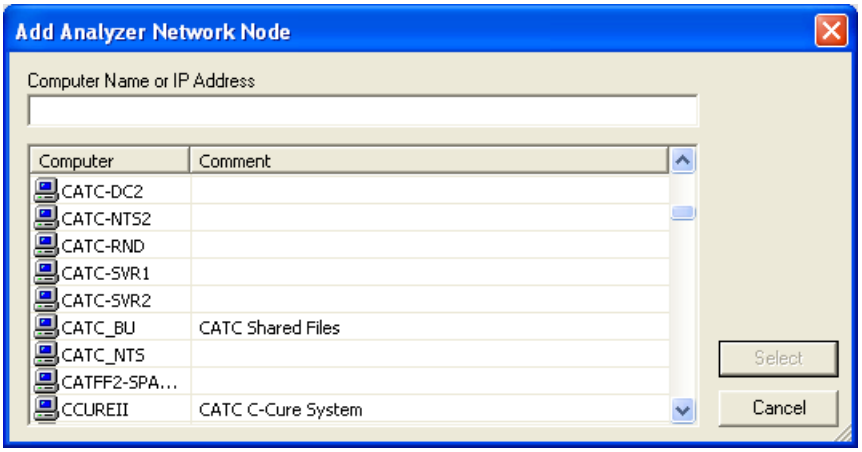

Step 3 Browse to the host machine that has the Analyzer(s), then click **Select**. The selected host machine and its Analyzer appear in the Analyzer Network browse dialog.

Note: The Analyzer must be turned on before it appears in the list.

Step 4 Remove host machines and Analyzers you do not intend to use in the current recording session by selecting them from the list and clicking **Remove**.

The PE*Tracer* software establishes a connection to the selected Analyzer.

Section 2. PE*Tracer* Analyzer Software

Chapter 4: Software Overview

4.1 The PE*Tracer* Software

The PE*Tracer*™ software administers Analyzer platforms and handles all CATC Trace analysis and display. The core software is thus the same for all of Teledyne LeCroy's PCI Express products.

The software runs on a Windows®-based host machine that is attached to the Analyzer via an Ethernet or USB 2.0 connection (USB 1.0 is also supported). PE*Tracer* software can be used without the Analyzer as a CATC Trace viewer for viewing, analyzing and printing CATC Traces.

The PE*Tracer* software operates in Microsoft® Windows® XP and Vista environments.

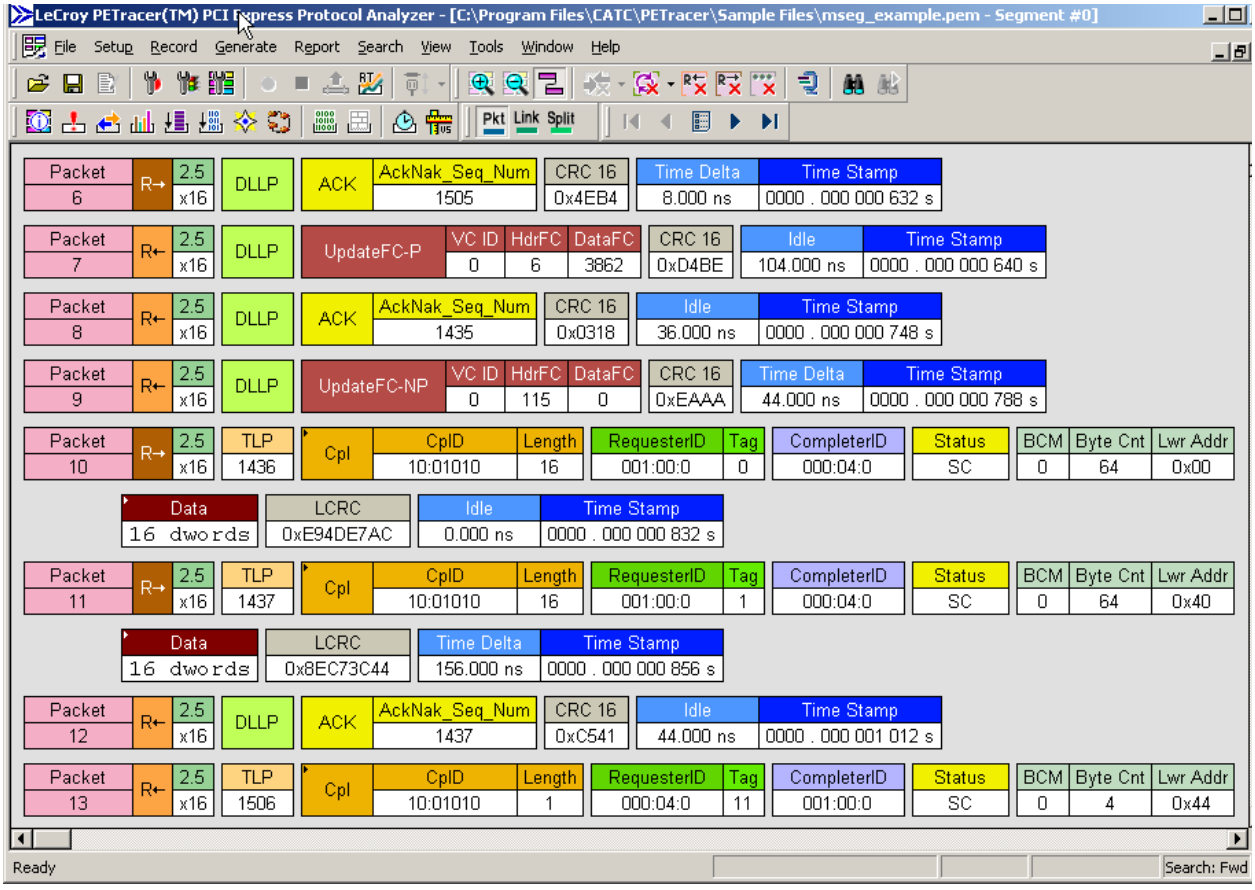
LeCroy PETracer(TM) PCI Express Protocol Analyzer - [C:\Program Files\CATC\PETracer\Sample Files\mseg_example.pem - Segment #0]
File Setup Record Generate Report Search View Tools Window Help
Pkt Link Split
Packet 6 R→ 2.5 x16 DLLP ACK AckNak_Seq_Num 1505 CRC 16 0x4EB4 Time Delta 8.000 ns Time Stamp 0000 . 000 000 632 s
Packet 7 R← 2.5 x16 DLLP UpdateFC-P VC ID 0 HdrFC 6 DataFC 3862 CRC 16 0xD4BE Idle 104.000 ns Time Stamp 0000 . 000 000 640 s
Packet 8 R← 2.5 x16 DLLP ACK AckNak_Seq_Num 1435 CRC 16 0x0318 Idle 36.000 ns Time Stamp 0000 . 000 000 748 s
Packet 9 R← 2.5 x16 DLLP UpdateFC-NP VC ID 0 HdrFC 115 DataFC 0 CRC 16 0xEAAA Time Delta 44.000 ns Time Stamp 0000 . 000 000 788 s
Packet 10 R→ 2.5 x16 TLP 1436 Cpl CplD 10:01010 Length 16 RequesterID 001:00:0 Tag 0 CompleterID 000:04:0 Status SC BCM 0 Byte Cnt 64 Lwr Addr 0x00
Data 16 dwords LCRC 0xE94DE7AC Idle 0.000 ns Time Stamp 0000 . 000 000 832 s
Packet 11 R→ 2.5 x16 TLP 1437 Cpl CplD 10:01010 Length 16 RequesterID 001:00:0 Tag 1 CompleterID 000:04:0 Status SC BCM 0 Byte Cnt 64 Lwr Addr 0x40
Data 16 dwords LCRC 0x8EC73C44 Time Delta 156.000 ns Time Stamp 0000 . 000 000 856 s
Packet 12 R← 2.5 x16 DLLP ACK AckNak_Seq_Num 1437 CRC 16 0xC541 Idle 44.000 ns Time Stamp 0000 . 000 001 012 s
Packet 13 R← 2.5 x16 TLP 1506 Cpl CplD 10:01010 Length 1 RequesterID 000:04:0 Tag 11 CompleterID 001:00:0 Status SC BCM 0 Byte Cnt 4 Lwr Addr 0x44
Ready
Search: Fwd

4.2 Application Layout

The PE*Tracer* application contains the following components:

Title bar: The title bar is at the top of the application window and displays the CATC Trace file name or generation script name.

Menu bar: The menu bar is located below the title bar, by default. The menu bar can be moved by clicking a blank area of the bar and then dragging the menu to a new position. It can be docked in another part of the application window or moved outside of the window to become a floating menu.

Toolbar: The toolbar is composed of buttons that represent the commonly used commands. The toolbar divides into smaller toolbars that can be moved and docked in a new position or made to float outside of the window.

Display area: The display area is the main part of the application window in which CATC Traces are displayed.

Status bar: The status bar is located at the bottom of the application window. The left end of the status bar displays descriptions of buttons and menu items when the mouse is positioned over them. The right end of the bar shows the search direction.

4.3 Using the Toolbar

You can use the PE*Tracer* application Toolbar as a shortcut to most of the operations supplied by the menus.

Opens a previously recorded CATC Trace file.

Edit as text.
Script Editor. Opens a text editor for editing traffic generation files (***.peg)**

Save As
Allows the open file to be saved with a new name.

Setup Recording Options
Opens the Recording Options dialog box.

Setup Display Options
Opens the Display Options dialog box.

Setup Generation Options
Opens the Generation Options dialog box.

Start Recording.

Real Time Statistics monitor
Opens a window that displays real-time information.

Stop Recording.

Disconnect/Connect Link.
Click once to break and momentarily later restore link. Open menu to select either Connect or Disconnect.

Repeat Upload.
Opens a dialog box that allows you to select a portion of memory to upload from memory, then causes the Analyzer to re-send the CATC Trace from the Analyzer buffer to the host machine.

Zoom in display.

Zoom out display.

Hide Training Sequence.

Hide SKIP and Update FC packets.

Hide Upstream recording/traffic.

Find
Opens a dialog box that allows you to select one or more items to find in the recording, then searches to that point.

View Packet Level data.

View Link Transaction Level data.

Wraps display information.

Hide Downstream traffic/recording.

Advanced Hiding Options
Opens a dialog box that allows you to select items to hide from view.

Compact View
Toggles compacting of training sequences to analyze CATC Trace data faster, or no compacting to display more data.

Find Next. Repeats last Find or Search action.

View Split Transaction Level data

File Information
Lists the conditions under which the recording was made.

Bus Utilization
Opens a window that graphically represents various information about the recording.

Error Report
Opens a window that lists all errors identified in the recording.

Link Tracker
Opens a window that displays symbol information per lane.

Traffic Summary
Opens a window that lists all events that occurred during the recording

Opens the Data Flow window.
Shows recorded data in a compressed tabular format.

Navigator. Shows/hides the Navigator bar - a utility that lets you easily navigate the CATC Trace.

LTSSM Flow Graph
Shows a state diagram of the LinkTraining and Status State machine.

Displays the Data/Payload window for the current packet.

Displays the Packet Header bar.
Opens a window that displays the header information in the current packet, as it would be viewed in the specification.

Opens the Timing and Bus Usage Calculations window.

Running Verification Scripts
Opens a dialog that allows you to select and run verification scripts.

Multi-Segment Toolbar

First Segment. Open first segment in the multisegment CATC Trace.

Index file. This button becomes active if a multisegment CATC Trace file is open and will display the index file for the recording.

Previous segment. Open previous segment in the multisegment CATC Trace.

Next Segment. Open next segment in multisegment CATC Trace.

Last segment. Open last segment in multisegment CATC Trace.

Toolbar Hide Buttons

The PE*Tracer* application toolbar has five buttons related to show/hide of CATC Trace file contents. The buttons allow you to quickly adjust the CATC Trace display to your needs.

Hide Training: Brings up a drop-down menu that lets you to hide all or a portion of the packets in the training portion of the CATC Trace.

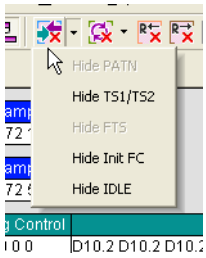

Hide SKIP and Update FC: Brings up a drop-down menu that lets you hide SKIP or Update FC packets in a CATC Trace.

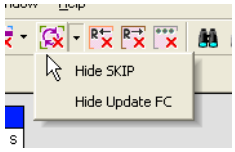

Hide Upstream: Hide all traffic from endpoint devices to the root complex.

Hide Downstream: Hide all traffic from the root complex to endpoint devices.

Advanced Hiding Options: Brings up the Level Hiding pane of the Display Options window. Use this pane to tune the show/hide options within the CATC Trace display.

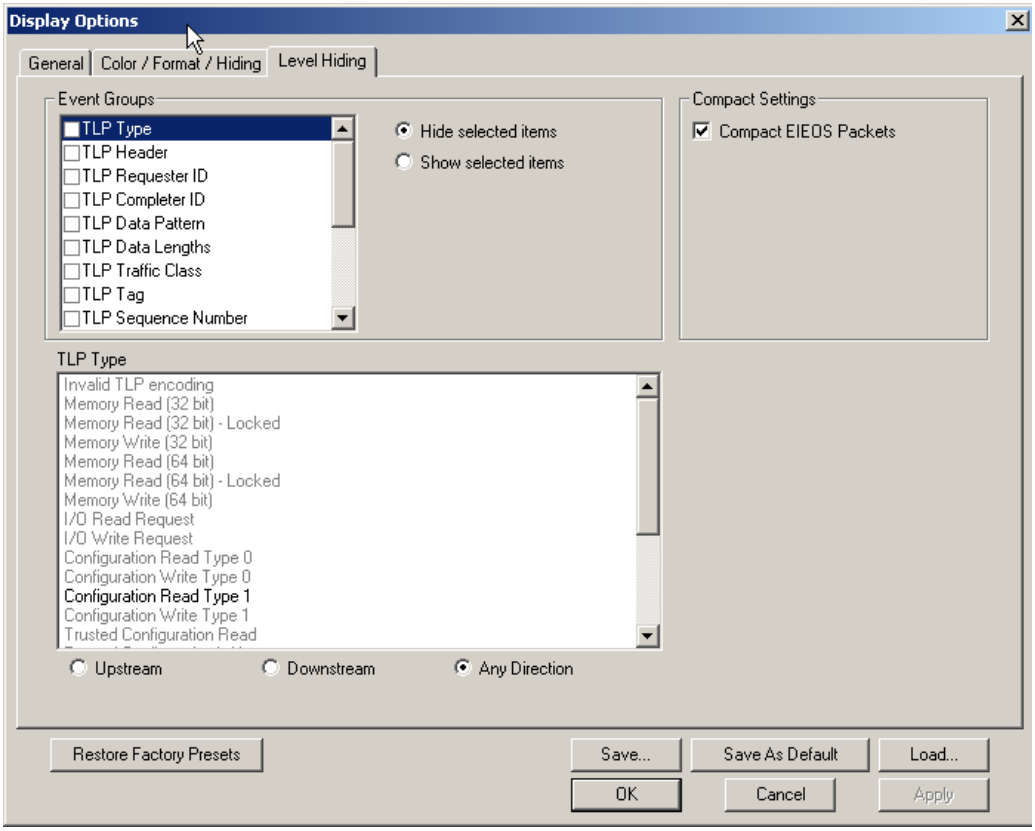

4.4 Using the Menus

The PE*Tracer* application main display includes the following set of pull-down menus:

File Menu

New Generator Script	Creates a new Traffic Generation file.
Open	Opens a file.
Close	Closes the current file.
Save as	Saves all or a specified range of packets to a uniquely named file.
Convert Old Files	Convert CATC Trace files made in previous versions of PE*Tracer* to the new format for PE*Tracer* version 5.0 and higher.
Print	Prints part or all of the current traffic data file.
Print Preview	Produces an on-screen preview before printing.
Print Setup	Setup your current or new printer.
Edit Comment	Create or edit the comment field in a CATC Trace file.
Export >> to Text >> Packets to CSV Text >> to Generator File Format	Saves all or part of a CATC Trace to a text file or traffic generation file. This text file summarizes the traffic in the CATC Trace. Saves the CATC Trace to a text file in Comma Separated Value (CSV) format. Saves the CATC Trace to a generation file.
Exit	Exit the PE*Tracer* application.

Setup Menu

Display Options	Allows you to customize display options such as field colors, field formats and level hiding.
Recording Options	Allows you to customize control and setup features associated with recording, triggering, and filtering recorded events.
Generation Options	The Generation Options dialog box is used to set configuration settings in a traffic generation script (*.peg). This dialog provides a convenient alternative means of editing a traffic generation file.
Generation Macros	Opens a dialog for creating buttons on the status bar that can be used to run traffic generation macros.
Update Device	Opens a dialog box that lets you update the BusEngine™ and Firmware.
Calibrate Device	Opens a dialog box that lets you calibrate the BusEngine™ and Firmware.
Analyzer Network	Displays the list of host machines with connected cards, analyzers, or exercisers that you want to use for recording or traffic generation.
All Connected Devices	Opens a dialog box with a list of locally or remotely connected devices. Allows you to update the BusEngine, Firmware, and your licensing information.

Record Menu

Start	Causes the Analyzer to begin recording traffic.
Stop	Causes the Analyzer to stop recording traffic.
Reupload	Causes the Analyzer to re-send all or selected portions of the CATC Trace from the Analyzer buffer to the host machine.
Disconnect/Connect	Causes the Analyzer to momentarily break, and then establish the PCI Express link connection in both link directions.
Reset Link Configuration	Causes the Analyzer to reset the Serdes and thereby reset the Analyzers current link configuration. This command is needed when lane width or other lane settings are changed. Otherwise, the old link configuration is used and errors are generated in the CATC Trace.

Report Menu

Report Menu operations are only available when you are working with a CATC Trace file.

File Information	Displays information about the file contents and describes the conditions of the file's recording (Recording Options, hardware information, and so on).
Error Summary	Displays an error summary of the current CATC Trace file and allows you to go to a specific packet, and save the error file to a uniquely named file.
Traffic Summary	Details the number and types of packets that were transferred during the recording. You can hide, save, send, text, print, and view.
Bus Utilization	Opens a window with graphs of bus usage for the open CATC Trace.
Link Tracker	Opens a window for displaying a detailed chronological view of traffic. The window provides view and navigation options.
Data Flow	Opens the Data Flow Window, providing a tabular view of transactions and their payload.
Trace Navigator	Shows the Navigator bar for navigating a CATC Trace. Shows a snapshot of the recording and allows you to adjust the memory area for the view.
LTSSM Flow Graph	Shows a state diagram of bus activity. Also allows you to navigate through the LTSSM, based on the current recording.
Packet Header	Opens the Packet Header bar, showing the Packet Header information as it would be veiwed in the specification.
Packet Data/View Data	Opens the Data Window for the current packet, with the options: Hide, Save, Hexadecimal, ASCII, Decimal, Binary, MSB Format, LSB Format, Big Endian, and Little Endian. Format Line allows you to enter the number of bytes, words, or dwords per line.
Configuration Space	Presents a list of Configuration Spaces. Clicking an item displays the selected Configuration Space in a Configuration Table format.

Search Menu

Search Menu operations are only available when you are working with a CATC Trace file.

Go to Trigger	Repositions the display to show the first packet following the trigger event.
Go to Packet	Repositions the display to a specific packet, Link Transaction, or Split Transaction number.
Go to Time	Repositions the display to specific timestamp.
Go to Marker	Repositions the display to a previously marked packet, Link Transaction, or Split Transaction.
Go to	Allows searching for specific link events: TLP Type, DLLP Type, .Ordered Set, Link Event, Traffic Class, DLLP Virtual Channel, TLP Virtual Channel, Direction, Speed, Link Width, Requester ID, Completer ID, Data Lengths, Errors.
Find	Displays the Find dialog to allow searching for various events within a CATC Trace. You can search by Display Level: Packets, Link Transactions, Split Transactions. You can search packets by Event Group: TLP Type, TLP Header, TLP Requester ID, TLP Completer ID, TLP Data Pattern, TLP Data Lengths, TLP Tag, TLP Sequence Number, DLLP Type, DLLP Header, DLLP Virtual Channel, ACK/NAK Seq Number, Ordered Sets, Link Event, Direction, Errors. You can search link transactions by Event Group: TLP Type, Traffic Class, Virtual Channel, Direction, Requester ID, Completer ID, Status, Tag. You can search split transactions by Event Group: TLP Type, Traffic Class, Virtual Channel, Direction, Requester ID, Completer ID, Status, Tag. Find allows you to create complex searches based on numerous criteria.
Find Next	Repeats the previous Find or Search operation.
Search Direction	Allows you to specify a forward or backward search of a CATC Trace file.

View Menu

Toolbars>>	Displays available toolbars: Standard, Frequently Used, Analysis, and Transaction Level. Use Customize to display the Windows Customize window.
Script Editor	Displays the Script Editor (only appears if a **.peg** file is open).
Analyzer Network Chat Bar	Opens a chat window for communicating with persons working with networked Analyzers. This command requires that your host machine be attached to a LAN. The Chat window broadcasts messages to whatever host machines have been connected to via the Analyzer Network command (under Setup in the menu).
Status Bar	Switches display of the Status Bar on or off.
Real Time Statistics	Opens the Real Time Statistics monitor dialog and displays a real-time graph of link activity.
Zoom In	Zoom in increases the size of the displayed elements.
Zoom Out	Zoom out decreases the size of the displayed elements.
Wrap	Allows the display to wrap.
FC Credits	Toggles a display for tracking Flow Control Credit update and consumption on a PCI Express link.
FC Credits Setup	Allows you to customize the display for tracking Flow Control Credits.
Compact View	Toggles compacting of the Link Training sequence to analyze CATC Trace data faster or no compacting to display more data.
Packet Level	View the current recording at the Packet Level.
Link Transaction Level	View the current recording at the Link Transaction Level.
Split Transaction Level	View the current recording at the Split Transaction Level.

Tools Menu

Configuration Space Editor	Opens the Configuration Space Editor
Memory/IO Space Editor	Opens the Memory/IO Space Editor
TC to VC Mapping	Allows Traffic Classes to be mapped to Virtual Channels for purposes of simplifying navigation (for example, Search > Go to > TLP Virtual Channel) and changing the way the CATC Trace is displayed (for example, in Split Transactions).
Timing Calculations	Starts the mode-less calculator dialog for calculating various timing and bandwidth parameters in the recording file.
Run Verification Scripts	Presents a list of verification scripts, from which you can run a verification script.

Window Menu

New Window	Opens a copy of the current CATC Trace window.
Cascade	Displays all open CATC Trace windows in an overlapping arrangement.
Tile	Displays all open CATC Trace windows as a series of strips across the display.
Arrange Icons	Arranges minimized CATC Trace windows at the bottom of the display.
Synchronize Traces	Synchronizes the Trace View windows so that a move in one window repositions the other window of the same recording.

Help Menu

Help Topics	Accesses the PE*Tracer* application's Online Help.
Register Product Online	Register at the Teledyne LeCroy website registration page.
Check for Updates	Check whether a new software version is available. If so, you can download from the Teledyne LeCroy web site. You can select to **Check for updates at application startup**
Update License	Displays a dialog box for entering updated license information.
Display License Information	Opens an information box describing the current license information.
About	Displays version information about the attached Analyzer and its Firmware and BusEngine™.

4.5 Tool Tips

Tool tips provide details about fields within the CATC Trace. To see a tool tip, position your mouse pointer over a field within the CATC Trace.



You can turn off this capability in the Display Options menu.

4.6 Keyboard Shortcuts

Keystrokes	Operation
Ctrl + N	New PE*Tracer* script
Ctrl+O	Open file
Ctrl+P	Print
Ctrl+S	Save file
Ctrl + R	Start Analyzer recording
Ctrl + T	Stop Analyzer recording
Ctrl+Home	Jump to first packet
Ctrl+End	Jump to last packet
Ctrl + G	Go to packet ...
Ctrl+F	Search forward
F3	Find next
F6	Next pane
Shift+F6	Previous pane
Ctrl+B	Search backward

4.7 Status Bar

The Status Bar is a gray bar that runs along the bottom of the application window.



From left to right:

PE*Tracer* SN:309: Analyzer Serial Number

Ready: Analyzer Status

Recording Progress Bar: The colored bar to the right of the serial number represents how much traffic has been recorded. The trigger point is indicated by the black line at the left side of the bar. In this example, the trigger occurred at the very beginning of the CATC Trace. If the trigger is set in the middle of the CATC Trace, the line is positioned in the middle of the bar. Additionally, the color of the bar is different on each side of the trigger point. For examples, see “Recording Progress Bar” on page 35. The white strip along the top edge of the color bar indicates how much traffic has been uploaded from the Analyzer buffer to the host machine.

Uploading and 20%: Indicates the Analyzer's recording status, what part of the recording process the Analyzer is now in. In this example, the Analyzer is in the upload stage and has completed 20% of the upload from the Analyzer to the host machine. See “Recording Status” on page 35 for details on other status messages.

Activity: The colored bar moves to indicate that the Analyzer is currently recording.

Search: Fwd: Indicates search direction. The direction can be toggled to **Search: Bwd** by double-clicking the search direction or by selecting **Search Direction** from the Search menu.

Recording Progress Bar

This indicator bar changes color to reflect the recording progress.

- Black vertical line is at the location of Trigger position.
- Black vertical line wiggles when Trigger Position is nearly reached.
- Field to right of Trigger Position changes color to indicate post-trigger activity.
- Upper half of progress indicator turns white when recording is complete.

Recording Status

The second segment from the left in the Status Bar indicates recording status.

During recording, this status flashes one of the following messages:

- Trigger?
- Triggered!
- Uploading

After recording stops, the message changes to

- Uploading data - x% done (where x equals the percent that has been uploaded.)

As uploading progresses, the percent increases to 100. You can abort this upload if you wish by pressing the **<escape>** button on your keyboard or

clicking in the Tool Bar.

Recording Activity

The third segment displays recorded activity. Activity is indicated in blue:

Search Direction Indicator

The fourth segment in the status bar indicates search direction. The direction can be changed by selecting Search Direction from the Search menu.

4.8 Making a PCI Express Recording

After connecting the Analyzer to the device(s), you must configure the Recording Options. Then you can test the Analyzer by creating a 16-MB snapshot recording.

To make this recording, follow these steps:

Step 1 From the **Setup** menu, select **Recording Options**.

Step 2 Select the **General** tab.

The following window displays the factory default settings in **Simple Mode**, such as Snapshot and 16-MB buffer size. Note that for PE*Tracer* Edge in Simple Mode, there is no x8 Link Width. For your first recording, you can leave these settings unchanged.

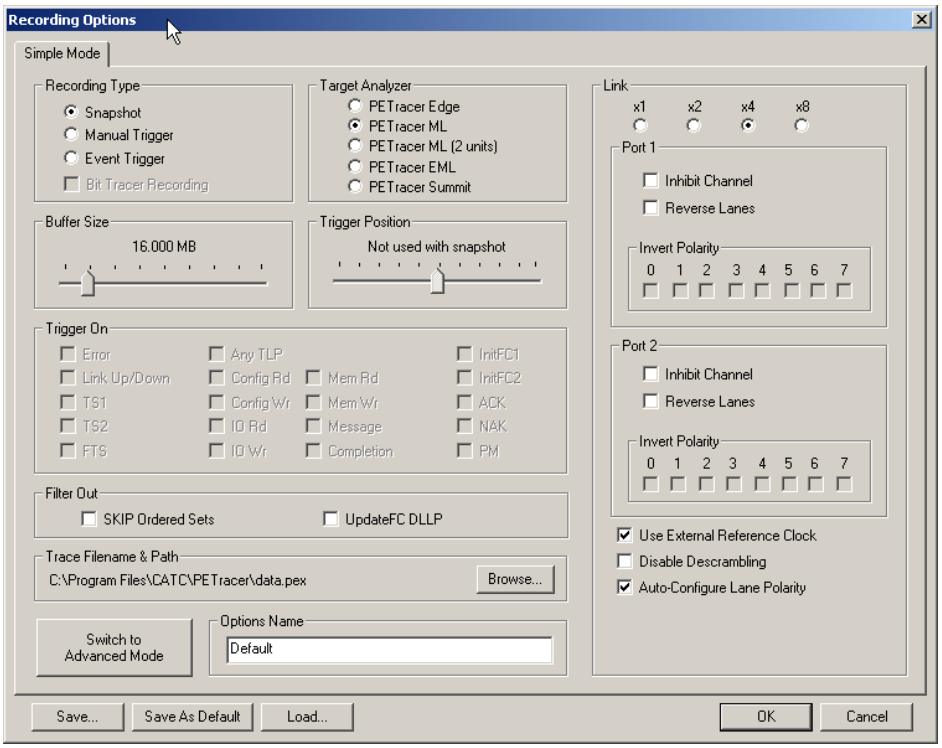

Step 3 In the **Link** section, specify the lane width of the PCI Express link to be analyzed. The rest of the settings in this section can be left at the factory defaults for most PCI Express systems.

Step 4 For multi-lane PCI Express links, the Analyzer needs to observe link training in order to record link traffic correctly. If link training (or re-training) is not easily controllable for the devices under test, the Analyzer includes the capability to force link training by disconnecting and reconnecting the PCI Express link.

Clicking the **Connect/Disconnect** button disconnects the PCI Express link for one second in both directions, then re-establishes the link.
Note: For x1 PCI Express links, it is not necessary for the Analyzer to observe link training in order to record link traffic; this step may be skipped.

Step 5 Click **OK** at the bottom of the Recording Options dialog box to apply the Analyzer recording settings specified.

Step 6 Click the **Record** button.

Stopping a Recording

You can stop the recording process at any time by pressing the **Stop** button . This causes the Analyzer to stop the recording and upload the CATC Trace to the host machine. If you press the **Stop** button again, the Analyzer temporarily halts the upload process and opens the following dialog box:

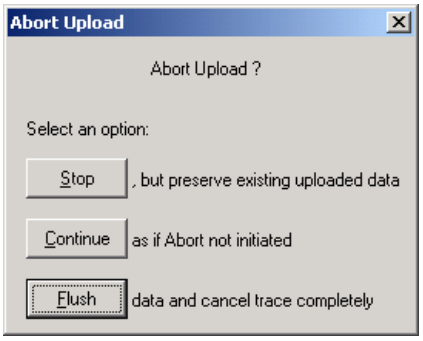

This dialog presents options for stopping, continuing, or aborting the upload:

- **Stop**: Aborts further CATC Trace upload and displays whatever CATC Trace data that has already been uploaded.
- **Continue**: Resumes the upload. This command tells the Analyzer to finish uploading whatever CATC Trace data is still in its buffer.
- **Flush**: Flushes the CATC Trace without saving or displaying it.

If you allow the traffic data to be uploaded, it is automatically saved on the host machine's hard drive as a file named **data.pex** or the name you assign as the default filename in the recording options.

Saving a Recording

Step 1 To save a current recording for future reference, select **Save As** from the File menu.

Step 2 Give the recording a unique name, then save it to the appropriate directory.

4.9 Recording Multi-Segmented CATC Traces

If **Save as Multisegment trace** is enabled, PE*Tracer* divides the CATC Trace as it records it into segments and stores them on the host's hard drive.

This option is useful for very large recordings and for host machines with limited memory. In the latter case, multi-segmenting gives a host machine with limited memory a way to open recordings that are otherwise too large to open.

The only downside to multi-segmenting is that limits the scope of reports such as Traffic Summary, Bus Utilization, and Error Summary to each of the segments. You cannot perform summary statistics on the full recording.

The default segment size is 10 MB. Before attempting large recordings, it is recommended that you play with this number to see what value best suits your needs.

How to Create a Multisegment Recording

To create a Multisegment recording:

Step 1 Select **Setup > Recording Options** to open the Recording Options dialog at the General tab. Click **Switch to Advanced Mode**.

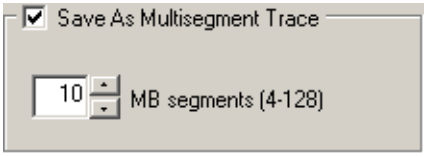

Step 2 Check the box marked **Save as Multisegment trace**.

Step 3 In the box marked MB Segments, enter a value of 4 to 128 MB.

What Gets Created

Multisegmenting produces an index file and segmented CATC Trace files. The default name of the index file is **data.pem**.

The index file and the segmented CATC Trace files are stored in a directory named after the index file. The directory is named **data_pem_files**. Below this directory additional, sequentially numbered sub-directories (up to 100,000) hold the segmented CATC Trace files. These sub-directories bear simple numerical names: 00000 to 00999. Each of these subdirectories can hold up to 100 sequentially numbered segment files. Collectively, the entire directory structure can hold up to 10 million files.

Example

If you create a 1010 MB recording using 10 MB segments, the following files and sub-directories are created:

`data.pem` (This is the index file.)

`data_pem_files\00000\segment_00000.pex`

`data_pem_files\00000\segment_00001.pex`

`...`

`data_pem_files\00000\segment_00099.pex`

`data_pem_files\00001\segment_00100.pex`

`data_pem_files\00001\segment_00101.pex`

Note: An additional index file is created called **segments.col**. This is an internal system file that users should not modify.

4.10 PE*Tracer* Files

The PE*Tracer* software creates and uses different kinds of files:

- **Trace Files**: Recorded traffic
- **Recording Options Files**: Configuration file that contains the various options selected in the Recording Options dialog box to configure the recording
- **Display Options Files**: Configuration file that contains the options selected in the Display Options dialog box to configure how traffic is displayed

CATC Trace Files

PE*Tracer* records PCI Express traffic into a CATC Trace file with the default name **data.pex** or any other that you specified in the Recording Options. This file is overwritten with new data each time PCI Express traffic is recorded.

When Multisegment CATC Traces are created, a special index file is also created called **<filename>.pem**. This index file provides a high level view of the CATC Trace segments created in the recording session.

If you want to save a CATC Trace, use the **File > Save As** function. This option allows you to save the current CATC Trace to a unique file name, thereby ensuring that it is not overwritten. This option also allows you to save a range of packets in a CATC Trace file.

You can pre-define the name of the recorded CATC Trace file using the CATC Trace Filename and Path option in Recording Options.

Recording Options Files

Recording Options files are created when you set recording options. These files use the **.rec** extension and contain recording option information.

Display Options Files

Display Options files are created when you set display options. These files use the **.opt** extension and contain the display options information.

4.11 Opening CATC Trace Files

To open an existing CATC Trace file, click **File > Open** or .

If the file was made in a previous version of PE*Tracer*, the application presents the Convert dialog box:

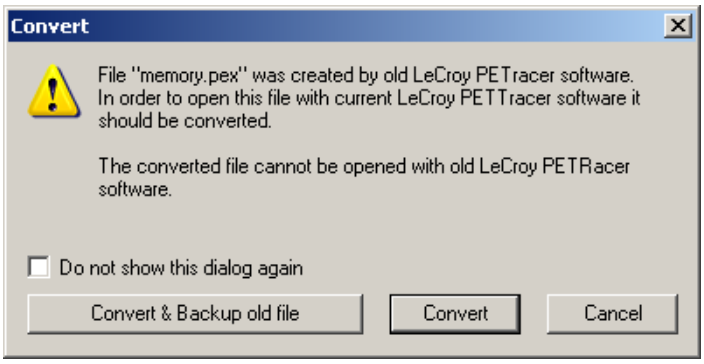
Convert
File "memory.pex" was created by old LeCroy PETracer software.
In order to open this file with current LeCroy PETTracer software it should be converted.
The converted file cannot be opened with old LeCroy PETRacer software.
Do not show this dialog again
Convert & Backup old file
Convert
Cancel

You must convert CATC Trace files made in previous versions of PE*Tracer* for them to open in PE*Tracer* version 6.5x or higher. The converted file has all the information that was in the original file.

You can:

- **Convert & Backup old file**: Convert the file, open it in PE*Tracer* version 6.5x or higher, and save it with the original name. Save the original file with the same name plus the extension **.bak**.
- **Convert**: Convert the file, open it in PE*Tracer* version 6.5x or higher, and save it with the original name.

Note: After you convert a CATC Trace file, you cannot open the converted file in a previous PE*Tracer* version.

4.12 Saving CATC Trace Files

Using the Save As Function

When you record a CATC Trace file, the Analyzer software provides a pre-defined name to the CATC Trace file (**data.pex** or any other that you specified in the Recording Options). If you do consecutive recordings, each time the previous recording is overwritten. If you see a recording you want to analyze later, you need to give a unique name to the CATC Trace file, so it is not overwritten with the next recording.

Also, when you analyze a recorded CATC Trace file, you might be interested in preserving just a part of the PCI Express traffic that was recorded. If you save a portion of a CATC Trace file, it can get significantly smaller, allowing you to attach it to an e-mail.

To save a portion of a CATC Trace file or the whole file to a unique name, select **Save As** from the File menu.

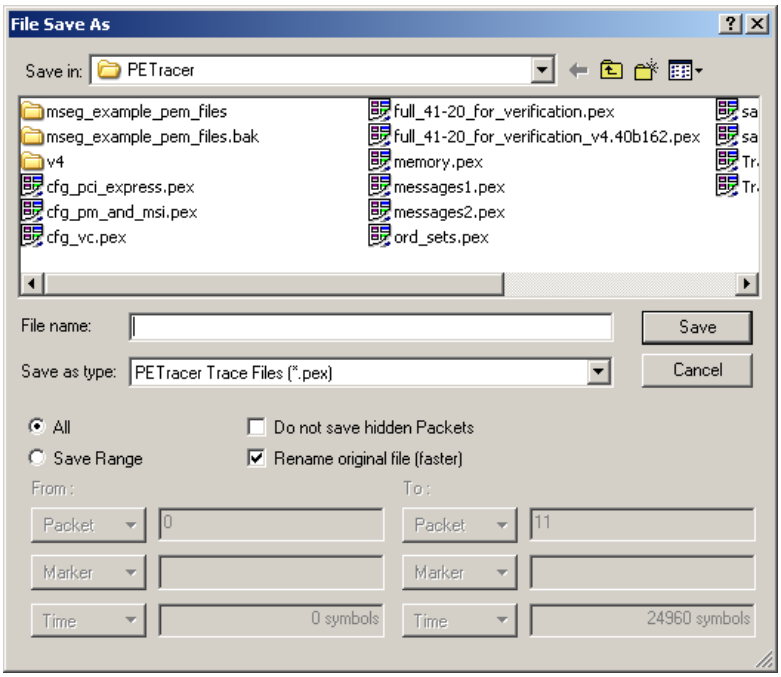

If you want to give a unique name to the CATC Trace file, select the **All** option and keep **Rename original file** checked. This is the default setting for the dialog.

Saving a Portion of a CATC Trace

If you want to save a portion of a CATC Trace file, select **Save packet range**. Enter starting and ending packet numbers in the **From Packet** and **To Packet** fields. By default, it has the numbers of the first and the last packets in the file. The software is going to save all the packets in specified range to the new file, unless you have **Do not save hidden packets** checked. In this case it is going to save all packets in the range, EXCLUDING the currently hidden packets.

4.13 Exporting a CATC Trace File

By default, PE*Tracer* saves CATC Trace files in the **.pex** format. However, you can export a CATC Trace to a file in any of the following other formats:

- Text
- Comma Separated Value (CSV)
- Generator file format

Exporting to Generator file format is a simple way to create a script file from your CATC Trace.

To export a CATC Trace file, select **File > Export**:

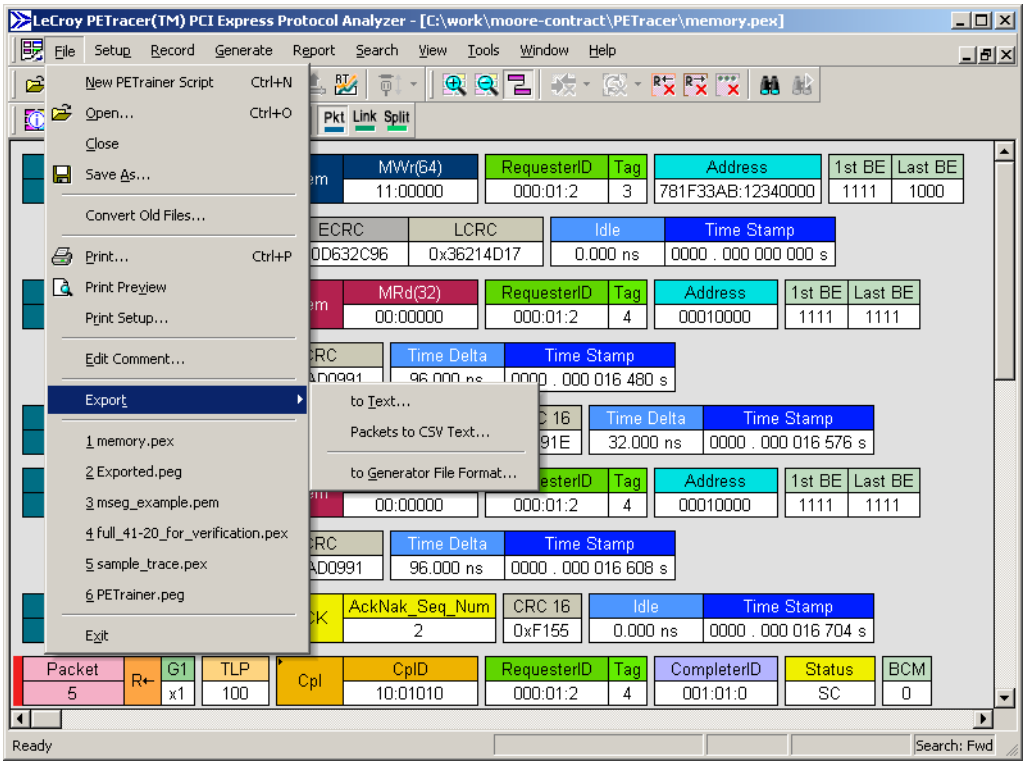
LeCroy PETracer(TM) PCI Express Protocol Analyzer - [C:\work\moore-contract\PETracer\memory.pex]
File Setup Record Generate Report Search View Tools Window Help
New PETrainer Script Ctrl+N
Open... Ctrl+O
Close
Save As...
Convert Old Files...
Print... Ctrl+P
Print Preview
Print Setup...
Edit Comment...
Export
1 memory.pex
2 Exported.peg
3 mseg_example.pem
4 full_41-20_for_verification.pex
5 sample_trace.pex
6 PETrainer.peg
Exit
to Text...
Packets to CSV Text...
to Generator File Format...
Pkt Link Split
MWr(64) RequesterID Tag Address 1st BE Last BE
11:00000 000:01:2 3 781F33AB:12340000 1111 1000
ECRC LCRC Idle Time Stamp
0D632C96 0x36214D17 0.000 ns 0000 . 000 000 000 s
MRd(32) RequesterID Tag Address 1st BE Last BE
00:00000 000:01:2 4 00010000 1111 1111
Time Delta Time Stamp
0000 . 000 016 480 s
Time Delta Time Stamp
32.000 ns 0000 . 000 016 576 s
00:00000 000:01:2 4 00010000 1111 1111
Time Delta Time Stamp
96.000 ns 0000 . 000 016 608 s
AckNak_Seq_Num CRC 16 Idle Time Stamp
2 0xF155 0.000 ns 0000 . 000 016 704 s
Packet R G1 TLP Cpl CplD RequesterID Tag CompleterID Status BCM
5 x1 100 10:01010 000:01:2 4 001:01:0 SC 0
Ready
Search: Fwd

4.14 Printing Data Files

To print all or part of the open CATC Trace:

Step 1 Select **File > Print** from the menu or

click the **Printer** button on the toolbar.

The Print Packets dialog opens:

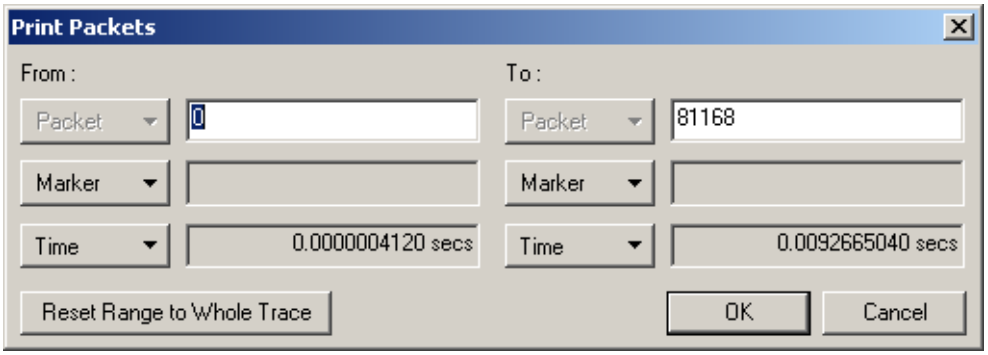

Step 2 To select a range of packets, enter values in the **From packet #** and **To packet #** fields and click **Print**.

Step 3 To print an entire file, leave the From and To fields empty and click **Print**.

The specified traffic information is printed as currently displayed, in color or gray scale as supported by your printer. Any CATC Trace File comments you entered are printed following the current document name at the top of each page.

Note: CATC Trace File comments can be created by using **Edit Comment** on the File menu.

4.15 Analyzer Chat Window

PE*Tracer* has a Chat window that allows you to communicate with users on remote host machines. For Chat to work, two conditions must be met:

1. The host machines must have PE*Tracer* software installed and running.

2. The host machines must be listed in each other's Network Browse list. This means that your host machine must have the remote host machine listed in its Network Browse window and the remote host machine must have your host machine listed in its Network Browse window.

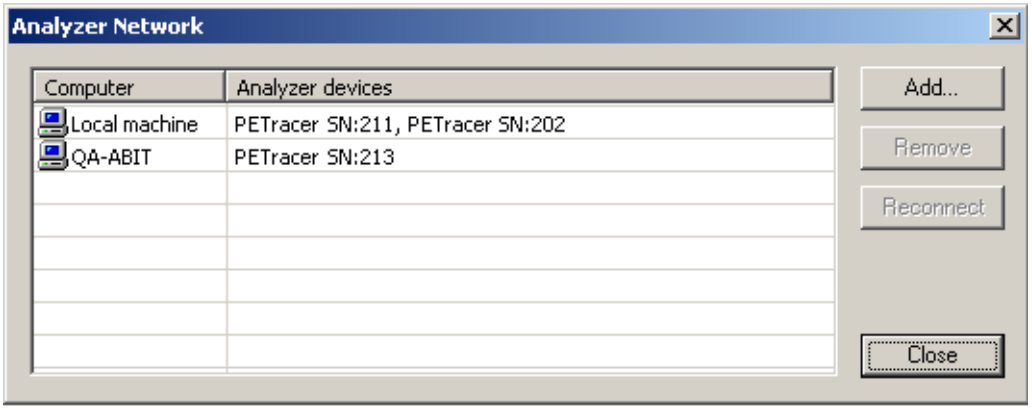

If the above conditions are met, a Chat session is initiated by running the command: **View > Analyzer Network Chat Bar**. The following dialog opens.

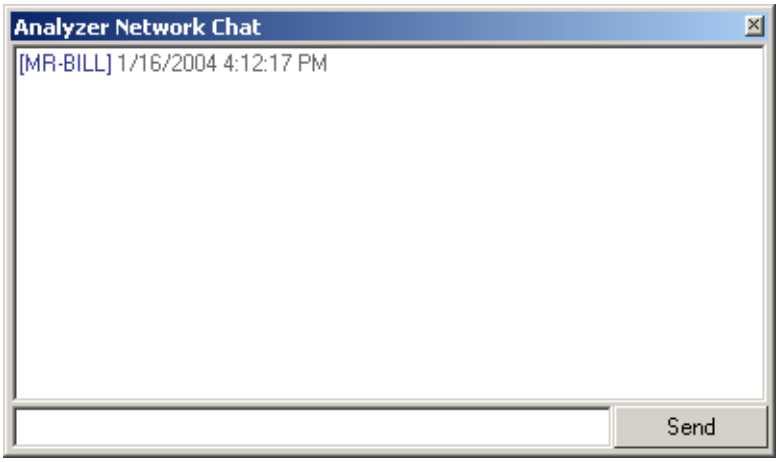

Enter some text, then press **Send**. The message is then broadcast to all the host machines listed in your network browse window. If a target host machine also lists your host machine in its Network Browse window, then it can receive your message. When the message arrives, the Chat window automatically opens.

Chapter 5: Reading CATC Traces

5.1 Viewing PCI Express CATC Traces

PE*Tracer*™ displays traffic as labeled, color-coded, and time-stamped rows.

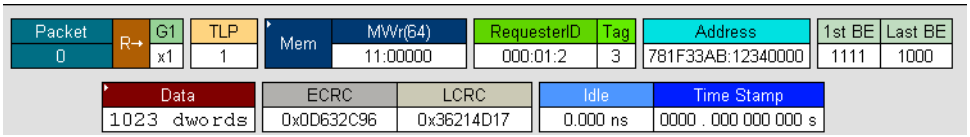

Tool tips provide details about fields within the CATC Trace. Hold the mouse cursor over a field to see a tool tip.

Additional information is available from pop-up menus. For example, if you click the left mouse button on the first cell in a packet a menu appears with an option to view Raw 10b Codes.

5.2 Expand and Collapse Data Fields

Packet data fields are displayed in a short format by default.

You can view a data field's long format by performing one of the following three actions:

- Click the **small triangle** in the left corner.
- Double-click anywhere in the data field.
- Click once in the Data Field with the left mouse button, then choose **Expand Data** from the pop-up menu.

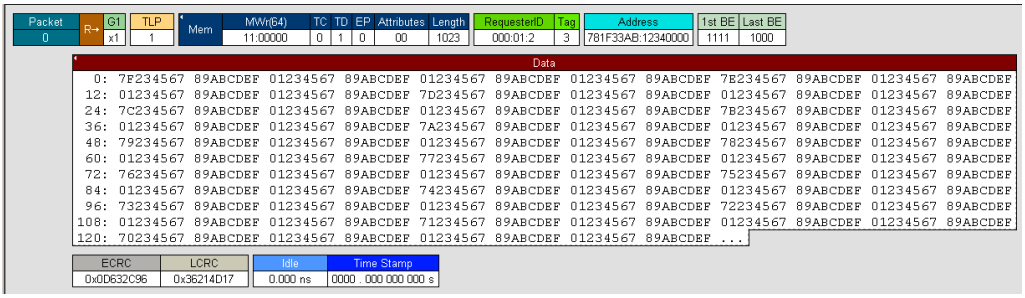

A repeat of any above methods causes the display to return to a Short Data format.

5.3 Resizing Cells

Data cells can be resized by pointing the mouse pointer on the edge of a data cell, depressing and holding the left mouse button, and then repositioning the mouse pointer while keeping the mouse button depressed.

5.4 Pop-up Menus

The Analyzer software makes extensive use of pop-up menus. In some instances, pop-up menus provide the only means of accessing dialog boxes that contain detailed information about cells within the CATC Trace, for example, the Show Configuration Space dialog box.

To see a pop-up menu, left-click or right-click a **cell** within the CATC Trace. Right-click or left-click behavior depends on the Display Options setting. For default left-click, the right-click menu is not cell-dependent. For other left-click behavior, the type of menu that opens varies depending on the type of cell that is selected. Take some time to explore CATC Traces and the various pop-up menus.

5.5 View Data Block

To view the raw bits that make up the data in a data field, left-click a data field, then click or select **View Data Block** from the pop-up menu to display the Data Block window.

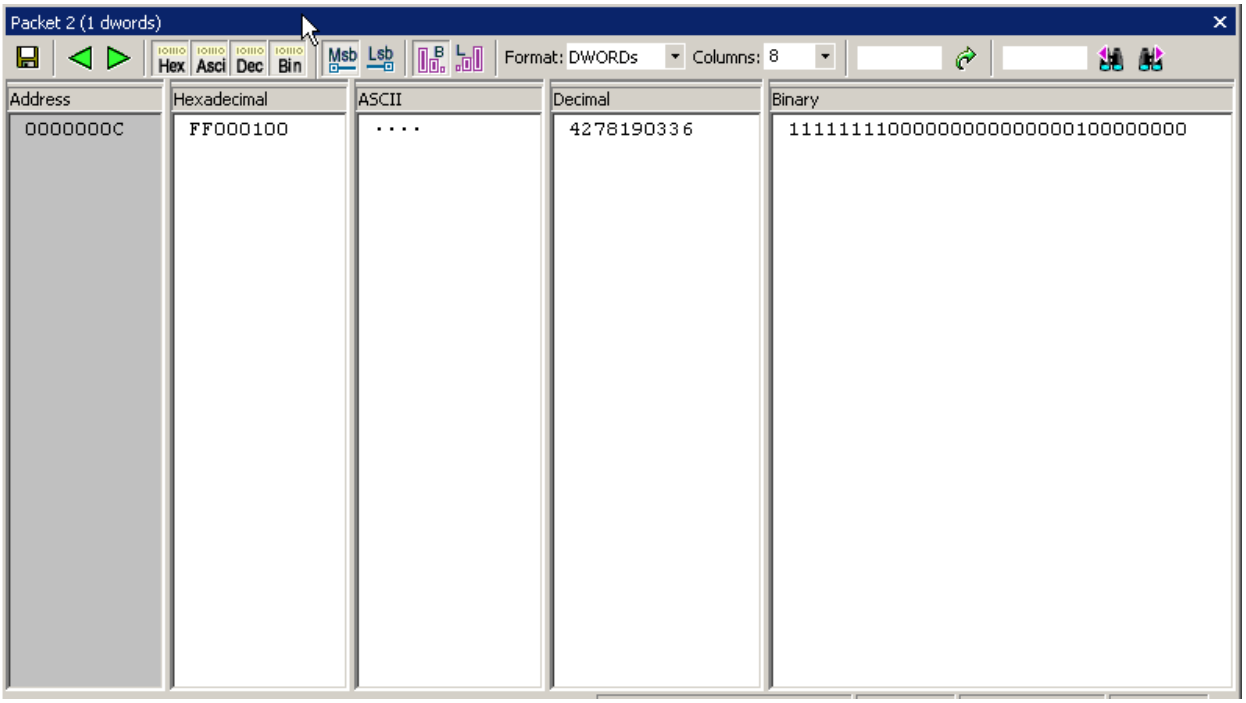

You can display data in Hexidecimal, ASCII, Decimal, or Binary formats.

Bit Order is Most Significant Bit or Least Significant Bit.

You can display data in Big Endian or Little Endian.

Format lets you display data as BYTEs, WORDs, or DWORDs.

Columns lets you select the number of columns.

You can enter hexidecimal offset values.

You can go to or search Previous or Next.

5.6 Show Raw 10b Codes

You can view the raw bits that make up the data field by left-clicking the field and selecting **View Data Block** from the pop-up menu.

To view Raw 10b Codes:

Step 1 Left-click the **first cell** in a packet.

Step 2 Select **Show Raw 10b Codes** from the pop-up menu to display the Raw 10b Codes window.

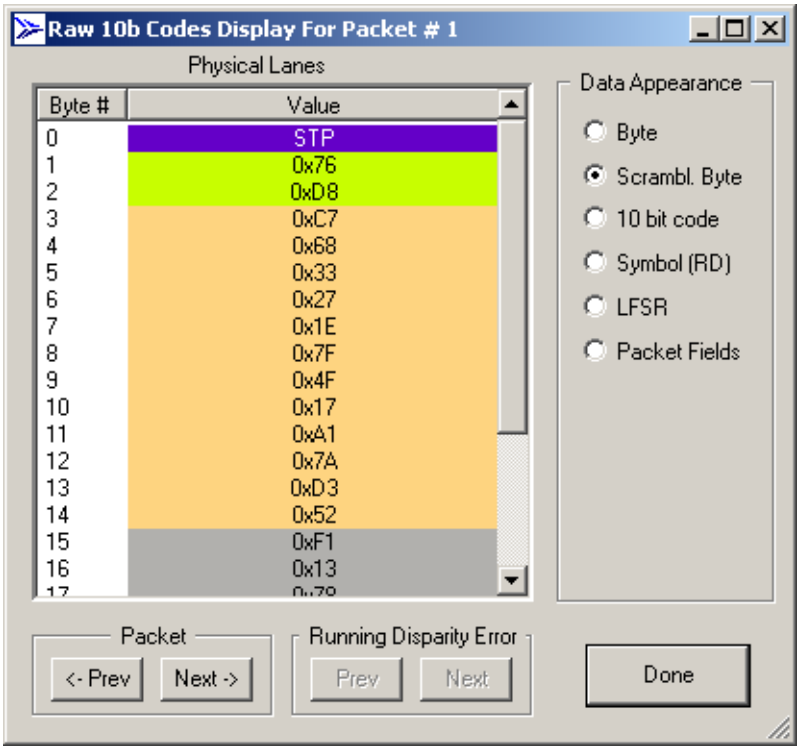

Step 3 To change the format of the data, use the options along the right side of the dialog.

Step 4 To navigate the CATC Trace, use the **Prev** and **Next** buttons.

5.7 Show Header Fields

You can view details about header fields by opening the Show Header Fields dialog box.

Step 1 Click a **header.** A pop-up menu appears.

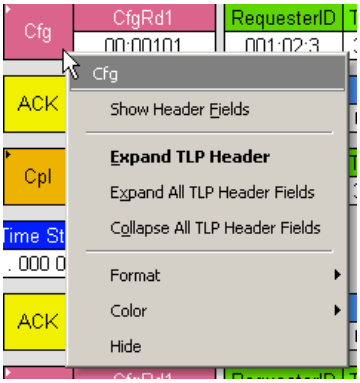

Step 2 Select **Show Header Fields**. The following dialog box opens.

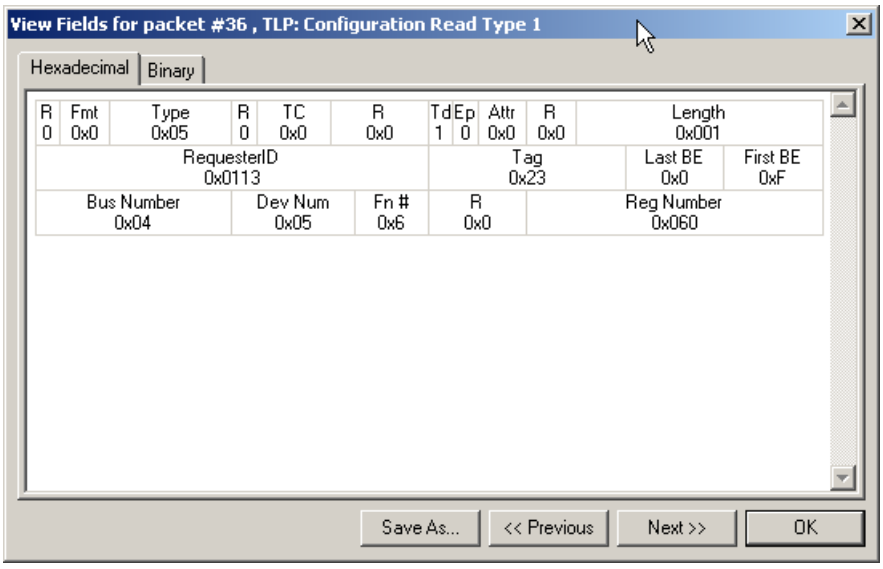

Step 3 Use the **Prev** and **Next** buttons to navigate to other headers.

5.8 Packet Cell Popup Menus

The Packet cell has a left-click pop-up menu that includes the Show Raw 10b Codes command:

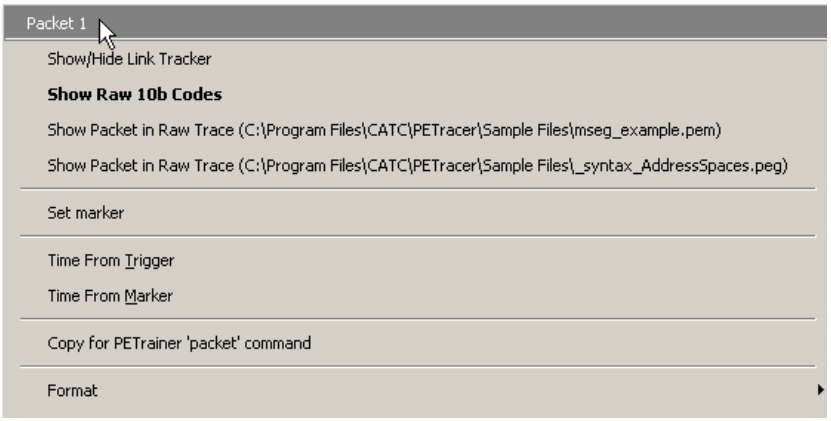

The right-click pop-up menu from Packet cell is:

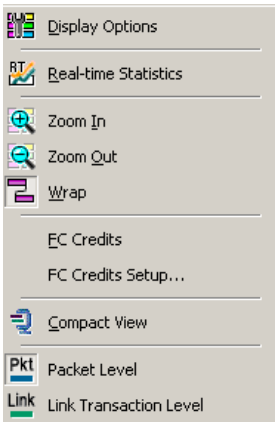

Packet Header R-> Cell Popup Menu

The Packet Header R-> cell has a pop-up menu with the Swap Upstream/Downstream command, which changes the directionality of the packets in the CATC Trace.

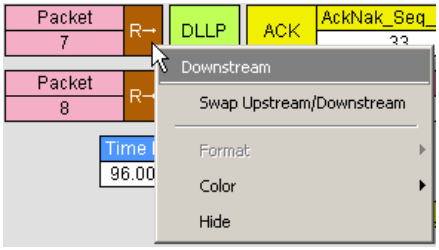

Packet Header G1 Cell Popup Menu

The Packet Header G1 cell has a pop-up menu with the Show Header Fields command (see “Show Header Fields” on page 50), which exposes a detailed view of the selected Header field.

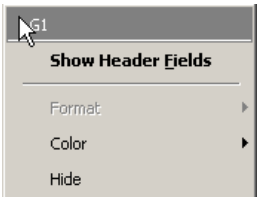

5.9 Set Marker

A marker is a unique label for a packet that allows you to go to that packet and also serves as a **comment string** for a specific packet. When you select a marker, the identified packet appears at the top of the screen. Packets that have been **marked** have a red bar on the left edge.

To set a marker, perform the following steps:

Step 1 Left-click the **Packet** field of the packet you want to mark.

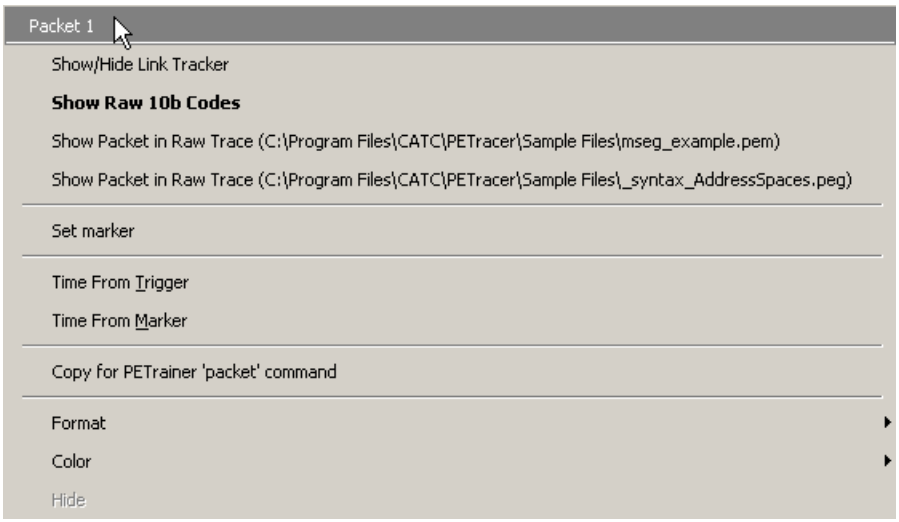

Step 2 Click **Set Marker**.

Step 3 When the Edit Marker for Packet # pop-up appears, enter a unique identifier for the packet in the Comment field.

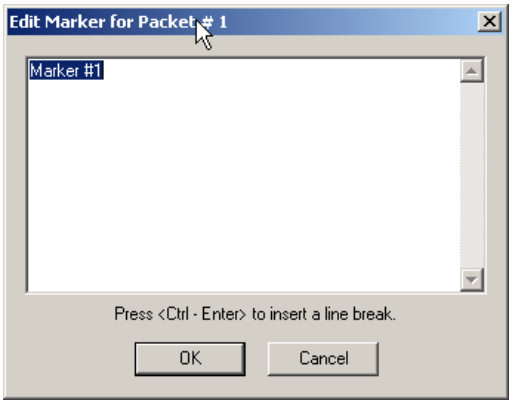

Later, you can go directly to this packet using the Go To Marker operation in the Search Menu.

5.10 Edit or Clear Marker

To change a markers identifier, or clear (delete) the marker:

Step 1 Left-click the **Packet** field of the desired packet to display a pop-up menu:

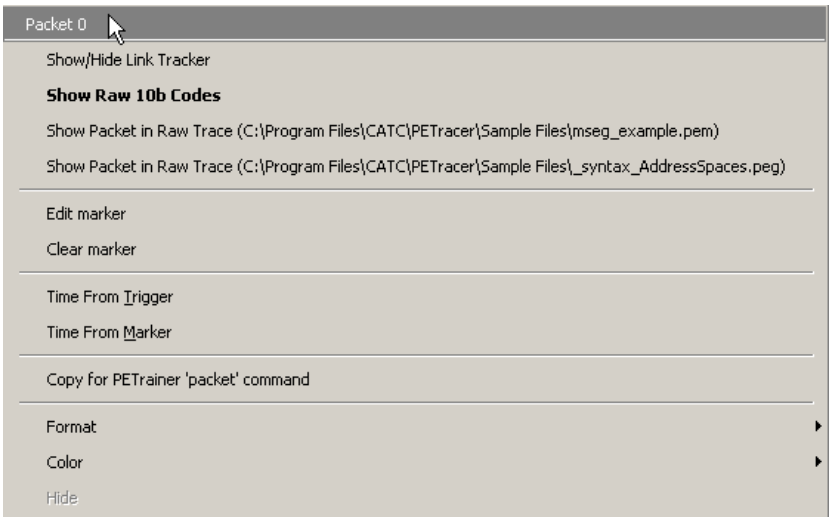

Step 2 Choose **Edit Marker** and enter a new identifier into the Edit Marker for Packer # pop-up, or
Choose **Clear Marker**. When you choose Clear Marker, the marker is removed and the red line disappears.

5.11 Decoding Traffic

The PE*Tracer* software has three decode levels:

Packet

Packet level decode Pkt includes all TLP packets, DLLP packets, and all ordered sets.

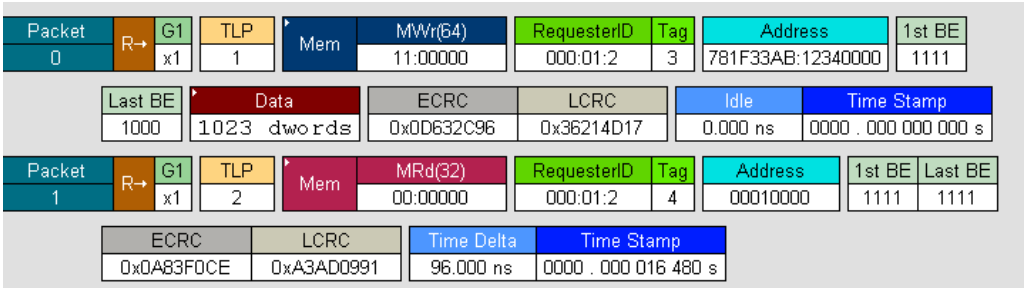

Link

Link level decode Link is composed of TLP packets matched with a corresponding ACK or NAK coming from the opposite direction.

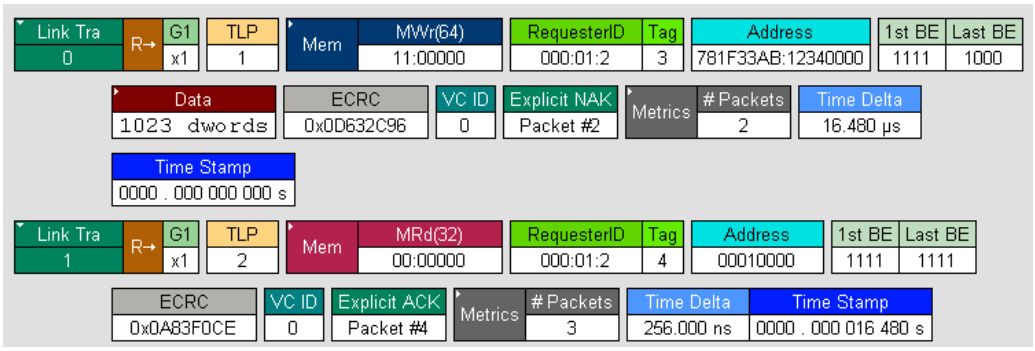

Split

Split level decode Split is composed of two Link transactions, the Request TLP and the Completion TLP from the other direction.

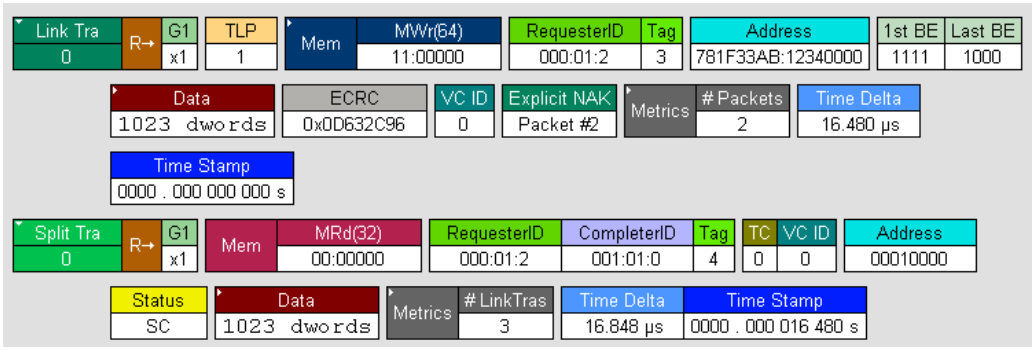

Chapter 6: Searching CATC Traces

This chapter describes how to search for CATC Trace events.

6.1 CATC Trace Search Overview

Several search commands let you navigate a CATC Trace view to search for key events, such as errors and triggers.

To view the search options, click **Search** in the Menu bar.

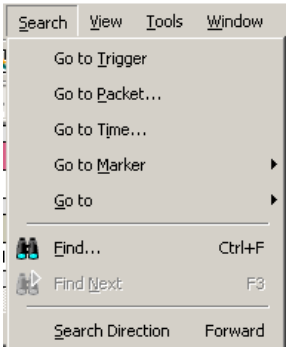

6.2 Go to Trigger

To position a trigger packet at the top of the screen:

- Select **Search > Go to Trigger**.

6.3 Go to Packet

To position a packet at the top of the screen:

Step 1 Select **Go to Packet** from the Search menu. A pop-up menu prompts you for the packet number, marker, or time.

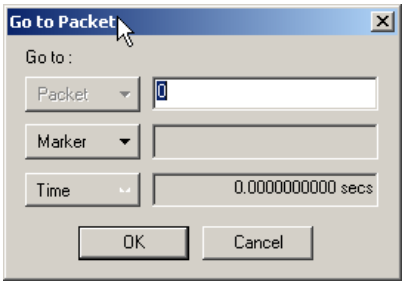

Step 2 Enter the packet number, marker, or time.

Step 3 Click **OK**.

6.4 Go to Time

To position a specific time at the top of the screen:

Step 1 Select **Go to Time** from the Search menu. A pop-up menu prompts you for the time in Seconds or Clocks.

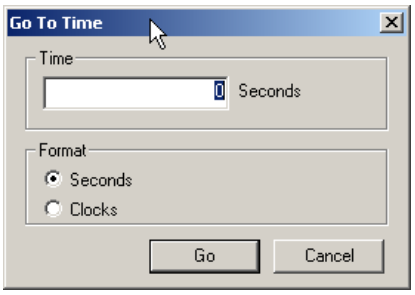

Step 2 Enter the time and format (seconds or clocks).

Step 3 Click **Go**.

6.5 Go to Marker

Use this operation to go directly to a specific packet that has been marked with a unique marker by the Set Marker operation.

To go to a marker:

1. Select **Go To Marker** from the Search Menu.
2. Select the marker you want from the fly-out menu. Alternatively, select **All Markers** to display the All Markers window, then select a marker and click **Goto**.

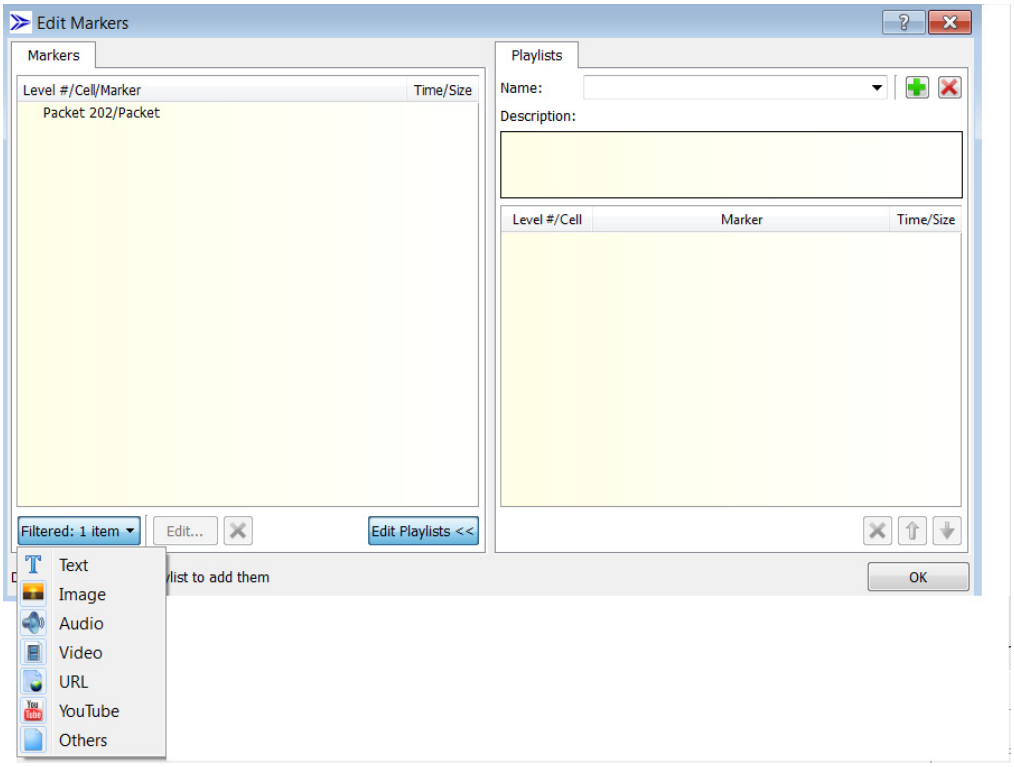

The packet you want appears at the top of the screen. Marked packets have a red bar on the left edge.

Markers

This section explains the features of Markers. A marker is an entity that flags a physical or logical item of interest within a trace file. A marker contains one or more attachments. You can add a marker to a trace file or unmark a trace file by removing the marker.

Markers are represented graphically in a different way in the application.You can not only add markers to the packets but it is granular enabling you to also add markers to individual cells.

Markers Overview

This functionality provides the user an easy way to navigate through attachments which is a discrete piece of information or data added to a marker, for example, a text description or file, an attachment of a trace file by a predefined order, video or audio files, URL links or any other files.

Functionality of Markers

The markers functionality allows you to add markers to:

- Whole packets or frames
- Specific Cells
- Specific values within a cell: Bytes, words, etc.

You can add attachments to markers.

Right-click on any cell of a packet and select **Set Marker** from the menu as shown below**.**

select an option.

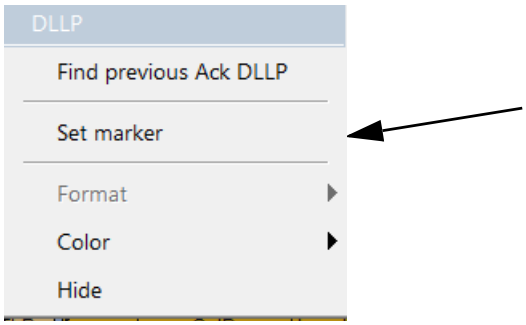

The Create Marker dialog displays (see Figure on page 61).

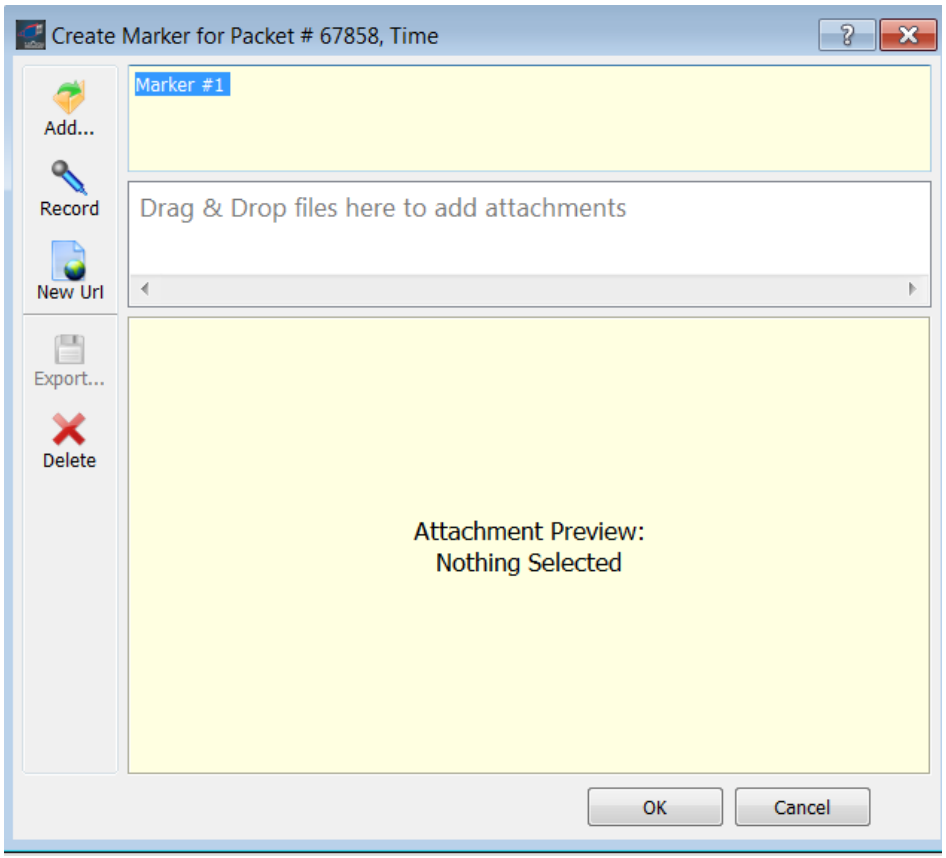

Create Marker for Packet Dialog

As shown above you can:

Add...	Add icon. Click on this icon to add any file. See "Adding an Attachment" on page 62.	Export...	Export icon. Click on this icon to export an attachment.
Record	Record icon. Click on this icon to record audio. See "Recording an Audio File" on page 63.	Delete	Delete icon. Click on this icon to delete an attachment
New Url	New URL icon. Click on this icon to add any URL.		

Attaching Markers

You can attach a discrete piece of information/data to a marker, for example, a text description or file, an attachment of a trace file by a predefined order, video or audio files, URL links or any other files. You can also remove an attachment from a Marker.

Adding an Attachment

Perform the following steps to add an attachment to a marker:

1. Right-click on any cell in the trace and select **Set Marker.**

   The Create Marker window displays.
2. Click on the **Add** icon.

   The **Add File to the Marker** dialog displays.
3. Go to the file and select it to add it to the marker as an attachment.
4. Click **Open**.

   The file will appear in the Create Marker for Transfer... dialog as shown below. The Marker # appears in the top panel, the icons are displayed in the second panel and you can click on the icon on the third panel to view the file you are about to attach.
5. Click **OK** to add the attachments.

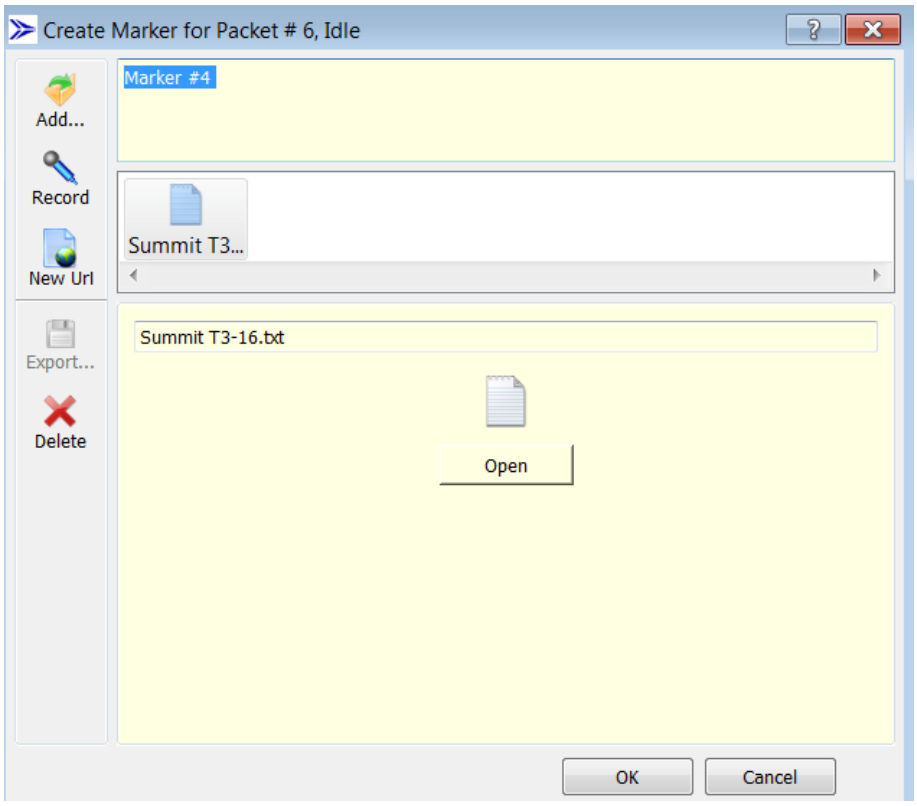

Create Marker for Transfer Dialog

Recording an Audio File

The audio quality supports voice attachment and is not designed for high-quality audio Playback of audio content is not limited and depends on the formats supported by the installed playback engine.

Click the record icon and speak into the microphone to record an audio file.

Note: This functionality is disabled if a microphone is not installed.

Video Files supported

The user can attach video clips to the trace file (“add to the marker”). The playback of the Video clips is limited to the formats that are supported by the video codecs installed in the system.

Attachment Types and Visualization

The markers are represented graphically by a yellow triangle at the top right of the marked item and a red vertical bar at the left-most cell of a packet as shown below.

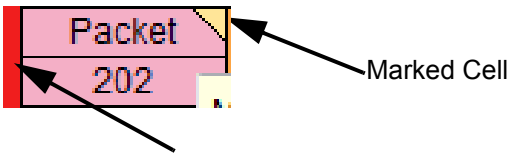

A marker may comprise any number of attachments of any types.

Embedded Attachments to a Marker

Embedded files are attached to the item marked and transported with the trace. You can embed the following types of files to a marker:

- Audio Files
- Video Files
- Image Files
- YouTube Files
- Web Pages
- Text Attachments
- Other Attachments

Attachments are embedded in the marker and saved in the trace file. Once attachments are placed in a marker, the marker can then be presented to a user in a story structured form. On opening the marker the window resembles the marker editing dialog.

Note: The use of Audio and Video markers is limited to the file types supported on a user's system. CATC Walk has been tested with .mp3 and .wmv files, which are supported by Windows as installed. If additional codecs are installed, they should also work, but it is the user's responsibility to choose formats that will work for whomever they intend to exchange CATC trace files (no different than email attachments in this regard). Because of this dependency on installed codecs, there are situations where bugs in the codecs supplied by Microsoft or third-party applications can prevent proper operation of the Teledyne LeCroy PETracer application. See the Teledyne LeCroy PETracer Application

Read-Me file for more information if you have problems with application crashes, etc.

Viewing Attachments of a Marker

If you hover over the marked cell (yellow triangle at the top right of the marked item), refer to "Attachment Types and Visualization" on page 64, a window pops up displaying the contents of the marked cell as shown below.

To view an attachment you can click on any of the icons in the attachment bar and or you can double-click on the icon itself to open the attachment.

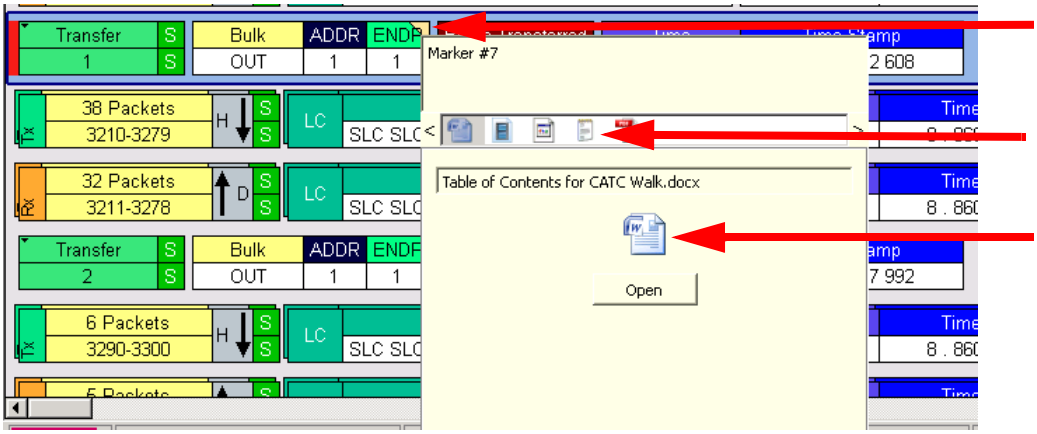

Pop-up Displaying Marker Contents

Text

The text attachment is displayed in the icon bar and in the main pop-up window. Text attachments are always shown at the top. The attachment file name is displayed in the field as shown below.

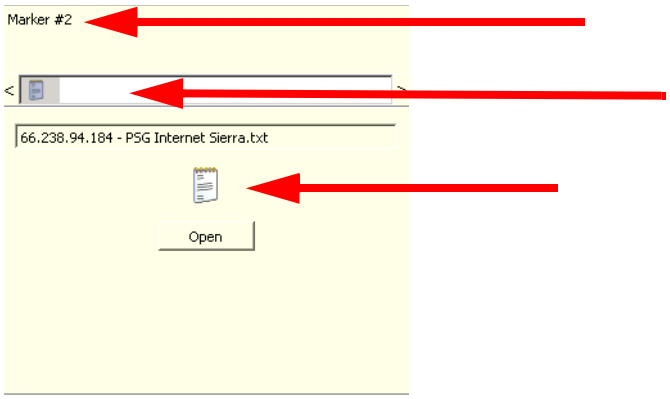

Text Attachment Pop-up Window

If there is no attachment, **No Attachments** displays in the status bar at the bottom.

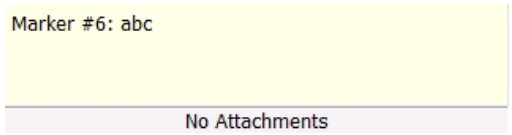

No Attachments Pop-up Window

If there are attachments, the status bar is hidden. You can move the cursor to an attachment icon in the list view and a preview of the attachment starts.

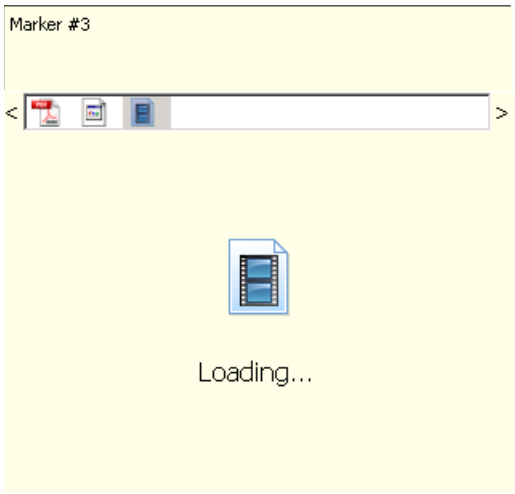

Preview Attachments Pop-up Window

Audio

Audio snippets that are recorded and attached to certain point of interest in a trace can be played. The basic Play, Start, Stop, Pause buttons are displayed to listen to the audio file.

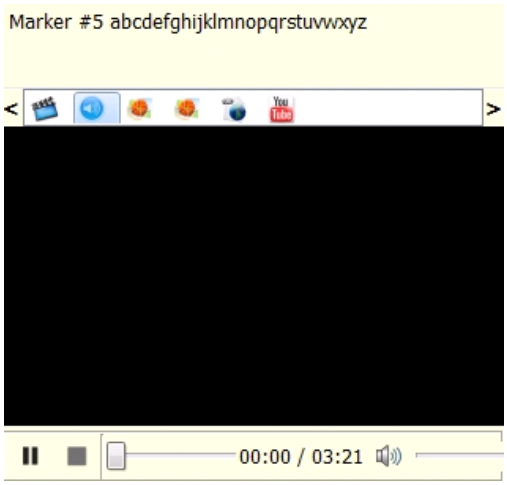

Video

Video clips that are recorded and attached to certain point of interest in a trace can be played. The video is embedded in the tooltip with simple playback controls.

File Attachment

You can attach any kind of file, including images, PDFs, documents, media files, etc.

URL Link

You can specify a URL that links to a web page (i.e., YouTube), a network location, or a local file-system location.

Web Link

Due to the small size, the web page is not embedded in the callout. You can use the **Open** button to open the web link in the default web browser.

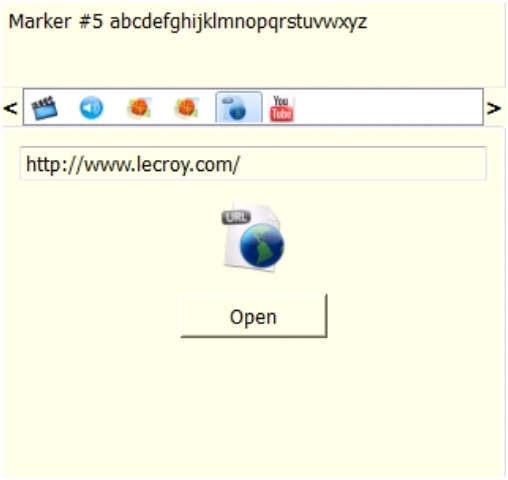

YouTube Video

YouTube's video player is embedded for YouTube Video playback.

Images

The image is embedded in the trace.

Other Attachments

Click the **Open** button to open the attachment file with the system's default application for that file type.

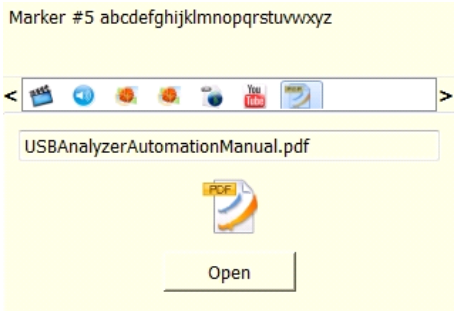

Edit Marker

To edit a marker, right-click on the marked item and select **Edit marker** from the menu. The Edit Marker dialog displays. This Edit Marker window can be used to edit one marker at a time.

You can do the following in the Edit Marker dialog:

- Edit text attachment.
- Record audio attachment.
- Add URL link attachment

- Add a file attachment. Click on **File** and click the **Open** button or drag and drop the file.
- Preview audio/video/image/URL/YouTube attachment or open other files with system default application.
- Save an attachment to a file.
- Remove attachment.

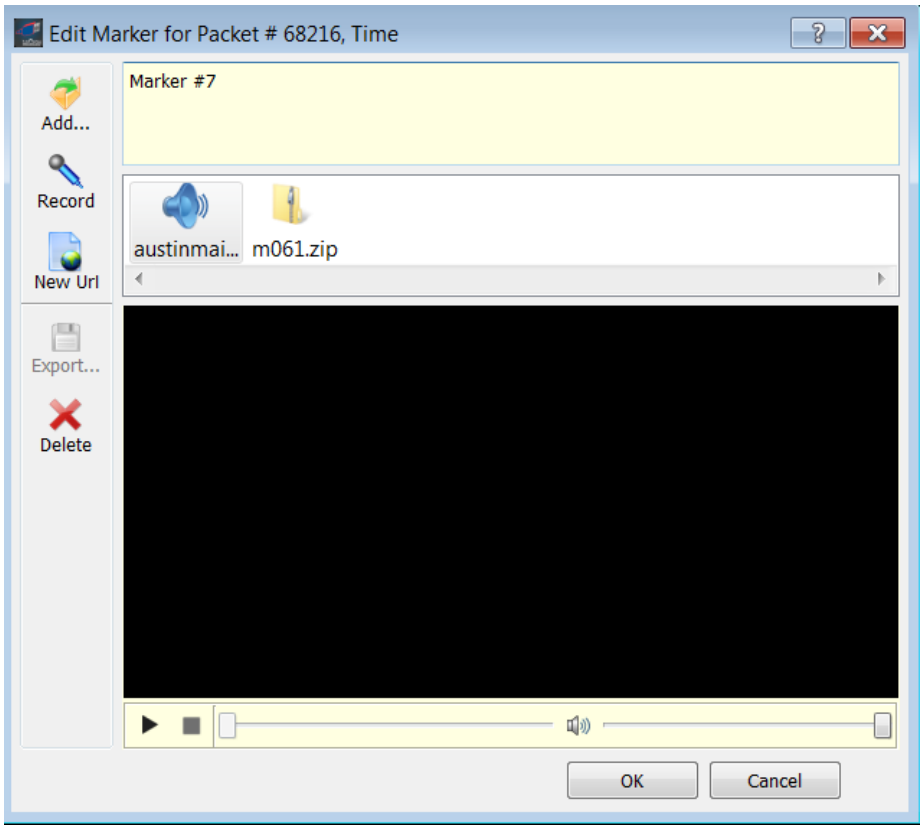

EDIT Marker for Packet Dialog

All Markers Window

Select **Search > Go to Marker > All Markers** or press **Ctrl + M** to display a list of all the markers in the file. The window uses a tree structure to show packets, fields and markers. The features of the Markers window are:

- All Markers are displayed
- All attachments within the marker are displayed
- You can collapse or expand the item marked to view the attachments
- The Time and size of audio and video files are displayed
- You can edit Playlists from this window

- You can edit or remove a marker from this location
- You can filter attachments within the marker

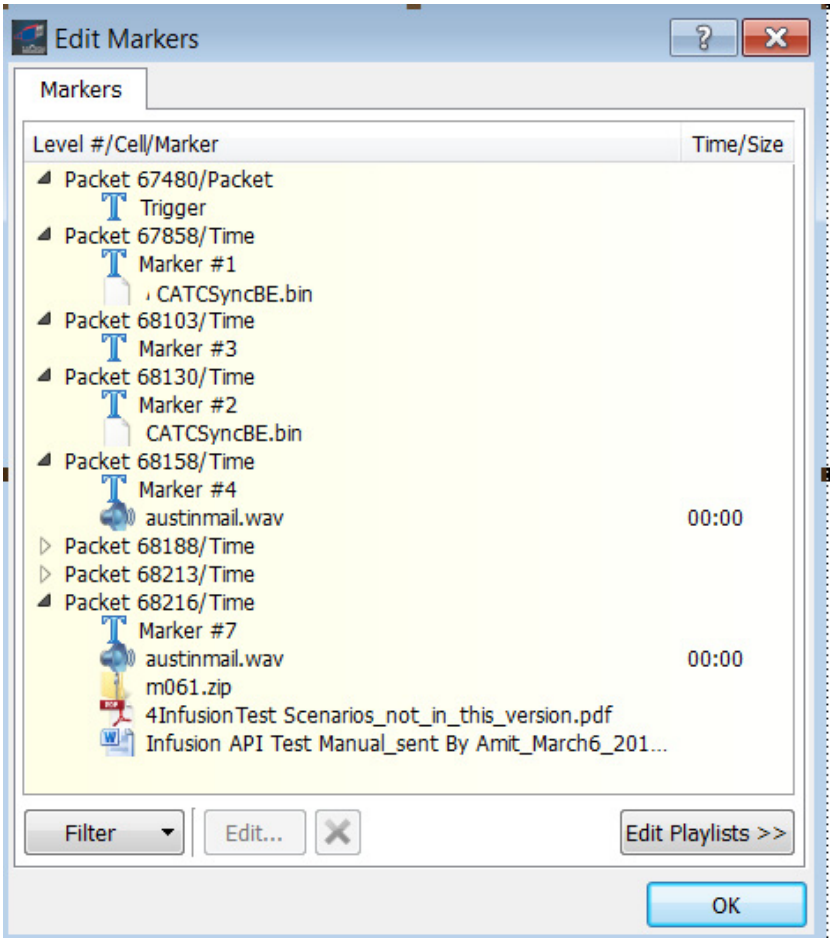

Edit Marker Dialog

You can filter to show or hide text, image, audio, video, URL, YouTube videos and other files.

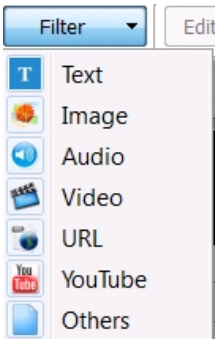

Filter Dialog

6.6 CATC Walk Playlist

This feature allows users to configure sequences of attachments into playlists. Any arbitrary order of attachments are allowed, and there are no limits on the number of playlists supported. This feature can be used for collaborating among developers as well for training, support and marketing purposes.

To access a playlist click on the **View** menu in the top toolbar of application, select **CATC Walk** and then select **Manage Playlists** as shown below.

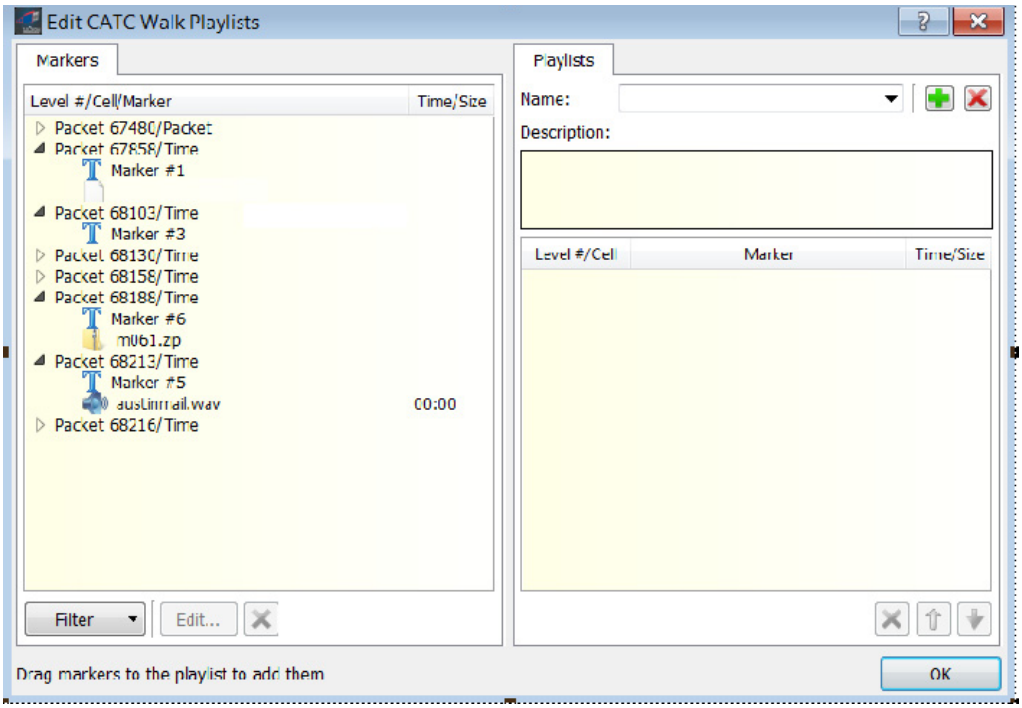

Edit CATC Walk Playlists Dialog

Playlist Functionality

You can do the following to manage playlists:

- Remove or edit current playlists
- Edit the playlist name
- Edit the playlist description
- List the sequence of attachments in current playlist
- List of all available attachments and drag/drop to a playlist.

As shown in the previous figure the Playlist window lists the markers with their attachments on the left and the playlist on the right.

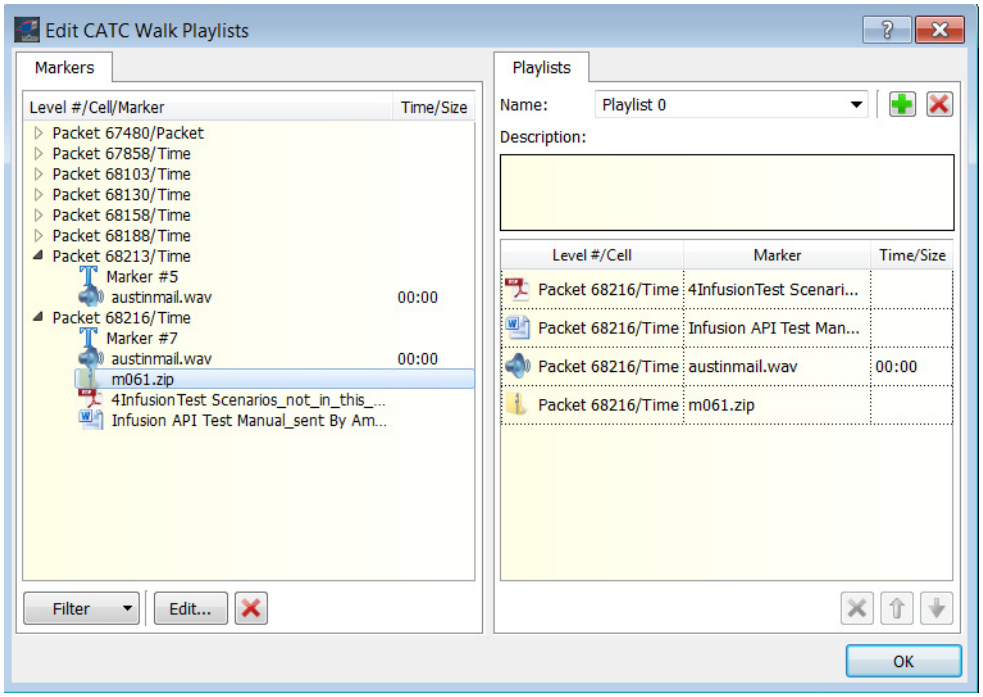

Edit CATC Walk Playlists Dialog

You can drag and drop and item or attachment from the **Marker** panel into the **Playlist** panel and build a story. Give a description of the playlist in the **Description** field and you can give a name to the playlist in the **Name** field.

You can add a new playlist by clicking on the green plus sign (**+**) on the right top corner of the Playlist panel, or delete a playlist by clicking the red (**x**) button.

If you have more than one playlist saved click on the Name drop-down arrow to select it. The drop-down menu lists all the available playlists

Playback Window

To playback a playlist, click on the **View** menu in the top toolbar of application, select **CATC Walk** and then select **Play > Playlist 1** as shown below.

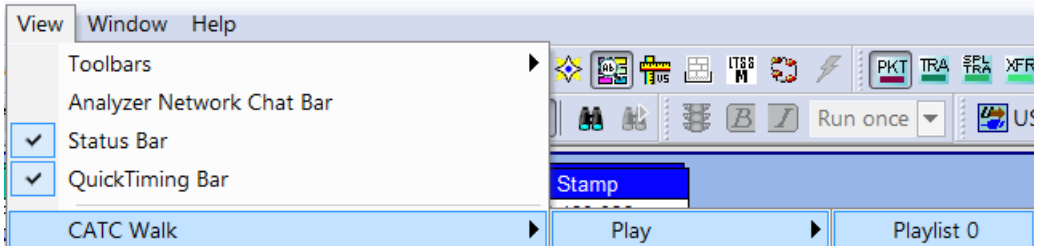

View Dialog

The attachment item starts to play in the playback window as shown below.

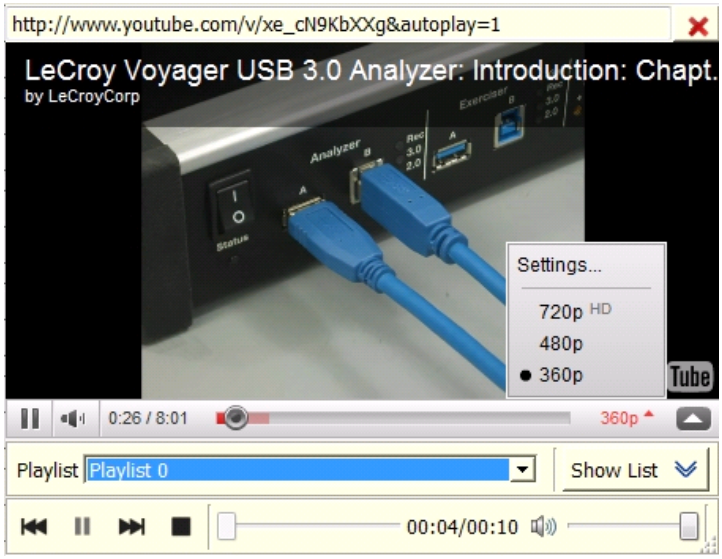

Playback Window

The playback window is resizable. The close button at the top right corner and the size grip for resizing at the bottom right corner will hide automatically when moving the cursor out of the window.

Users can provide commentary to a captured trace, converting it into a script or a story and can transfer this meta-information to others. Playlist Playback Controls.

Playlist Playback Controls

The playlist playback control buttons are:

- Play/Pause
- Stop
- Jump to Next attachment
- Jump to Previous attachment
- Seek slider for seeking to positions in media streams
- Volume slider
- Playback speed slider (for text attachments)

As a playlist is played back, the playback window is displayed in close proximity to the marked area, just like a regular tooltip window.

As the playback progresses, the view jumps to the element corresponding to the current attachment being played and the marked element is highlighted. During playback the user is prevented from interacting with the trace. To reinforce this restriction, the trace view is grayed-out visually, and only the packet with the item corresponding to the current attachment is colorized.

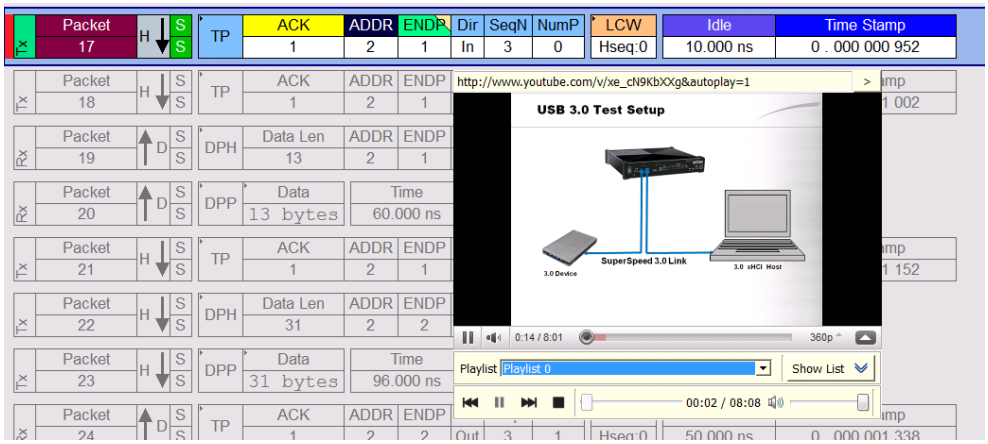

Playback Window

6.7 Go To Menu

The **Go To menu** in the Search menu provides a quick way to search for a packet based on a simple condition. You can search for the following types of events:

- TLP Type
- DLLP Type
- Ordered Set
- Link Event
- Traffic Class
- DLLP Virtual Channel
- TLP Virtual Channel
- Direction
- Speed
- Link Width
- Requester ID
- Completer ID
- Data Lengths
- Errors

6.8 Search Direction

Search direction can be toggled back and forth by using the command under the Search menu. Search Direction controls the direction of the search. Each time Search Direction is selected, the search order is reversed. For example, if the previous search was **forward**, choosing **Search Direction** toggles the current search to **backward**.

To verify the direction of a search look at the lower right corner of the screen. **Search: Bwd** or **Search: Fwd** should appear. If a direction is not indicated, it means that the status bar is turned off.

To turn on the Status bar, select from the menu **View > Status Bar**.

Keyboard shortcuts can also be used to control search direction:

- **Control-f** means Search Forward.
- **Control-b** means Search Backward.

6.9 Find

Find allows you to conduct complex searches in a CATC Trace. You can search by protocol level (Packets, Link Transactions, Split Transactions).

You can search packets by Event Group: TLP Type, TLP Header, TLP Prefix (Summit T2-16 only), TLP Requester ID, TLP Completer ID, TLP Data Pattern, TLP Data Lengths, TLP Tag, TLP Sequence Number, DLLP Type, DLLP Header, DLLP Virtual Channel, ACK/NAK Seq Number, Ordered Sets, Link Event, Direction, Errors.

You can search link transactions by Event Group: TLP Type, Traffic Class, Virtual Channel, Direction, Requester ID, Completer ID, Status, Tag.

You can search split transactions by Event Group: TLP Type, Traffic Class, Virtual Channel, Direction, Requester ID, Completer ID, Status, Tag.

The options Union, Intersection, and Exclusion allow you to create complex searches such as "Find x OR y" or "Exclude all x or y."

To find a item:

Step 1 Open a CATC Trace.

Step 2 Open Find by selecting **Search > Find** from the menu or clicking .

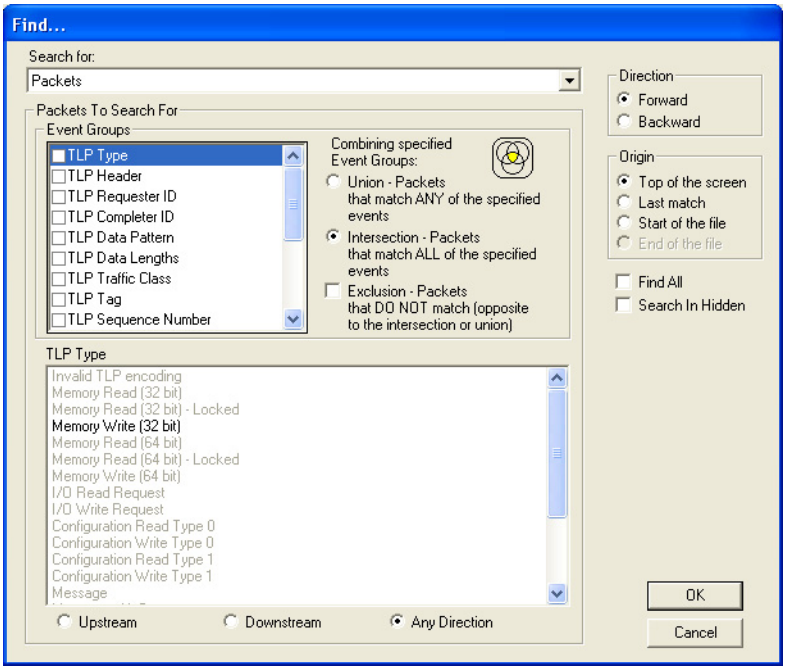

Step 3 From the Search For menu, select a display level such as **Packets**. To search multiple levels, finish steps 3 to 9, and then repeat 3 to 9 for each additional display level.

Step 4 From the Event Groups menu, select an **Event Group**. The menu in the far right of the dialog box is context sensitive and changes to reflect the options for that group.

Step 5 In the menu in the far right, select one or more items.

Step 6 Repeat Step 5 for each Event Group of interest for the selected display level.

Step 7 Under Direction, select **Forward** or **Backward** to select a search direction.

Step 8 Under Origin, select a starting point for the search.

Step 9 Under **Combining Specified Event Groups**, select

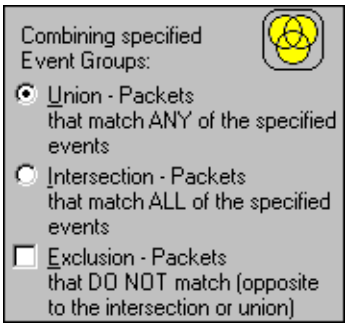

The options Union, Intersection, and Exclusion let you set conditions on your searches:

- **Union**: To search for **any** of the selected criteria.
  Example: "Find packets with ANY of the following characteristics …"
- **Intersection**: To search for **all** of the selected criteria.
  Example: "Find packets with ALL of the following characteristics …"
- **Exclude**: To **exclude** items from a search. This option works in conjunction with Union and Intersection. You select Union and Exclude to exclude any of the specified traffic. You select Intersection and Exclude to exclude all of the specified traffic.
  Example: "Exclude packets with ANY of the following …" or "Exclude packets with ALL of the following …"

Step 10 Repeat Steps 3 through 9 for additional display levels.

Step 11 **Find All** displays all matching packets or transactions in a separate view.

Step 12 **Search in Hidden** includes hidden packets or transactions in the search.

Step 13 Click **OK**.

Event Groups

The Event Groups for Packets are:

- TLP Type
- TLP Header
- TLP Prefix (Summit T2-16 only)
- TLP Requester ID
- TLP Completer ID
- TLP Data Pattern
- TLP Data Lengths
- TLP Traffic Class
- TLP Tag
- TLP Sequence Number
- DLLP Type
- DLLP Header
- DLLP Virtual Channel
- ACK/NAK Seq Number
- Ordered Sets
- Link Event
- Direction
- Errors

The Event Groups for Link Transactions and Split Transactions are:

- TLP Type
- Traffic Class
- Virtual Channel
- Direction
- RequesterID
- CompleterID
- Status
- Tag

6.10 Search for the Next Packet Type

Use **Find Next** or click to search for the next packet meeting the search criteria.

Chapter 7: Display Options

7.1 Setting Display Options

Display Options allow you to customize the colors and formats of displayed traffic.

To open the Display Options dialog at the General tab, Select **Setup > Display Options** from the menu or

click the **Display Options** button on the toolbar.

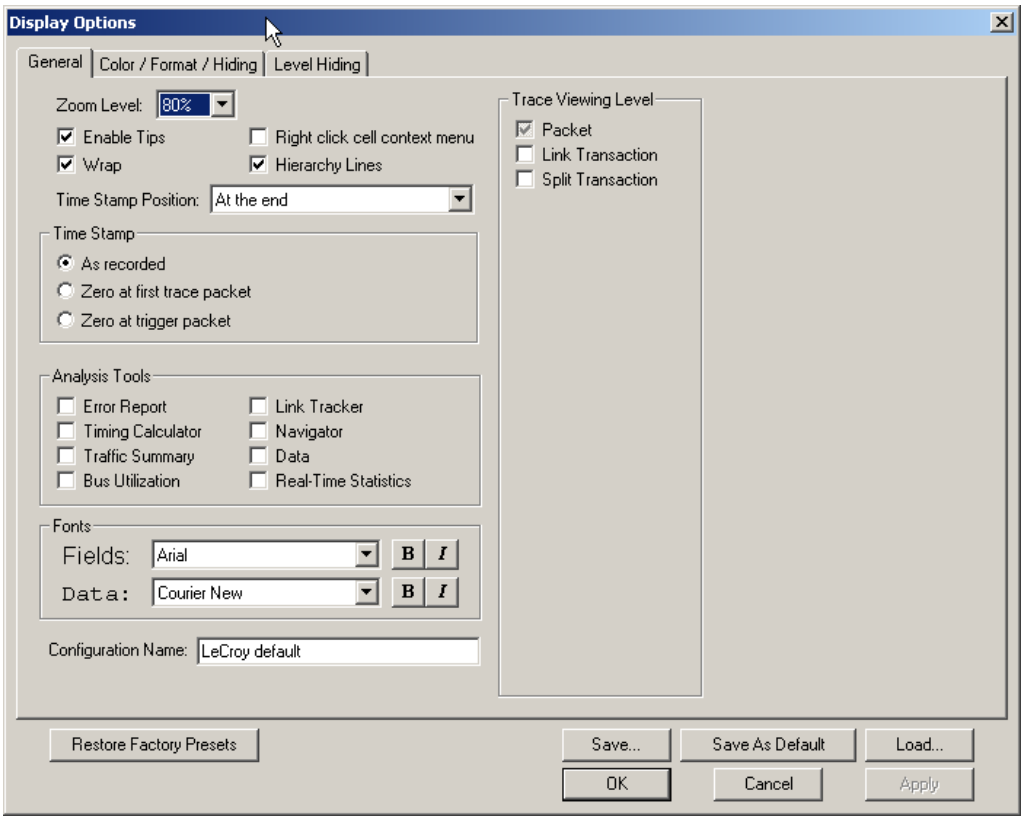

7.2 Specifying General Display Options

The Display Options General tab allows you to specify:

Zoom Level: Defines the size of packet fields in the packet view. Zoom level is adjustable as 10, 20, 40, 60, 80, 100, 120, 140, 160, 180 and 200 percent.

Enable Tool tips: Allows information to be displayed on a packet by resting your mouse pointer over it.

Wrap: Allows packets, Link Transactions, and Split Transactions to wrap within the display.

Right click cell context menu: Swaps mouse functions.

Hierarchy Lines: Adds lines to the trace view indicating relations between packets, Link Transactions, and Split Transactions.

Timestamp position: Moves timestamp location from end of packet to beginning of packet, or merges it with the packet number.

Trace Viewing Level: Allows the CATC Trace to be displayed in different hierarchical levels: Packets, Link Transactions, and Split Transactions.

Time Stamp: Gives you options for setting the timestamp to zero for either the first CATC Trace packet or the trigger packet or for leaving the stamp unchanged as it was originally recorded.

Analysis Tools Checkboxes

Error Report: Opens Traffic Summary window and displays list of errors that occurred in the CATC Trace.

Timing Calculator: Opens Timing Calculator dialog for calculating timing between events.

Traffic Summary: Displays a table of events that occurred in the CATC Trace.

Bus Utilization: Opens a graph of bus usage in the open CATC Trace.

Link Tracker: Opens window that displays traffic on a per lane basis in a strictly chronological view.

Navigator: Displays/Hides Navigation bar. The Navigation bar lets you see in a glance the position of errors and triggers in a CATC Trace and narrow the range of traffic displayed in the CATC Trace window.

Data: Displays packet payload information in various formats.

Real-Time Statistics: Opens a dialog that displays a graph of bus activity on the DUT in real-time, as well as other statistical information.

Fonts

Fonts: Allows the appearance of field text and/or data text to be defined.

Configuration Name

Display Configuration Name: This field is used to enter a text string to be associated with the current set of Display Options. This name is saved with the Display Options file, and appears as part of the title of the packet view window that uses this set of Display Options.

7.3 Color, Format, and Hiding Options

The Color/Format/Hiding tab allows you to customize the colors and formats associated with each field in the CATC Trace and to selectively hide fields or packets. You access these display options by selecting **Setup > Display Options > Color/Format/Hiding** tab.

The Color/Format/Hiding property page lets you set how fields display in a CATC Trace. This property page lets you set field color and data format (binary, hex, decimal, ASCII), and lets you hide selected fields from the display.

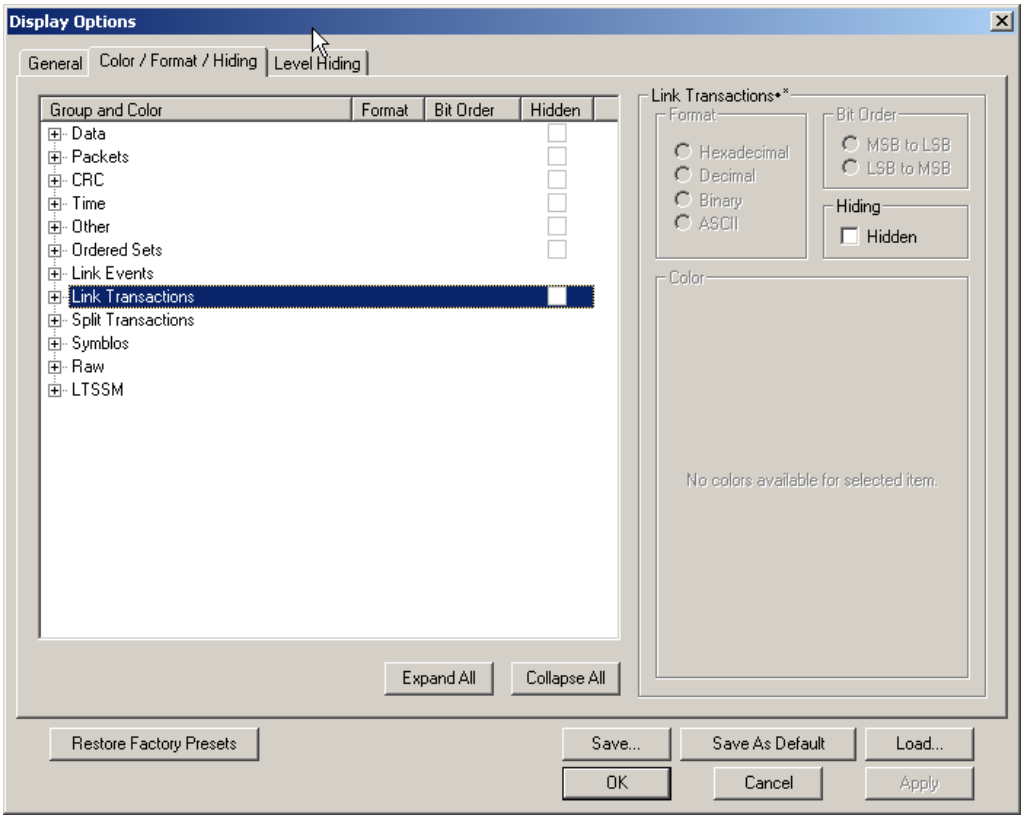

Setting Field Colors

The Field Colors tab allows you to customize the colors associated with each field used in the packet view.

You may experiment with this option to achieve a color combination that suits you.

Select or change the trigger color using the color buttons labeled **- Packet #** and **+ Packet #** (before and after trigger) found under the Packet# section of the Field Colors window.

You select or change a color by clicking the appropriate color button. This action causes a color palette to pop up. Select the desired color and press OK.

Step 1 Click **View > Set Display Options** to open the Display Options dialog box.

Step 2 Select the **Color/Format/Hiding** property page.

Step 3 Under the Group and Colors column, click the **plus** symbol (**+**) next to the group you want to reformat. The group expands to show the individual fields within the group. Each field has a color, as shown below:

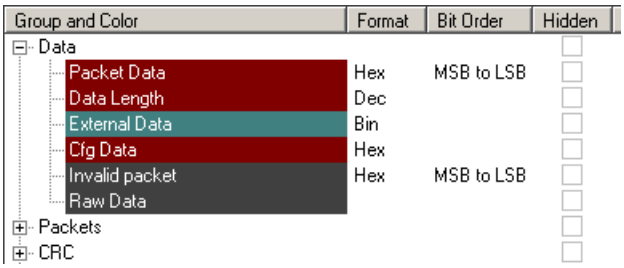

Step 4 Click the colored cell that you want to change. A color palette appears.

Step 5 Click a color in the palette, then click **Apply** or **OK**.

Note: The colors of the following Frame types cannot be changed:

- Invalid Data (frame error) field (red)
- Softbit Errors (yellow)

You can also change color by left-clicking a field in the CATC Trace and selecting Color from the pop-up menu.

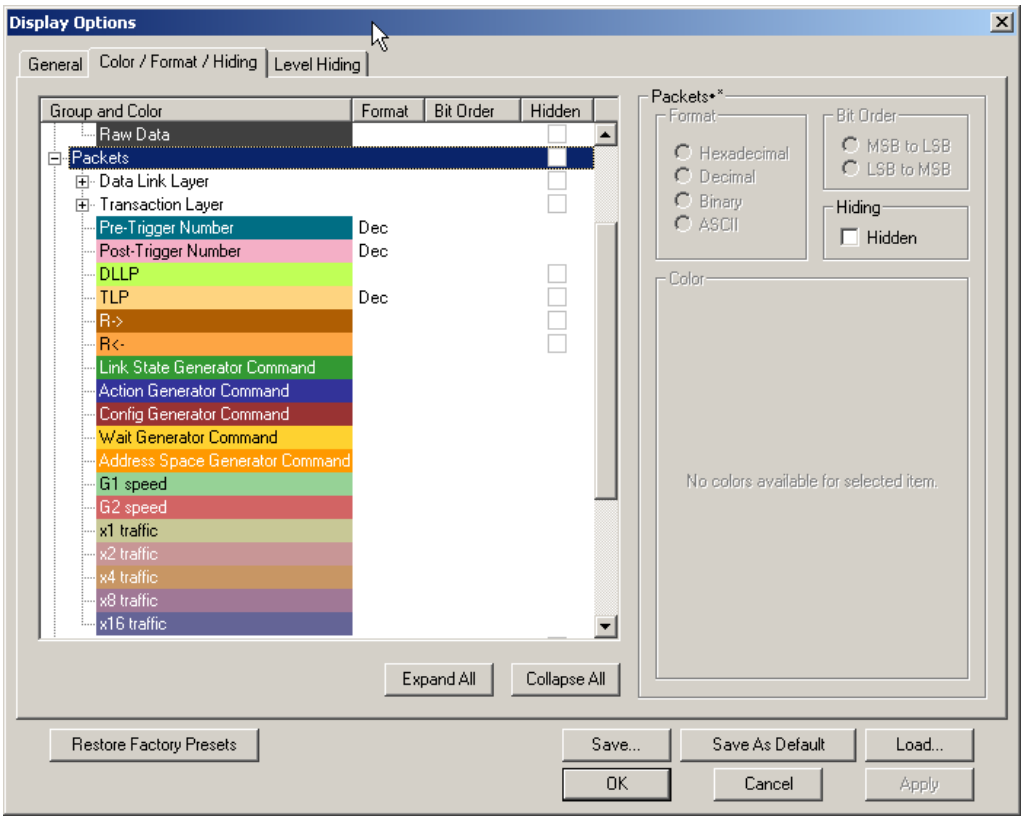

Changing Field Formats

The Field Formats tab allows you to define the way various numeric fields are shown in the packet display. You can select Hexadecimal, Decimal, Binary, or ASCII for certain fields or groups of fields.

To change a field's format, click the plus sign (+) next to a field in the list. This causes the selected item to expand so you can see its constituent sub-fields. Select a sub-field, and then choose the format from the formatting choices that appear at the bottom of the window.

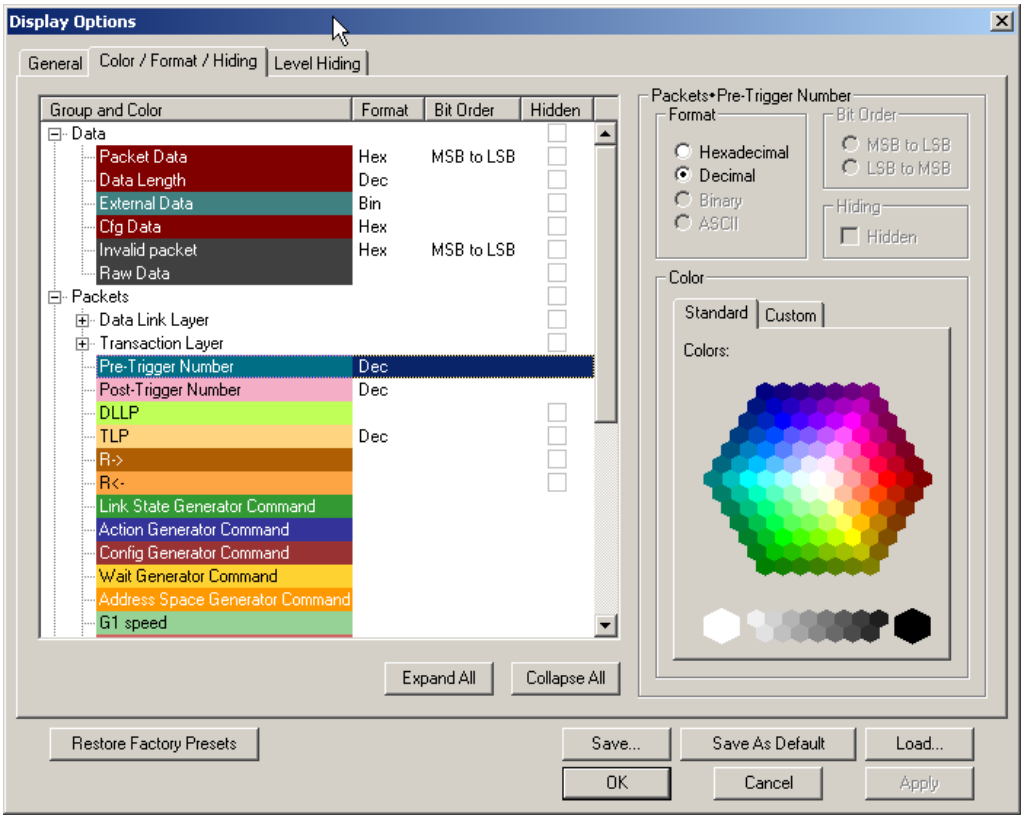

To change the format of alphanumeric characters in a field:

Step 1 Under the Group and Colors column, click the **plus** symbol (**+**) next to the group you want to reformat. The group expands to show the individual fields within the group (as shown above).

Step 2 Click the **row** representing the field that you want to reformat. If the field can be reformatted, the format options at the top of the dialog box become active, as shown below:

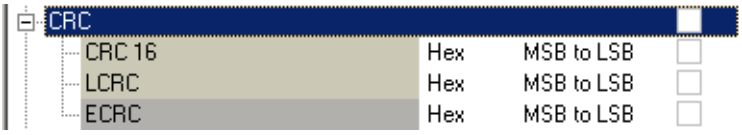

Step 3 Select a **format**.

Step 4 Specify the bit order in the displayed fields by checking/unchecking the **MSB > LSB** checkboxes.

Step 5 Click **Apply** or **OK**.

Hiding Fields

To hide a field:

Step 1 Under the Group and Colors column, click the **plus** symbol (**+**) next to the group that has the field(s) you want to hide. The group expands to show the individual fields within the group (as shown above).

Step 2 Click the **checkbox** in the row representing the field that you want to hide.

Step 3 Click **Apply** or **OK**.

Hiding Levels

The Level Hiding page lets you hide traffic by Event Group. If you select one or more event types from the Event Group list, the selected types are hidden from the CATC Trace.

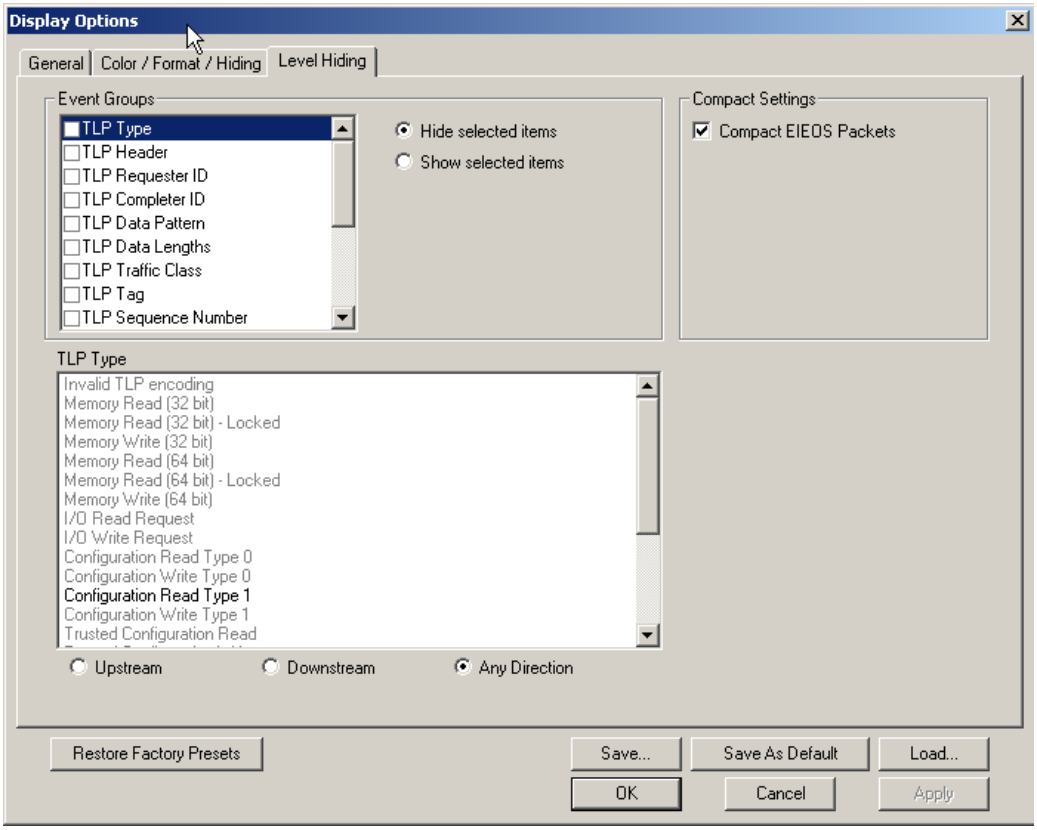

To hide a level:

Step 1 Select an Event Group.

Step 2 Select whether to **Hide** or **Show selected items**.

Step 3 Select **Upstream, Downstream**, or **Any Direction**.

Step 4 (optional) Select **Compact EIEOS packets**.

Step 5 Click **OK**.

The Event Groups for Packets are:

- TLP Type
- TLP Header
- TLP Requester ID
- TLP Completer ID
- TLP Data Pattern
- TLP Data Lengths
- TLP Traffic Class
- TLP Tag
- TLP Sequence Number
- DLLP Type
- DLLP Header
- DLLP Virtual Channel
- ACK/NAK Seq Number
- Ordered Sets
- Link Event
- Direction
- Errors

The Event Groups for Link Transactions and Split Transactions are:

- TLP Type
- Traffic Class
- Virtual Channel
- Direction
- RequesterID
- CompleterID
- Status
- Tag

7.4 Load a Previously Saved Display Options File

If you have previously saved Display Options, you can load them by opening the Display Options dialog and clicking the **Load** button. A dialog box opens to let you load a previously saved display options file.

Step 1 Click **Load** to use a previously defined display options file.

Step 2 When you see the Open File pop-up window, enter the name of the file you want to load and click **Open**.

Step 3 When the PE*Tracer*™ software returns you to the Recording Options menu, click **OK** to activate the display options you selected.

7.5 Saving Display Options

If you have customized the Display Options and wish to save them, you can do so by clicking the **Save** button, then entering a unique file name. The **.opt** extension is added by default.

Setting the Defaults: Save the currently specified Display Options to the file name: **default.opt** by clicking **Save As Default.** When the Analyzer software begins execution, it automatically loads the **default.opt** file, if one exists.

Chapter 8: Recording Options

8.1 Setting Recording Options

The Recording Options dialog is used to configure a recording.

To open the Recording Options window, click or select the command **Setup > Recording Options**.

PE*Tracer* Edge in Advanced Mode:

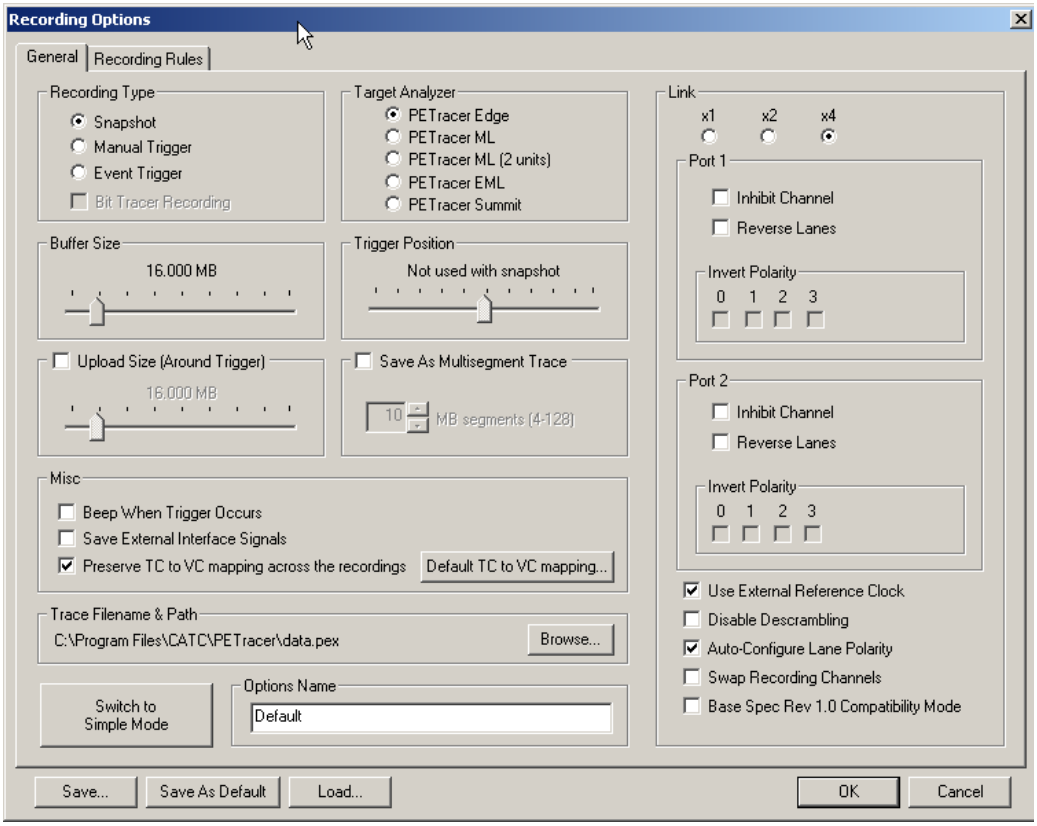

Note: There are separate sets of Recording Options for each Analyzer type. To set the Analyzer type, select the appropriate platform from the Target Analyzer menu in the General page of the Recording Options.

8.2 General Tab

The General Page presents options that affect all recordings:

Recording Type: Sets the trigger mechanism for the recording: Snapshot, Manual Trigger, or Event Trigger.

Target Analyzer: Presents a menu with options for selecting an Analyzer platform:

- **PE*Tracer* Edge**
- **PE*Tracer* ML**
- **PE*Tracer* ML** (2 Units)
- **PE*Tracer* EML**
- **PE*Tracer* Summit**
- **Summit T2-16**

Buffer Size: Causes the Analyzer to record traffic to its buffer and then upload the CATC Trace to the host machine. Recordings are limited in size to the size of the Analyzer's buffer (4 GB per direction).

Trigger Position: Controls the percentage of buffer allocated for pre- and post-buffer recording.

Trigger On (Simple Mode): Error, Link Up/Link Down. TS1, TS2, FTS, Any TLP, Config Rd, Config Wr, IO Rd, IO Wr, Mem Rd, Mem Wr, Message, Completion, InitFC1, InitFC2, ACK, NAK, and/or PM.

Filter Out (Simple Mode): SKIP Ordered Sets and/or UpdateFC DLLP are provided.

Trace Filename & Path: Sets the path and CATC Trace name for the recording.

Options Name: Sets a descriptive label for the Recording Options so you can more easily recall what settings are in the Recording Options file.

Link: Settings: For link width, inhibiting recording, polarity, external reference clock, swapping recording channels, inverting link polarity, and descrambling.

Upload Size (Advanced Mode): Causes the Analyzer to upload a portion of the Analyzer's buffer. This option lets you look at part of the CATC Trace. Half of the uploaded CATC Trace is pre-buffer and half post-trigger.

Save As MultiSegment Trace (Advanced Mode): Divides the recording into segments so as to make very large recordings more easily uploaded and viewed. If you are planning to create a large recording, you might want to test this option to see how it affects performance. Large CATC Trace files are easier to navigate but slower to open.

Misc (Advanced Mode): Turns on trigger beep, sets external clocking (EML only), allows external interface signals to be saved into the CATC Trace, and tells the Analyzer to use whatever TC to VC mapping was used in the last recording (to re-use previously discovered Configuration Space data) in all future recordings. Also presents a button for manually mapping the Traffic Classes to Virtual Channels.

Recording Type

Recording Type lets you to specify the type of recording you want to make:

- **Snapshot**: A recording of a pre-determined length. You set the recording length in the Buffer Size box. Recording begins when you click the **Rec** button on the toolbar and ends when the selected buffer size is filled or when you press the **Stop** button.
- **Manual Trigger**: A recording that switches between the pre-trigger buffer and the post-trigger buffer when you push the **Trigger** button on the front of the Analyzer. Recording begins when you select **Start** in the application. Pressing the **Trigger** button causes the Analyzer to begin to finish recording. Recording continues until the post-trigger buffer has been filled. You can also end the recording by pressing the **Stop** button in the application.
- **Event Trigger**: A recording that switches between the pre-trigger buffer and the post-trigger buffer when it is triggered by an event in the CATC Trace. An Event Trigger begins when you select **Start** in the application and ends when the specified triggering event occurs in the CATC Trace or you press **Stop**. If an event triggers the end of the recording, the Analyzer records a predefined amount of post-trigger data (specified by Trigger Position and Buffer Size.)

  Note: You can also terminate an Event Trigger recording by pressing the Manual Trigger button on the front of the Analyzer. When the Manual Trigger button is pressed, the Analyzer continues to record until the specified post-trigger buffer has been filled.

Buffer Size

The Buffer Size slide-bar allows you to set the size of the recording buffer.

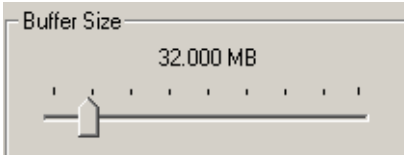

Note: Size selection is per direction. For example, selecting 32 MB creates two memory areas of that size.

After you have set the Buffer Size, you must set the Recording type and Trigger position options. These options determine how the buffer is used.

Note: The Buffer Size slide-bar does not precisely portray the buffer size because of the way the packets are stored in the Analyzer's memory.

Target Analyzer

Target Analyzer presents a menu with these choices:

- **PE*Tracer* Edge**: Displays the options for the PE*Tracer* Edge Analyzer.
- **PE*Tracer* ML**: Displays the options for the PE*Tracer* ML Analyzer.
- **PE*Tracer* ML** (2 Units): Displays the same options as PE*Tracer* ML but lists **Unit 1** and **Unit 2** in the Link Section on the right. In a two-unit setup, **Unit 1** and **Unit 2** are two separate Analyzers linked together by BNC on the back of the units to form a single, logical Analyzer.
- **PE*Tracer* EML**: Displays the options for the PE*Tracer* EML Analyzer.
- **PE*Tracer* Summit and Summit T2-16**: Displays the options for the PE*Tracer* Summit or Summit T2-16 Analyzer.

Selecting an Analyzer platform changes the options presented in the Link and Events pages within the Recording Options dialog.

Trigger Position

This Trigger Position slide-bar lets you to adjust the amount of recording buffer allocated to recording pre-trigger and post-trigger traffic.

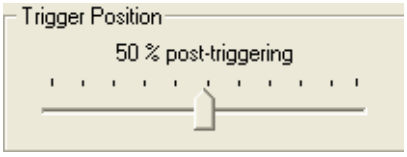

For example, if you set the Trigger Position to 90% Post-Triggering Traffic, the Analyzer records 10% pre-trigger traffic and 90% post-trigger traffic.

Trigger Position is only available when Manual Trigger or Event Trigger is selected.

Trigger On

In Simple Mode, Trigger On allows you to select: Error, Link Up/Link Down. TS1, TS2, FTS, Any TLP, Config Rd, Config Wr, IO Rd, IO Wr, Mem Rd, Mem Wr, Message, Completion, InitFC1, InitFC2, ACK, NAK, and/or PM.

Trace Filename and Path

The Trace Filename and Path button on the Recording Options General panel allows you to change the default file name and path for the recorded CATC Trace file. The pre-defined name is **data.pem**.

Step 1 Select the **Recording File Name** button.

Step 2 When you see the **Save As** menu, navigate to the directory you want.

Step 3 Enter the new file name in the File name field.

Step 4 Click the **Save** button.

This action does not do any immediate save operation. It just changes the default name and uses it in subsequent recordings.

Options Name

The Options Name is a descriptive, supplemental label that you can assign to a Recording Options file.

For example, if your Recording Options file were named **StandardSettings.rec**, your Options Name could be a long descriptive label such as **Standard Record Options used for all normal Recordings**.

Save As MultiSegment Trace

This option causes the Analyzer to segment the CATC Trace into 4 MB to 128 MB files and to create an index file that summarizes the starting and finishing frame for each segment.

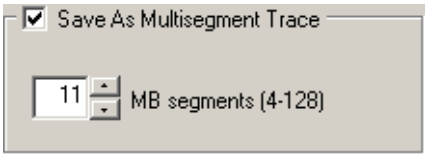

The index file has a default name of **data.pem**.

The index file and segmented CATC Trace files are stored in a directory named **data_pem_files**. The directory is named after the index file. Below this directory additional, sequentially numbered sub-directories (up to 10,000) hold the segmented CATC Trace files. These sub-directories bear simple numerical names: 00000 to 00999. Each of these subdirectories can hold up to 100 sequentially numbered segment files.

Example

A 1010 MB recording using the default file names creates the following sub-directories and files:

`data.pem` (This is the index file.)

```
data_pem_files\00000\segment_00000.pex
data_pem_files\00000\segment_00001.pex
...
data_pem_files\00000\segment_00099.pex
data_pem_files\00001\segment_00100.pex
data_pem_files\00001\segment_00101.pex
```

The index file looks something like a CATC Trace file but contains packet-like entities that summarize each segment.

Viewing Multisegmented Files

If Save As MultiSegment Trace is enabled in the General page of the Recording Options, PE*Tracer* divides the CATC Trace into segments and stores them on the host machine's hard drive. Segment size is set in the MB Segments box. Enter a value from 4 MB to 128 MB.

PE*Tracer* also creates an index file that provides a brief summary of each segment and hyperlinks to each of the segments. Double-clicking a segment summary in the index file causes PE*Tracer* to open that segment.

You can also navigate through the segments by clicking the buttons on the Multisegment toolbar.

Misc

Allows you to specify the following parameters for recording and uploading traffic:

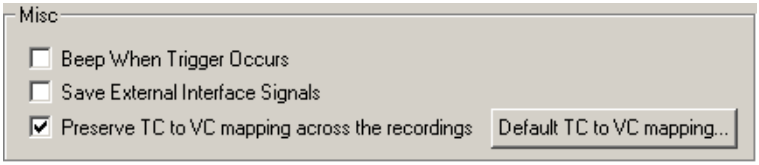
Misc
Beep When Trigger Occurs
Save External Interface Signals
Preserve TC to VC mapping across the recordings
Default TC to VC mapping...

- **Beep When Trigger Occurs**: Causes the Analyzer to beep when a trigger event is detected.
- **Save External Interface Signals**: If selected, causes the Analyzer to save signals from a Breakout Board as fields in the CATC Trace.
- **Preserve TC to VC mapping across the channels**: Causes the Analyzer to use whatever TC to VC mapping it established in the last recording.
- **Default TC to VC mapping button**: Lets users manually configure the default mapping.

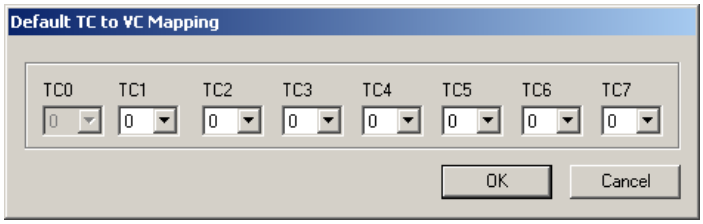

Link for PE*Tracer* Edge

The Link section allows you to manage links:

Note that PE*Tracer* Edge does not have an x8 Link Width:

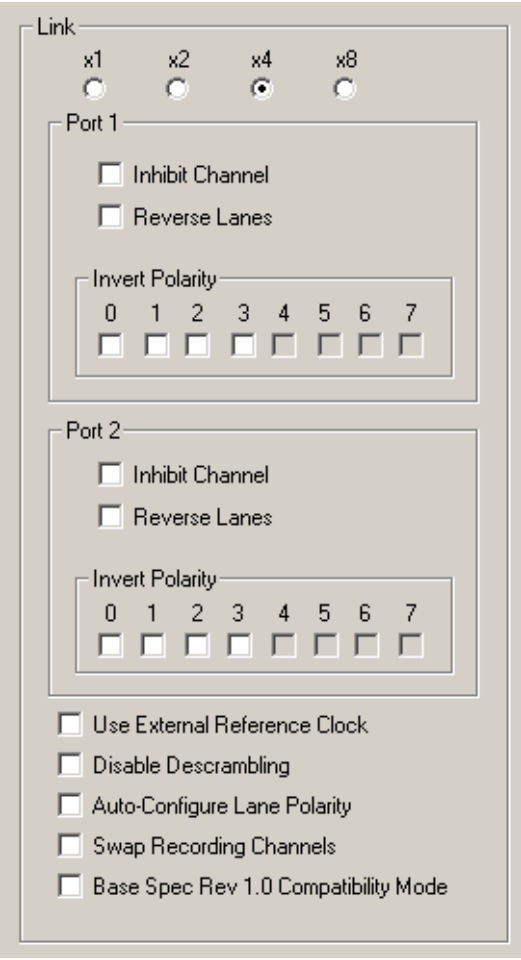

Link Width: Sets the physical width of the link.

Port 1 (Unit1) and Port 2 (Unit 2): Gives you low-level control over each link direction. The heading for these boxes indicates the port and/or unit to which the following options are applied based on the current Analyzer configuration:

- **Inhibit Channel**: Prevents recording on the selected link direction.
- **Reverse Lanes**: Causes the Analyzer to reverse the lane order for this link direction. For example, if you are working with a PCI Express™ device that uses a 3 2 1 0 lane order instead of a 0 1 2 3 order or uses a 0 to 15 lane order instead of a 15 to 0 order, you select this option to enable the Analyzer to match the order of the device.
- **Invert Polarity**: Inverts the d+ and d- polarity for each specified lane. If for some reason the d+ on one side of a link is wired to the d- on the other side (or vice versa), then selecting Invert Link Polarity corrects for that condition.

Use External Reference Clock: If the PCI Express link under analysis uses spread-spectrum clocking, then the Analyzer must use the external reference clock from the host machine. If host machine does not supply a reference clock, the internal reference clock in the Analyzer module is used instead for link analysis.

Disable Descrambling: If checked, causes the Analyzer to assume that none of the PCI Express traffic is scrambled. By default, the Analyzer determines the scrambling state of the devices under test.

Auto-Configure Lane Polarity: Lets the Analyzer determine lane polarity.

Base Spec 1.0 Rev Compatibility Mode (Advanced Mode): This option causes the Analyzer to conform to the PCI Express 1.0 Specification.

Swap Recording Channels (Advanced Mode): Swaps upstream/downstream assignments. Normally, the software makes upstream and downstream assignments based on Configuration Requests within the CATC Trace. Sometimes these requests are not captured. You can manually re-assign channels using this checkbox.

Saving and Loading Previously Saved Recording Options

The options are:

Save: Saves the current options to whatever file name you provide.

Save As Default: Saves the current options into the default options file. This file is called **default.rec** or whatever other name you have assigned to the default options file. Whenever the Teledyne LeCroy PE*Tracer* software begins execution, it automatically loads the default file, if one exists.

Load: Loads a previously saved set of recording options.

OK: Applies changes and closes the Recording Options dialog box.

Cancel: Cancels changes and closes the Recording Options dialog box.

Loading Recording Options

In the Recording Options menu, you can load a previously saved recording options file.

To load Recording Options:

Step 1 Select **Setup > Recording Options** from the menu.

Step 2 Click the **Load** button from the Recording Options dialog box. The Load dialog opens and lists previously saved options files (***.rec**).

Step 3 Select a file and click **OK**. The options file loads.

Saving Recording Options

Recording Options settings can be saved and later reused. Recording options settings are stored in ***.rec** files.

Step 1 Open the Recording Options dialog by selecting **Setup > Recording Options.**

Step 2 Set your options, then click **Save**.

Step 3 Enter a unique file name. The **.rec** extension is added by default.

Step 4 (optional) To add a descriptive label to this file to help you remember what options were set, use the **Options Name** box.

Setting Default Recording Options

To save the current recording options into the default Recording Options file:

- Click **Save As Default**.
  The default file for the options is **default.rec**.

  When the PE*Tracer* software begins execution, it automatically loads the **default.rec** file, if one exists.

8.3 Recording Rules Overview

The Recording Rules page lets you to set triggers and filters.

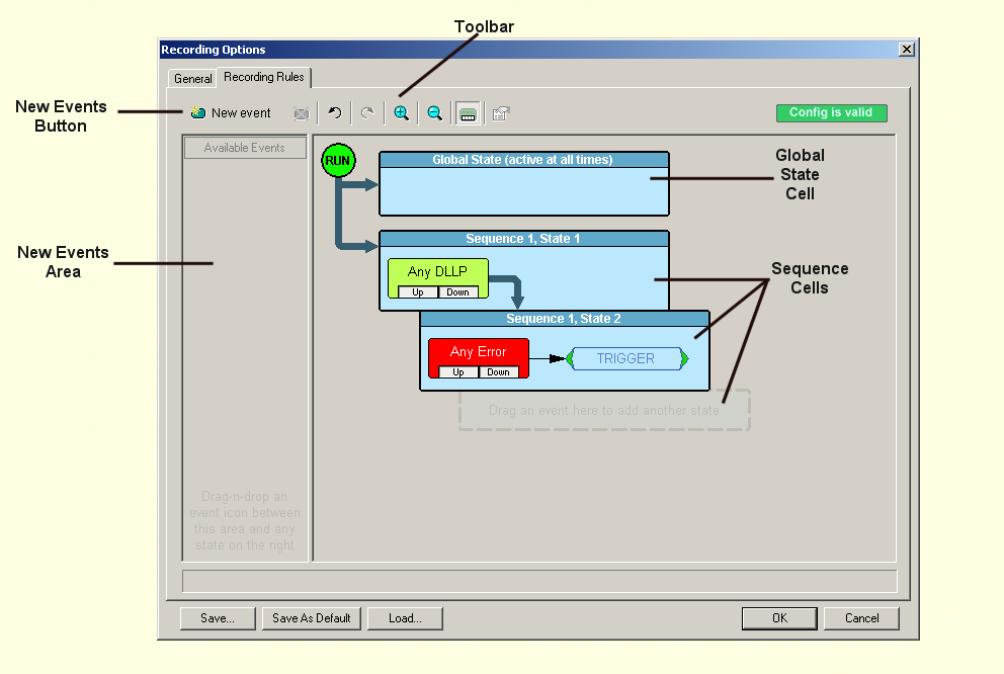

The page divides into three areas:

Toolbar: Contains buttons such as the New Events button for issuing commands.

Available Events area: A part of the screen where you can park buttons that you intend to use in the Main display area.

Main display area: The part of the screen where you create trigger and filter conditions. You create conditions by dragging buttons onto the Main display area from the Available Events area. You then create additional conditions by right-clicking a button and selecting options from a pop-up menu. See Creating Recording Rules.

Global State vs. Sequences

The Main Display area in the center of the Recording Rules page has two cells that affect events differently.

Global State: Events dragged into the Global State cell are searched for throughout the recording. For example, if you place an Error in the Global State cell and assign a Trigger to it, the Analyzer searches for errors from the start of the recording until the end.

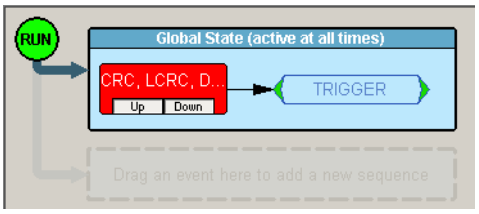

Sequence State: The cell marked **Drag an event here to create a new sequence** is a Sequence Cell. Sequence cells are used to event sequences, which are chains of events culminating in a trigger or other action. One sequence (i.e., a separate chains of events) can be created with up to 32 states. A state is an event condition plus some action within a sequence.

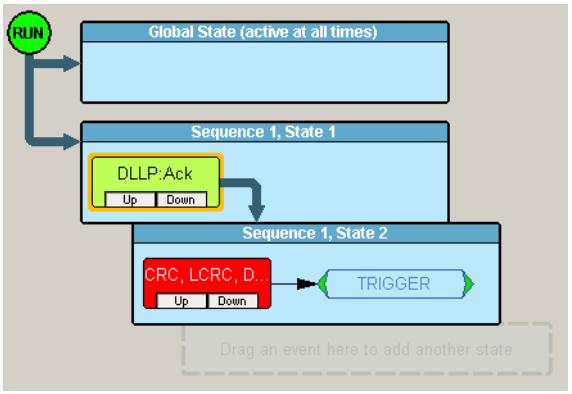

8.4 Recording Rules Buttons

The Recording Rules toolbar allows you to create and edit recording rules:

New event	New Event. Opens a drop-down menu with a list of events.		Zoom in
	Delete. Delete selected event.		Zoom out
	Undo. Undoes last action.		Show/Hide Channels. Shows/hides the channel buttons.
	Redo. Undoes last Undo command.		Show properties. Opens the Properties dialog box for the selected item.

8.5 Creating Recording Rules

The Recording Rules page is used to set triggers and filters. To access this page, select **Setup > Recording Options > Recording Rules**.

There are three steps to creating a recording rule:

1) Select events.

2) Place the events in the Global State or Sequence cells.

3) Assign actions to the events.

Note: There are limits to the types of rules that can be created.

Step 1 Click

and select one or more events from the menu. Selecting an event automatically places it in the Available Events area. This area serves as a parking lot where you can place event buttons without them having any effect on the Analyzer.

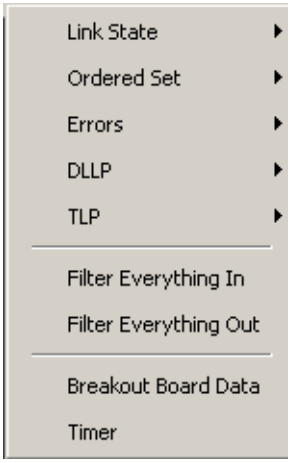

Step 2 Drag the selected events from the Available Events area into one of either the Global State cell or the Sequence cell (see “Global State vs. Sequences” on page 104):

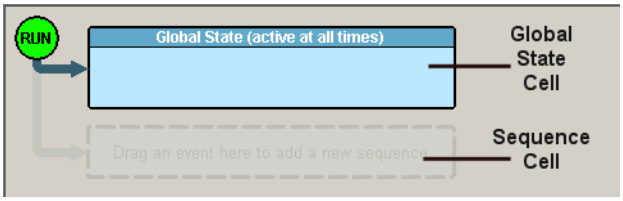

Global State Cell: If you want the Analyzer to always search for the event, place it in the cell marked **Global State**.

Sequence Cell: To create an event sequence, place two or more events in the faintly marked cell that reads **Drag an event here to create a sequence**. At this point, the selected events have no effect because an action has not been assigned.

Step 3 To select a sub-set of your selected event, right-click it and choose **Properties**. A Properties dialog box opens that presents additional options. For example, if you open the Properties dialog for Errors, you can set the specific types of errors the Analyzer should look for.

Step 4 Assign an action to the selected events by right-clicking each of the events, selecting **Specify Action** from the pop-up menu, and assigning an action such as **Trigger, Filter**, or **Count**. Be sure to click the event itself and not the **State** cell that it is sitting in (which produces a different pop-up menu.)

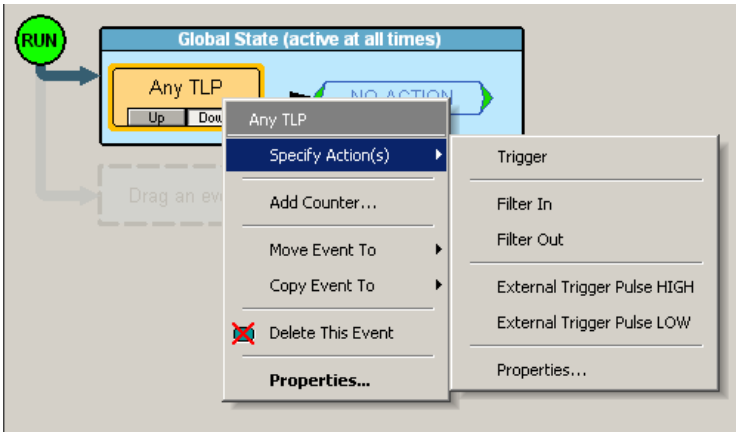

Note: You can also assign actions to events by double-clicking the event and selecting the Actions page when the Properties dialog box opens.

Step 5 Click **OK** to close the dialog box. At this point, assuming that the other options in the Recording Options dialog box have been set (such as the General page), you can begin the recording by pressing the

Start **Recording** button.

8.6 Recording Rules Logic: How Contradictory Rules are Resolved

When creating rules in the Recording Rules page, it is possible to create contradictory instructions such **Filter Anything Out** and **Filter Anything In**. To resolve such conflicts, the Recording Rules page implements three internal rules that are described here:

- Rules created in Sequence cells have a higher priority than rules created in the Global State cell: If a rule is placed in a Sequence cell, and a contradictory rule is placed in Global State cell, the rule in the Sequence cell applies.
- Filter-In has a higher priority than Filter-Out, so when a Filter-In rule is placed inside the same state as Filter-Out rules, only the Filter-In rule applies.
- Filter-In Anything and Filter-Out Anything have the highest priority and override any other filtering rules, so when Filter-In Anything or Filter-Out Anything are placed in the same state cell as other Filter rules, only the Filter-In Anything or Filter-Out Anything rules apply.

Recording Rules Examples

Read through the following examples to better understand how the three rules apply.

Note: In addition to these three rules, the Recording Rule Limitations define the **upper limits** of rule creation. These limitations should not affect you, but you should be aware of them.

Example 1

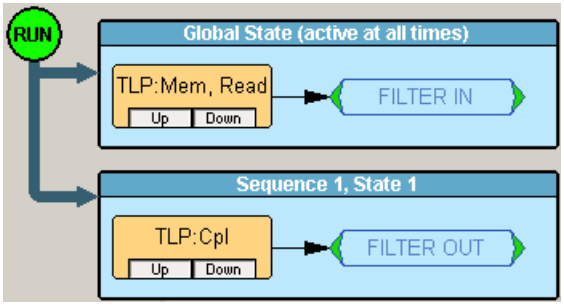

Result: Only TLP:Mem,Read is in the CATC Trace.

Reason: The Sequence rule Filter out TLP:Completion is not contradicting the global state rule to filter in TLP:Memory. Both rules are applied.

Example 2

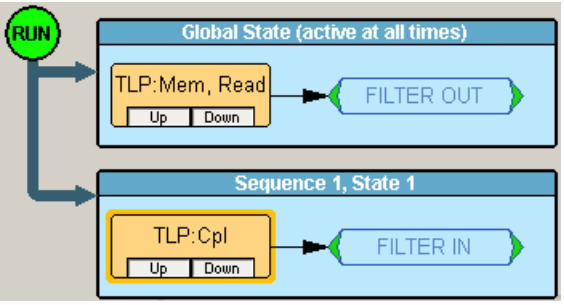

Result: Only TLP:Completion is in the CATC Trace.

Reason: The sequence rule to filter in TLP:Completion is not contradicting the global state rule to filter out TLP:Memory. Both rules are applied.

Example 3

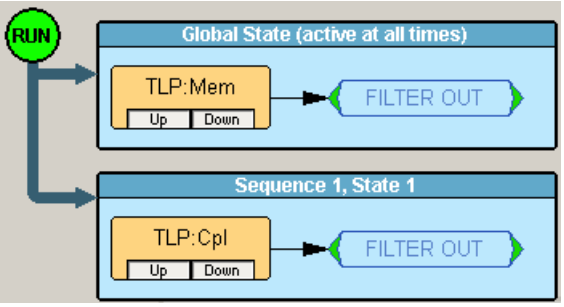

Result: TLP:Completion and TLP:Memory are filtered out.

Reason: The Sequence rule to filter out TLP:Completion is not contradicting the global state rule to filter out TLP:Memory. Both rules are applied.

Example 4

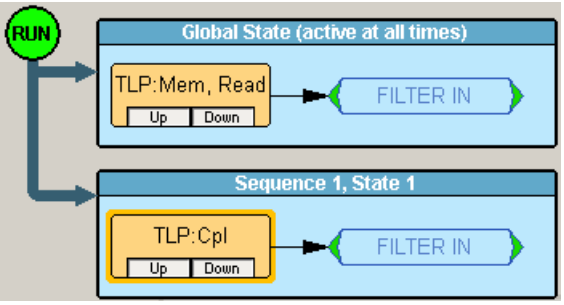

Result: Only TLP:Completion and TLP:Memory are in the CATC Trace.

Reason: The sequence rule to filter in TLP:Completion is not contradicting the global state rule to filter in TLP:Memory. Both rules are applied.

Example 5

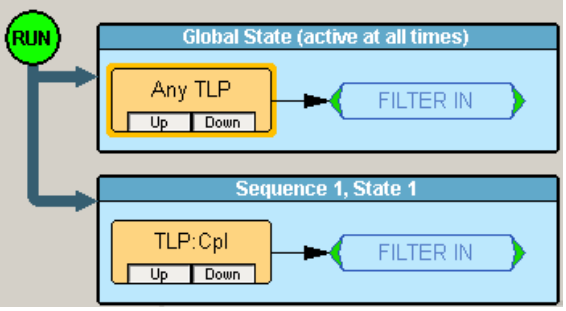

Result: Only TLP (any type) is in the CATC Trace.

Reason: The sequence rule to filter in TLP:Completion is not contradicting the global state rule to filter in Any TLP. Both rules are applied.

Example 6

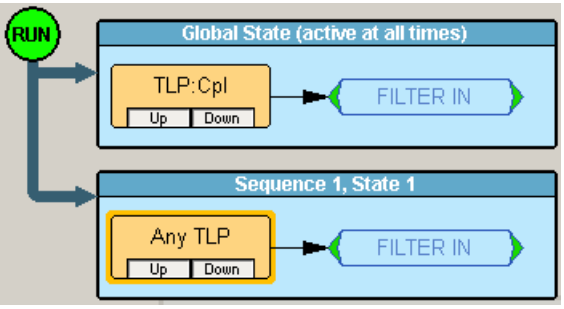

Result: Only TLP (any type) is in the CATC Trace.

Reason: The sequence rule to filter in Any TLP is not contradicting the global state rule to filter in TLP:Completion. Both rules are applied.

Example 7

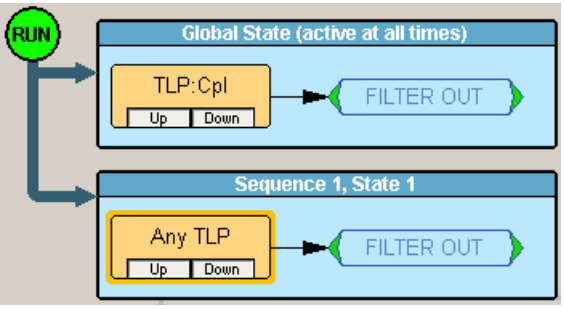

Result: All TLP are filtered out.

Reason: The sequence rule to filter out Any TLP is not contradicting the global state rule to filter out TLP:Completion. Both rules are applied.

Example 8

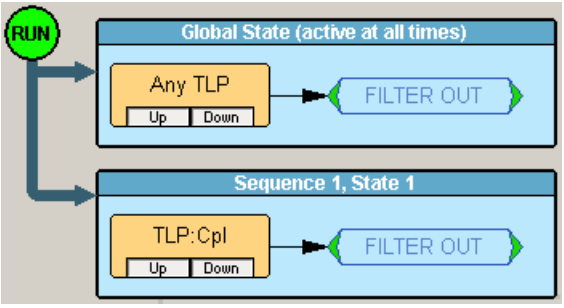

Result: All TLP are filtered out.

Reason: The sequence rule to filter out TLP:Completion is not contradicting the global state rule to filter out Any TLP. Both rules are applied.

Example 9

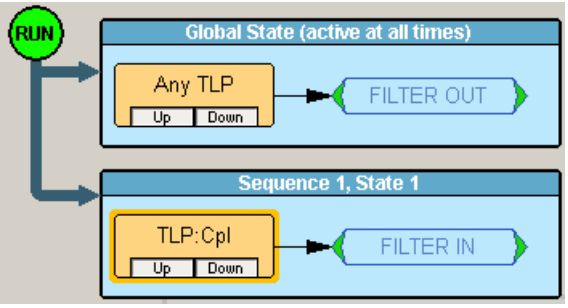

Result: Only TLP:Completion is in the CATC Trace.

Reason: The sequence rule to filter in TLP:Completion is overwriting the global state rule to filter out Any TLP.

Example 10

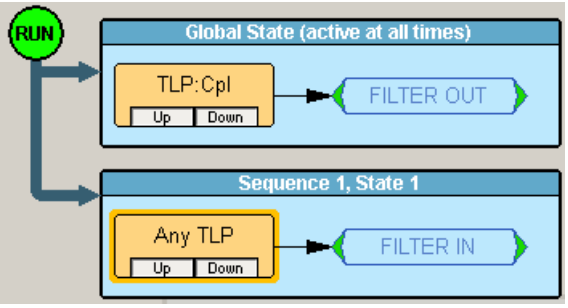

Result: Only TLP (any type) is in the CATC Trace.

Reason: The sequence rule to filter in Any TLP is overwriting the global state rule to filter out TLP:Completion.

Example 11

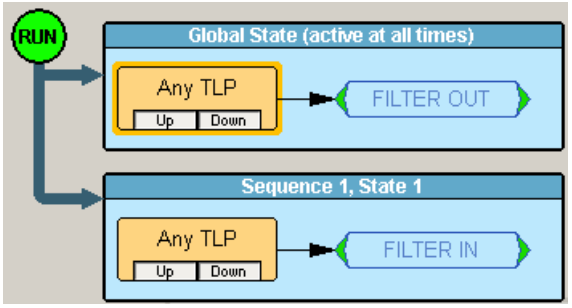

Result: Only TLP (any type) is in the CATC Trace.

Reason: The sequence rule to filter in Any TLP is overwriting the global state rule to filter out Any TLP.

Example 12

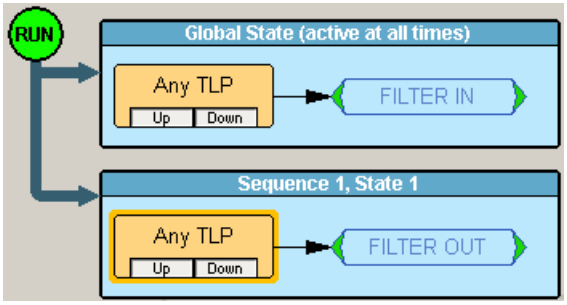

Result: Empty CATC Trace.

Reason: The sequence rule to filter out Any TLP is not contradicting the global state rule to filter in Any TLP. Both rules are applied. (The global rule filters out DLLPs and Ordered Sets, and the sequence rule filters out TLPs.)

Example 13

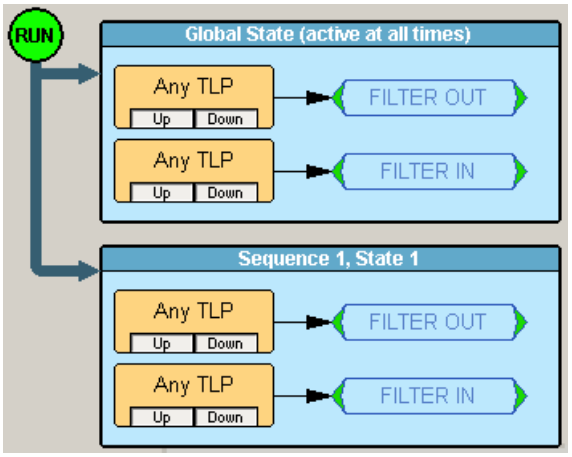

Result: Only TLP (any type) is in the CATC Trace.

Reason: Filter out rules in the global state cell and in the sequence state cell are ignored. The Filter-In Any TLP rule is used.

Example 14

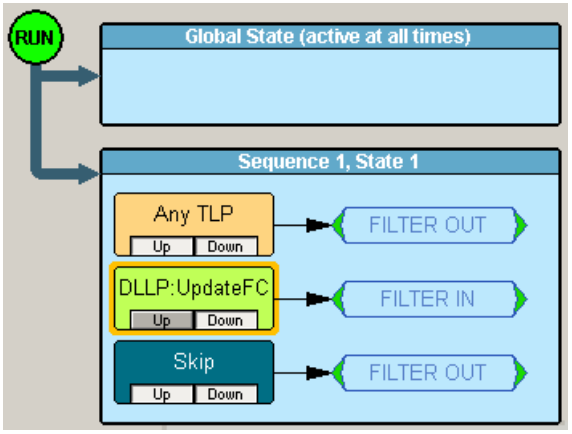

Result: Only DLLP:UpdateFC is in the CATC Trace.

Reason: The Filter out rules are ignored. Filter in DLLP:updateFC rule is used.

Example 15

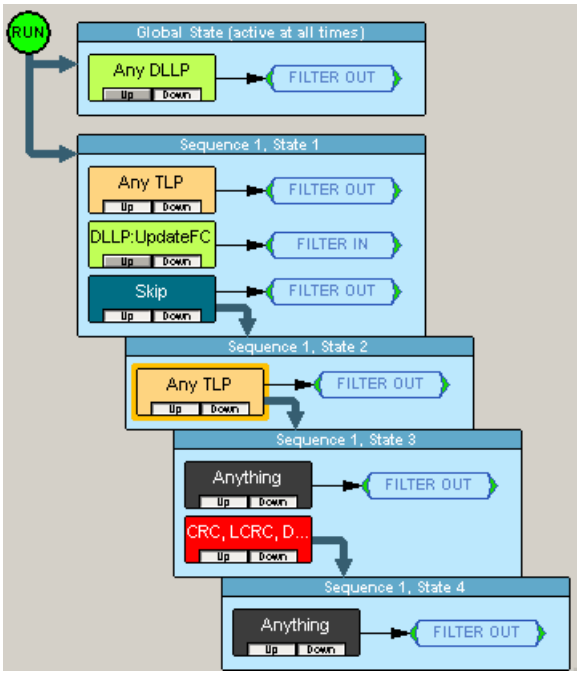

While in state 1: Only DLLP:UpdateFC is in the CATC Trace.

Reason: The Filter out rules are ignored. Filter in DLLP:updateFC rule is used.

While in state 2: Only Ordered Sets are in the CATC Trace.

Reason: Both the sequence state and the global state rules are used, and all TLPs and DLLPs are filtered out.

While in state 3: Nothing is recorded.

While in state 4: Everything is recorded.

Reason: The sequence state rule to filter in anything overwrites global state rule.

Example 16

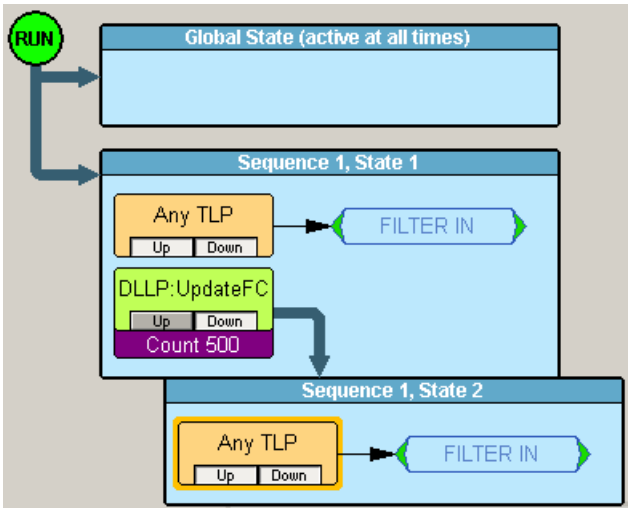

Result: Only TLP (any type) is in the CATC Trace.

Reason: In both states, the rule is to keep only TLP.

Example 17

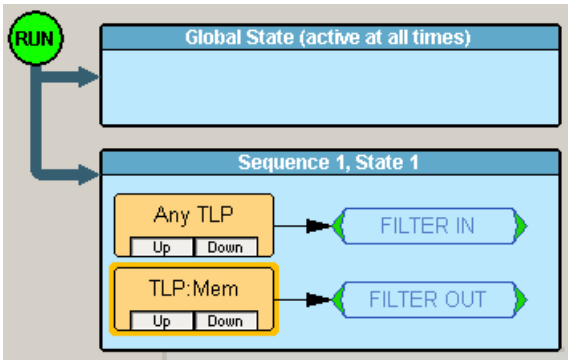

Result: Only TLP (any type) is in the CATC Trace.

Reason: The Filter-out rule is ignored because there is a filter-in rule with a higher priority.

Example 18

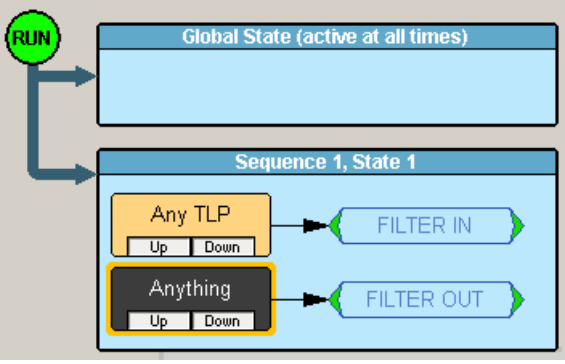

Result: Empty CATC Trace.

Reason: Filter Anything has the highest priority and overwrites filter-in rule.

8.7 Properties Dialog Boxes

Properties dialog boxes provide additional settings for Events, States, Actions, and other objects in the Recording Rules page. You can access a Properties dialog by double-clicking an **Event, State, Action** or other object.

8.8 Event Properties Dialog

The Event Properties dialog presents options for refining triggers and filters. For example, to set a trigger on a specific type of error, you open the Properties dialog

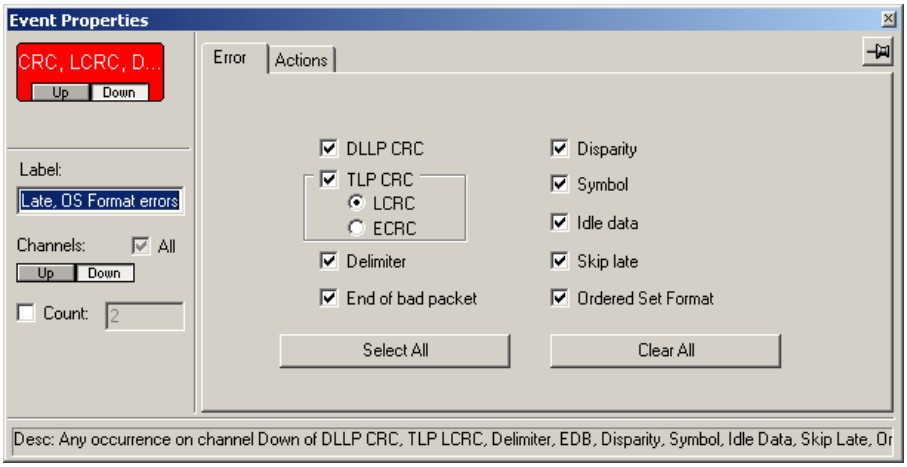

Accessing the Properties Dialog

To see the Properties dialog, first create an event button by clicking the **New Events** button and choosing an event from the menu. Afterwards, open the Event Properties dialog by doing one of the following:

- Double-click an event.
- Right-click an event and select **Properties** from the pop-up menu.
- Click the **Properties** button on the toolbar.

Dialog Settings and Features

Event Icon Preview: This icon shows you which event properties you are editing. The Icon Preview looks exactly like the icon in the Main Display area.

Icon Label: A text box for labeling the button. Whatever you type here appears on the button.

Channels: These controls allow you to select the channel(s) that the Analyzer should search when it is looking for the event.

Count: A counter tells the Analyzer to search for *x* instances of the selected event. For example, if you enter **10**, the Analyzer counts 10 instances of the selected event before it performs whatever action you assign. There are only two counts available in the hardware so if you try to assign more than two, you get a warning. Counters cannot be applied to events with Filter Actions. The maximum counter value is 65,535.

Pin Button: Allows you to **pin** the Properties dialog box to the application so that it does not go away when another object appears such as an event, state or action.

Description String: This area contains a textual description of the event.

Event-specific Settings: The largest part of the Event Properties dialog box. The settings in this area vary for different events. Some events do not have any additional settings (for example, Basic Link Services, Extended Link Services). The Events that do have settings are: Error Event, Data Frame Event, Primitive Event, Advanced Primitive Event, SCSI Command Event, Breakout Board Event, and Timer Event.

Error Properties Dialog

The Error Properties dialog box lets you select specific error types for performing an action. There are two sets of Error types: Packet Errors and Idle Errors.

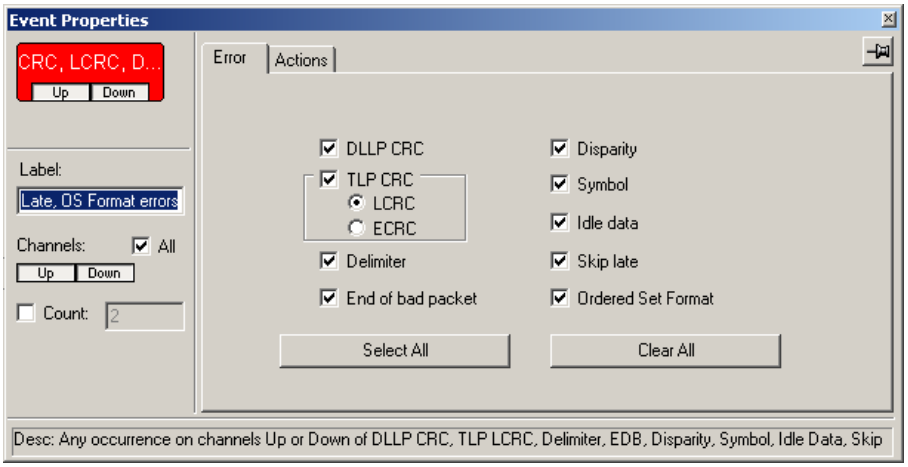

Actions Properties Dialog

The Actions Properties dialog box.

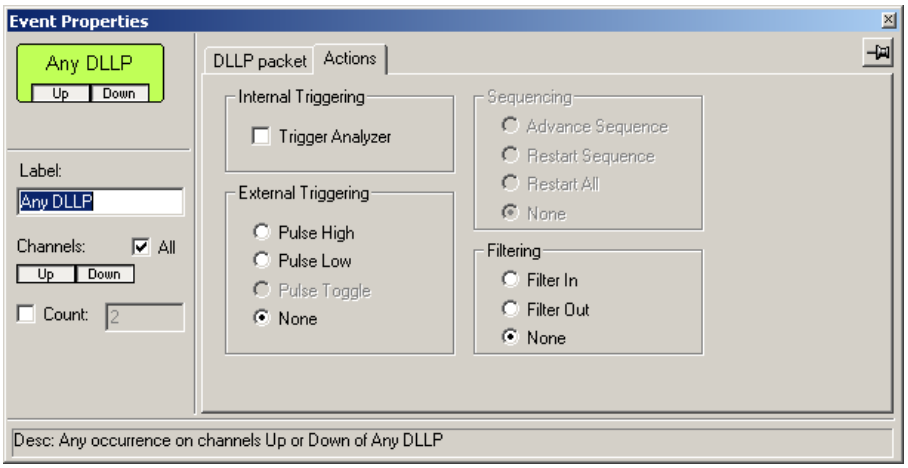

TLP Header Properties Dialog

The TLP Header Properties dialog box.

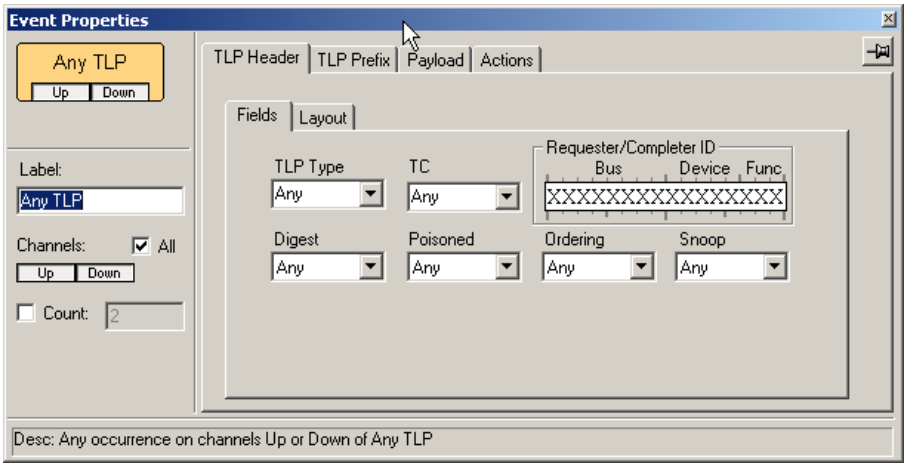

Note: TLP Prefix is available only on Summit T2-16.

TLP Prefix Properties Dialog

The TLP Prefix Properties dialog box.

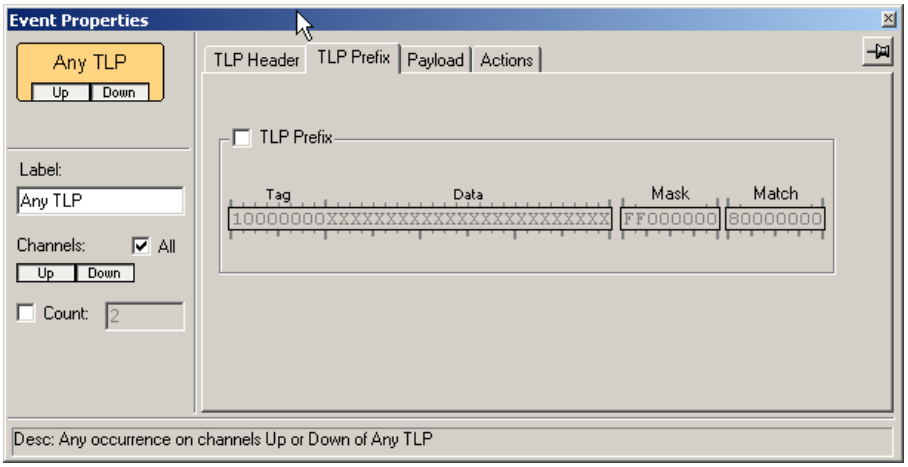

Note: TLP Prefix is available only on Summit T2-16.

Payload Properties Dialog

The Payload Properties dialog box.

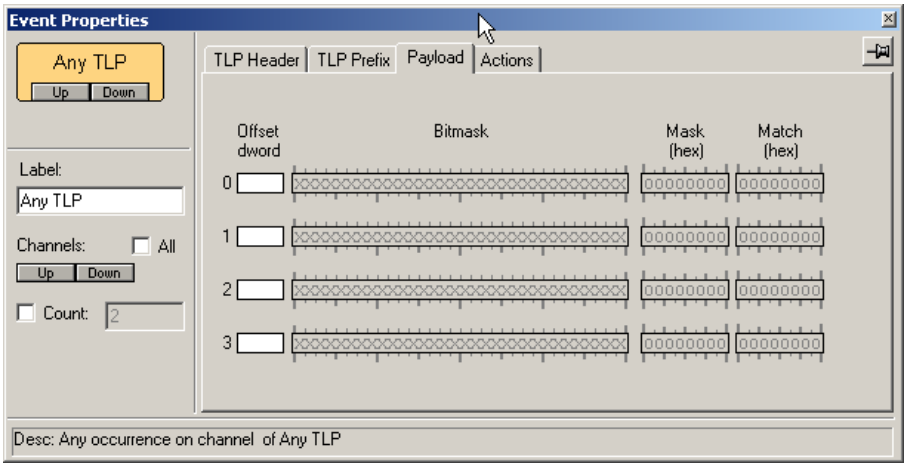

Note: TLP Prefix is available only on Summit T2-16.

DLLP Packet Properties Dialog

The DLLP Packet Properties dialog box.

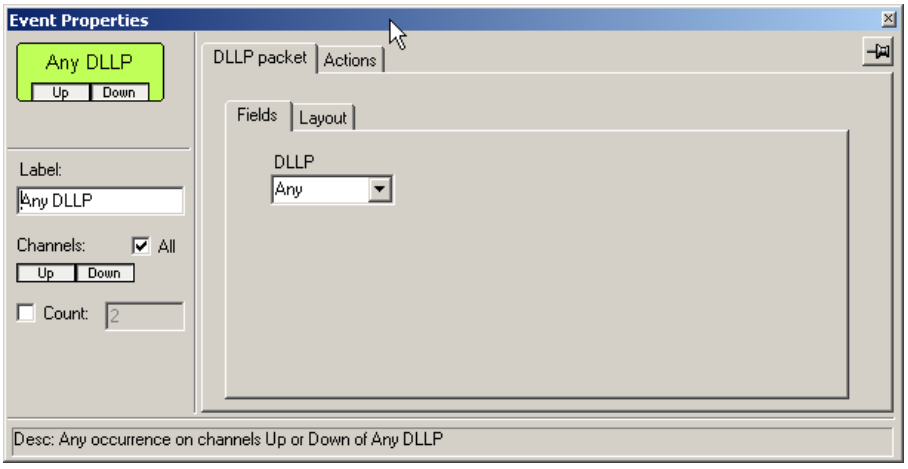

Ordered Set Properties Dialog

The Ordered Set Properties dialog box.

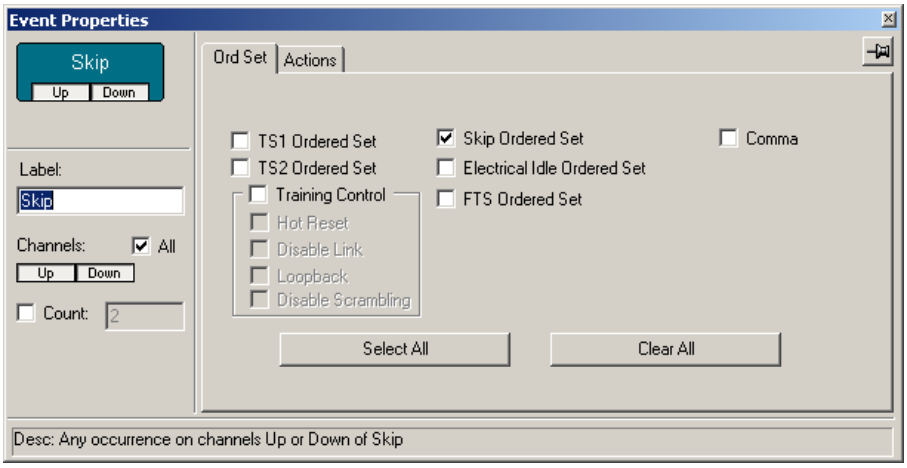

8.9 Counting Events

Triggers can be set on multiple instances of an event. For example, you can set a trigger to occur following five instances of any DLP. To configure the Analyzer to look for multiple events, you enable **Counters**. Counters tell the Analyzer how many occurrences of an event it should wait for before triggering.
For example, **Trigger following the 16th occurrence of an error**.

Counters enable triggers to be set that are based on a count of events. For example, you could use a counter to **Trigger following the 16th occurrence of a DLLP message**

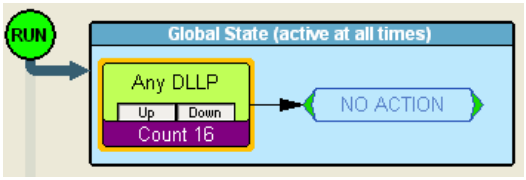

To use a counter, follow these steps:

Step 1 Click an event. This causes an arrow to appear.

Step 2 Click one of the two counters (it does not matter which you use). This causes the counter to attach itself to the bottom of the event (shown above). An arrow automatically connects the counter to the Trigger button.

To change the counter value:

Step 1 Click the small blue dot in the upper-left corner of the counter button. A menu appears.

Step 2 Select **Change Counter Value**.

Step 3 Enter a new value in the pop-up dialog box. This causes the new value to appear in the counter button.

How to Set a Counter

To set a counter:

Step 1 Open the Recording Rules page, select an event, and drag it to the **Global State** or **Sequence** cells. For details on these steps, see “Creating Recording Rules” on page 105.

Step 2 Counts can only be set on a per channel basis, so press the **Up** or **Down** channel buttons to select the channel on which the count is performed.

Step 3 Right-click the selected event and select **Add Counter** from the menu to open the Properties dialog.

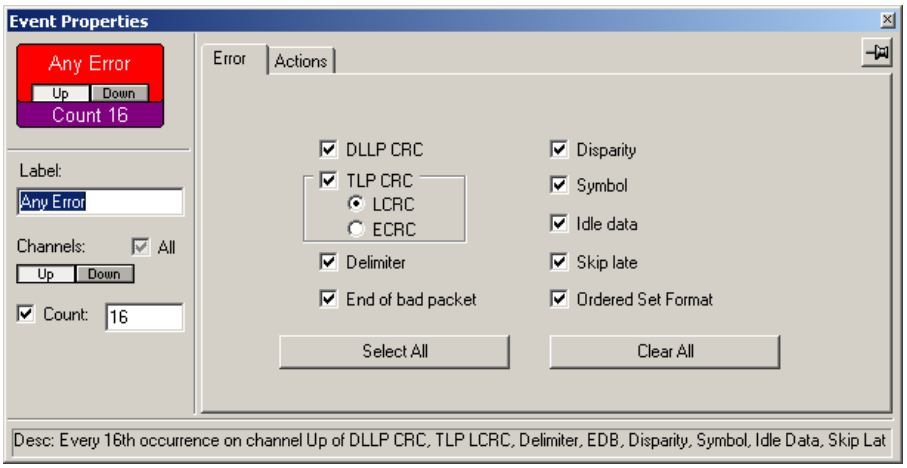

Step 4 In the text box to the right of the label Count enter a value. Make sure the checkbox to the left of the word Count is checked.

Step 5 Click the **X** in the top right corner of the dialog box to close the dialog. A counter button should appear just below your selected event.

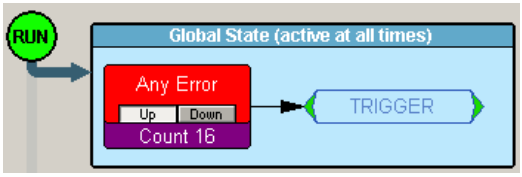

8.10 Creating a Payload Match

You can configure PE*Tracer* to trigger, count, and restart on a specific payload pattern within a Transaction Layer Packet (TLP). In Recording Rules, create a **New** event of the desired TLP type. An icon appears that represents that event type in the Available Events area. Right-click the icon and select **Properties** to bring up the Properties dialog box for the event.

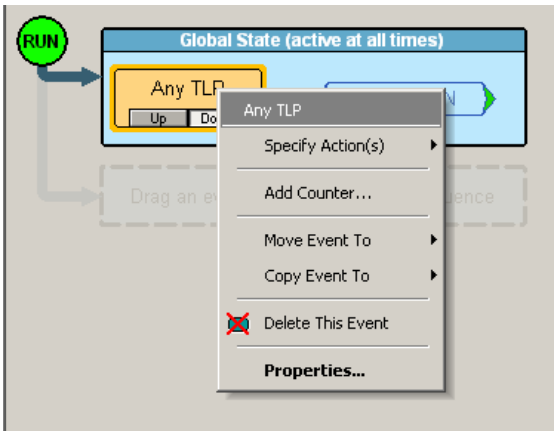

Select the **Payload** tab to bring up the pane that lets you configure payload pattern. You can match up to four patterns, labeled 0 through 3.

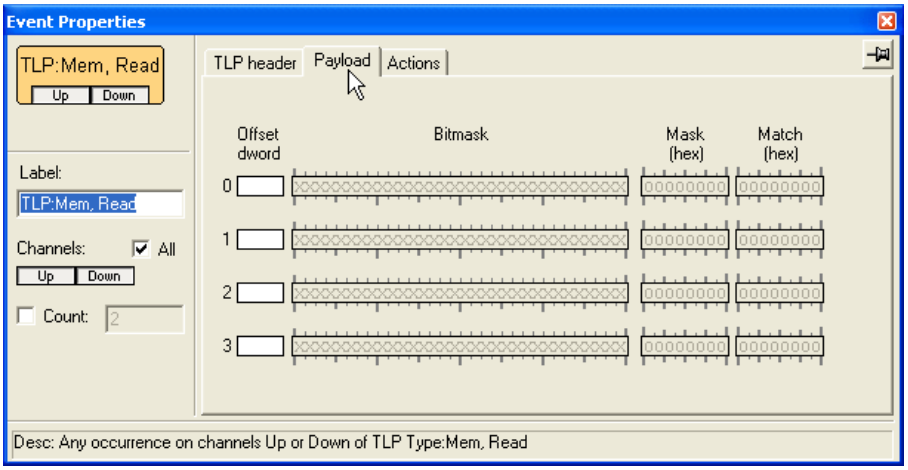

For each pattern, you specify the following:

Offset dword: Indicates the DWORD you want to match within the payload (range is 0 through 1024). For example, if you want the Analyzer match a pattern in the first DWORD of the payload, enter 0. If you want the Analyzer to match a pattern in the thirty-fifth DWORD, enter 35.

Bitmask: Indicates which bits you want to match for the DWORD indicated. You can enter any of the following in the bitmask area:

- X (bit not relevant)
- 1 (present)
- 0 (bit not present)

Note: The Mask (hex) and Match (hex) entries represent bitmask in hex format. As you type entries in the bitmask, corresponding values appear in fields in the hex Mask and Match. Alternately, you can type values in the hex Mask and Match, and corresponding values appear in the bitmask.

Example 1

To tell the Analyzer to trigger on any payload with the binary pattern 1111111 in the third DWORD:

Step 1 Create an **Any TLP** event in the Available Events area of Recording Rules. Drag the event to the **Global State** cell.

Step 2 Open the **Properties** dialog box for the event and bring up the **Payload** pane.

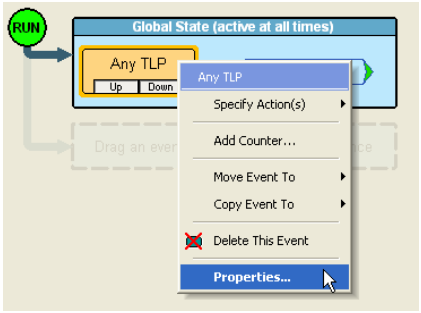

Step 3 Enter **3** in the Offset dword area of any of the four patterns (0 to 3). For purposes of this example, we choose pattern 2.

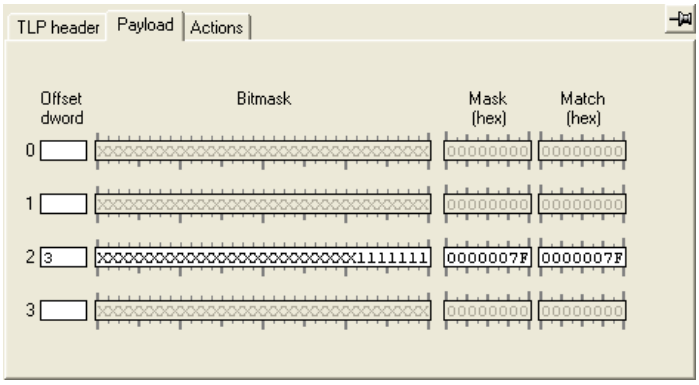

Step 4 Enter the following in pattern 2: **1111111**.

Example 2

To tell the Analyzer to trigger on any payload with the binary pattern 1111111 in the third DWORD, OR to trigger on any occurrence of Memory Write:

Step 1 To set up the first condition, do steps 1 through 4 in Example 1.

Step 2 Create a **Memory Write** event in the Available Events area of Recording Rules. Drag the **Memory Write** icon to the same cell as the **Any Event** icon from Example 1. The Analyzer now is set to trigger on either of the two conditions.

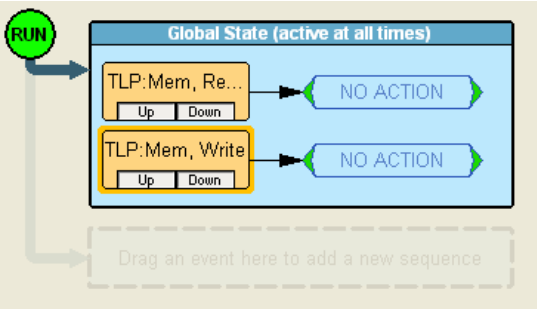

8.11 Trigger

A trigger is one of five actions that can be assigned to an event. (The other four actions are Filter In, Filter Out, Advance the Sequence, and Restart the Sequence.)

To enable a trigger, place an event button into either the **Global State** cell or the **Sequence** cell, then right-click the button and choose an **Action**.

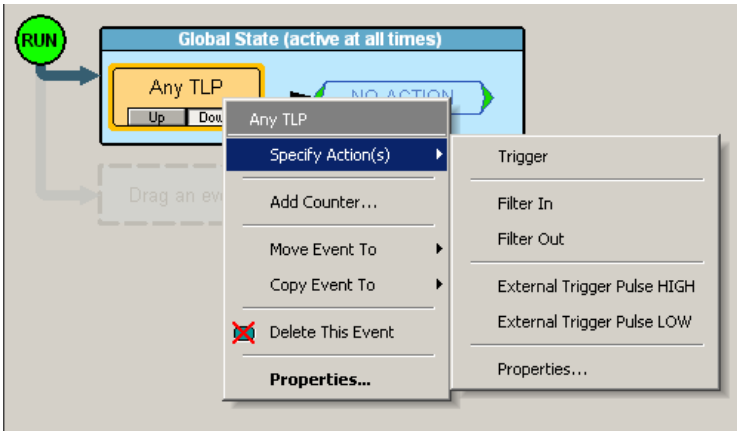

From the sub-menu, select **Trigger**.

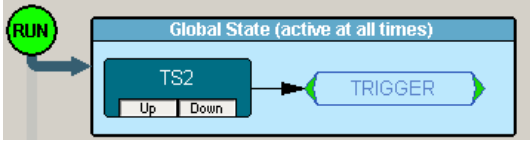

The exact end of the recording depends on how you have set the Trigger Position slider in the General page of the Recording Options dialog. This setting determines whether the recording terminates immediately following a trigger, or some time afterwards. See “General Tab” on page 94 for further explanation.

8.12 Filter In and Filter Out

A filter causes the Analyzer to filter in or out specified events from the recording. If events are filtered out of the recording, they are excluded from the Analyzer's buffer and not simply hidden from the CATC Trace. The purpose of filtering is to preserve recording memory so you conduct longer recording sessions and exclude events that do not interest you.

A filter causes the Analyzer to filter in or out specified events from the recording so you can preserve recording memory and thereby increase the duration of your recording. Filtering also lets you exclude unwanted data so your CATC Trace displays only the traffic that interests you.

To enable or disable filtering, place an event button into either the **Global State** cell or the **Sequence** cell, then right-click the button and choose an **Action** (see previous topic).

From the sub-menu, select **Filter In** or **Filter Out**.

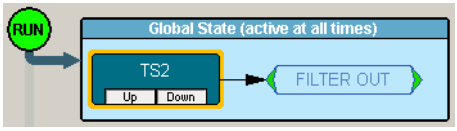

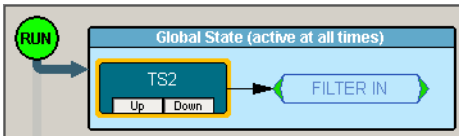

Chapter 9: Reports and Tools

Reports assist you in analyzing traffic recorded by the Analyzer. The available reports are:

- **File Information**: To view general information about the CATC Trace file.
- **Error Summary**: To view a count of errors in a CATC Trace file.
- **Traffic Summary**: To view a summary of protocol-related information in the CATC Trace file summary information about a selected group of items in the CATC Trace file (such as a count of particular frame or packet types).
- **Bus Utilization**: To display information on bandwidth usage for the transmit and receive channels.
- **Link Tracker**: Displays a detailed chronological view of events.
- **Data Flow**: Shows marker, packet, direction, type, length, address, payload, handshake, and timestamp information.
- **Trace Navigator**: Navigates within the CATC Trace to view the location of errors and triggers, narrow the range of traffic on display, and jump to any point in the CATC Trace.
- **LTSSM Flow Graph**: Shows a state diagram of bus activity.
- **Packet Header**: Shows packet header information
- **Packet Data**: Shows packet information.
- **Configuration Space**: Displays a Configuration Space.
- **Metrics**: Measures key operating parameters.
- **Real Time Statistics**: To display statistical information for the channels.
- **TC to VC Mapping**: To display how Traffic Classes are mapped to Virtual Channels (to simplify navigation) and how the CATC Trace display was changed (for example, in Split Transactions).
- **Timing Calculations**: To view timing measured between two events set within the CATC Trace file.
- **Run Verification Scripts**: Allows you to check errors, link transactions, split transactions, metrics, ordered sets,replays, DLLPs, and TLPs.

Reports are available from the Report menu and buttons on the Tool bar. Tools are available from the Tools menu.

9.1 File Information

The File Information window provides a summary on the currently displayed file.

Select **Reports > File Information** to obtain the File Information window.

File Information
File name : Training_x8.pex
Converted to PETracer format from file Training_x8.pex.bak,
Trace occurred : Monday, August 11, 2003 13:40:49
Number of packets: 2281
Trigger packet number: 4
Recorded with 'CATC PETracer' analyzer, version 2.00 (Build 24)
Analyzer Serial Number: 00232
Motherboard: 0x1 Version: 0x3
Firmware version: 1.00 (ROM 70.93)
BusEngine version: 1.00
BusEngine type: 0
UPAS Slot 1 - Part Number: PE801MA, PlugIn ID: 0x24, Version: 0x2
UPAS Slot 2 - Part Number: PE801MA, PlugIn ID: 0x24, Version: 0x2
Number of markers : 1
Base Spec Rev1.0 used during the recording.
License information for the product, Serial Number 00232, used to record this trace file :
Software maintenance expired on 10/01/2004.
Available Features
Feature Title
Purchased
Feature Description
x8 link Recording
Yes
Ability to record x8 traffic
x4 link Recording
Yes
Ability to record x4 traffic
x2 link Recording
Yes
Ability to record x2 traffic
Real-Time Bus Monitoring
Yes
Real-time monitoring (plots and counters) of the PCI Express link
Recording buffer 512 MB
Yes
Recording buffer size limited to 512 Megabytes or less
Recording buffer 1 GB
Yes
Recording buffer size limited to 1 Gigabyte or less
Recording buffer 2 GB
Yes
Recording buffer size 2 Gigabytes (maximum) or less
Recording Rules Sequencer
Yes
Ability to create complex sequences of events and actions for triggering and filtering in Recording Options
Traffic Summary View
Yes
Navigable tables with reports presenting statistics of various events in the trace
Link Tracker View
Yes
A view presenting time based display of both directions of the PCI Express link
Graphical Bus Utilization View
Yes
A view presenting plots of various performance and utilization measurements for the trace over time
Metric-based performance
Yes
Metric-based performance measurements - calculating of various performance metrics for Link and Split transactions, display of the metrics in Trace View, Traffic Summary reports and Bus Utilization graphs based on metrics, timing calculations based on
Save As...
Close

9.2 Error Summary

The Error Summary dialog box displays the number of errors for each event and the packet containing the errors.

Select **Reports > Error Summary** to obtain the Error Summary dialog box.

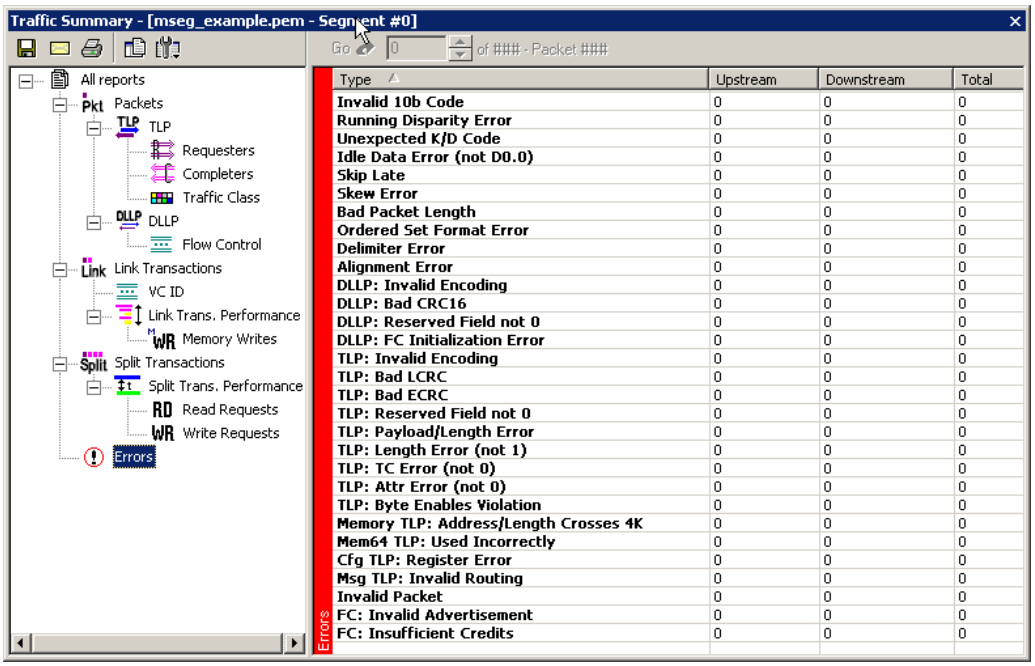
Traffic Summary - [mseg_example.pem - Segment #0]
Go
0
of ### - Packet ###
All reports
Packets
TLP
Requesters
Completers
Traffic Class
DLLP
Flow Control
Link Transactions
VC ID
Link Trans. Performance
Memory Writes
Split Transactions
Split Trans. Performance
Read Requests
Write Requests
Errors
Type
Upstream
Downstream
Total
Invalid 10b Code 0 0 0
Running Disparity Error 0 0 0
Unexpected K/D Code 0 0 0
Idle Data Error (not D0.0) 0 0 0
Skip Late 0 0 0
Skew Error 0 0 0
Bad Packet Length 0 0 0
Ordered Set Format Error 0 0 0
Delimiter Error 0 0 0
Alignment Error 0 0 0
DLLP: Invalid Encoding 0 0 0
DLLP: Bad CRC16 0 0 0
DLLP: Reserved Field not 0 0 0 0
DLLP: FC Initialization Error 0 0 0
TLP: Invalid Encoding 0 0 0
TLP: Bad LCRC 0 0 0
TLP: Bad ECRC 0 0 0
TLP: Reserved Field not 0 0 0 0
TLP: Payload/Length Error 0 0 0
TLP: Length Error (not 1) 0 0 0
TLP: TC Error (not 0) 0 0 0
TLP: Attr Error (not 0) 0 0 0
TLP: Byte Enables Violation 0 0 0
Memory TLP: Address/Length Crosses 4K 0 0 0
Mem64 TLP: Used Incorrectly 0 0 0
Cfg TLP: Register Error 0 0 0
Msg TLP: Invalid Routing 0 0 0
Invalid Packet 0 0 0
FC: Invalid Advertisement 0 0 0
FC: Insufficient Credits 0 0 0
Errors

9.3 Traffic Summary

The Traffic Summary window summarizes the traffic in the current CATC Trace. The left side of the window displays a tree of protocol levels. The right side displays a summary of traffic for the displayed levels.

Select **Reports > Traffic Summary** or click to display the Traffic Summary window.

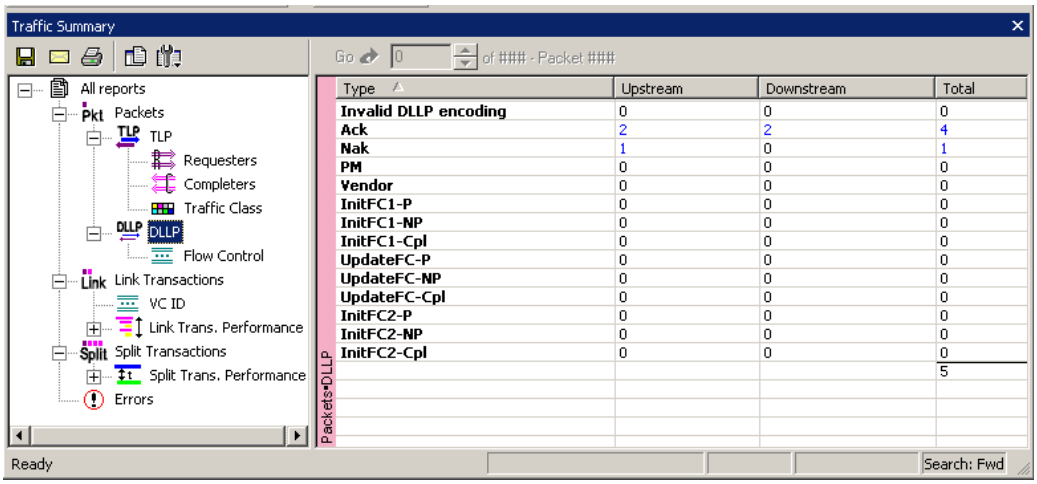

Buttons at the top of the Traffic Summary window change the display format and enable data to be exported to email, file, or the printer.

Using the Traffic Summary Window to Search the CATC Trace

You can use the Traffic Summary window to move the CATC Trace to packets of interest:

Step 1 Click one of the numbers in the right side of the Traffic Summary window.

The CATC Trace jumps to the first instance of the selected protocol.

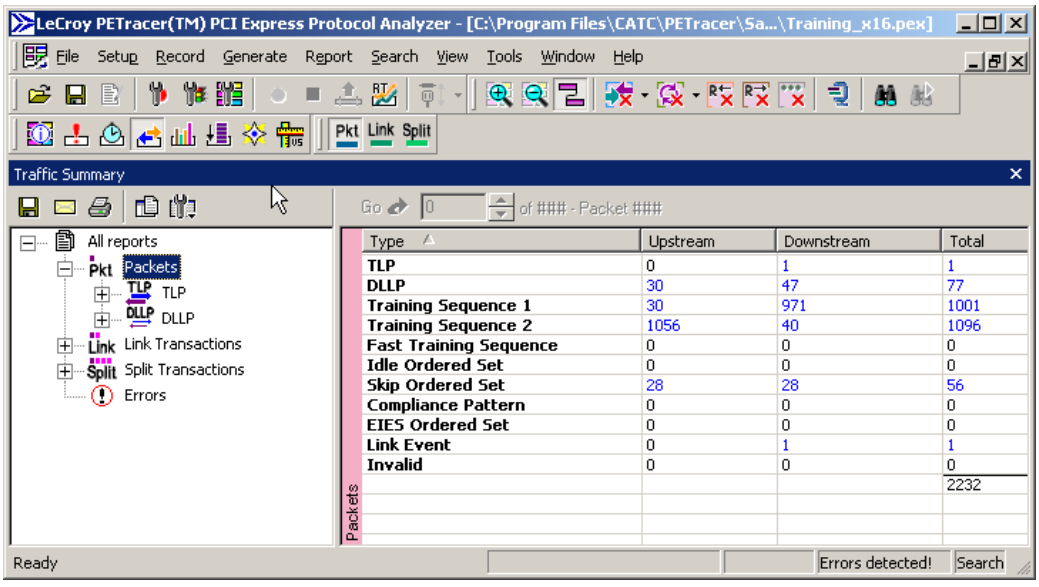

Step 2 Click the **up** or **down** arrows

. The CATC Trace jumps forward or backward through the display to the next instance of selected protocol level.

Traffic Summary Buttons

Buttons at the top of the Traffic Summary dialog box provide options for exporting the data or formatting its appearance:

Save. Saves Traffic Summary results into an HTML format.

Email. Attaches an HTML file of the results to a new email.

Print. Prints results.

Text. Displays results in HTML format.

Options. Opens a drop-down menu with the following options:

- **Grid Lines**: Displays/Hides grid lines
- **Row Selection**: Allows entire rows to be selected
- **Tight Columns**: Reformats column widths to match data
- **Event Navigation**:

  Skip Hidden Items

  Show Hidden Items

  Prompt each time

9.4 Bus Utilization

Select **Report > Bus Utilization** from the menu or press to open the Bus Utilization window.

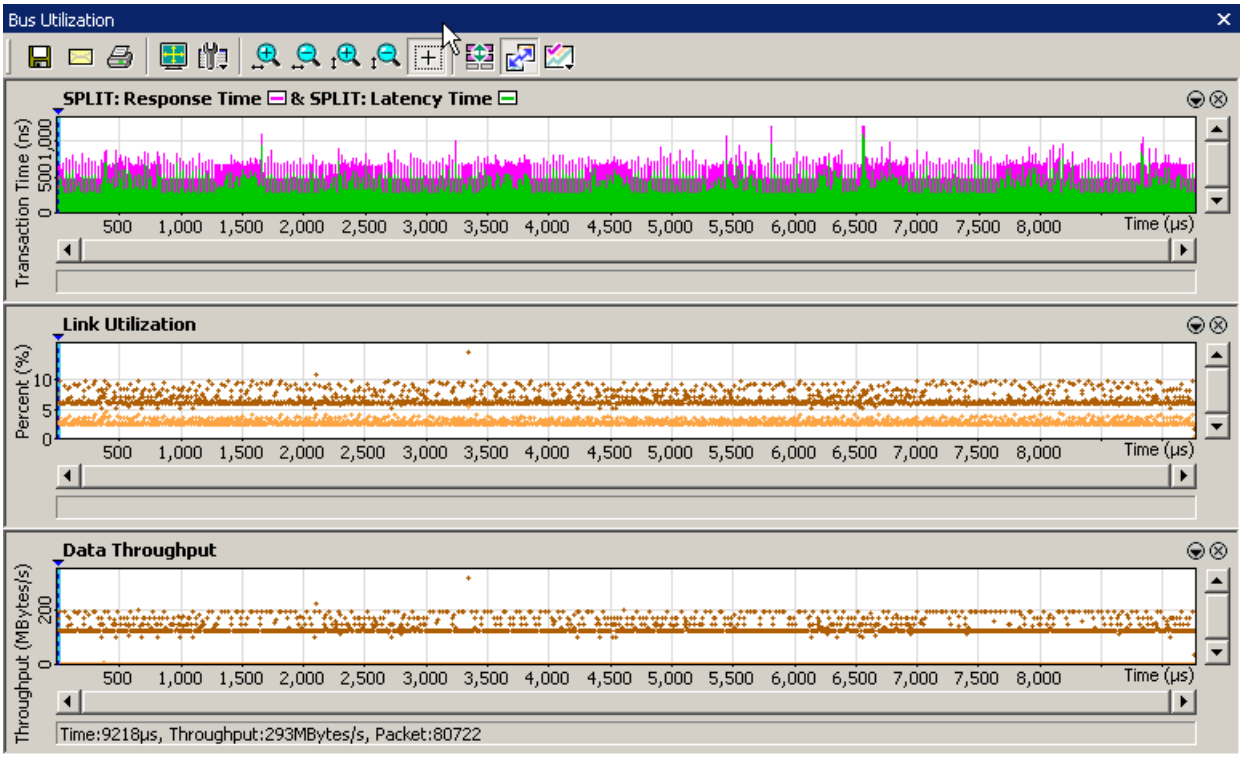

The Bus Utilization window displays information on bandwidth use for the transmit and receive channels.

Bus Utilization Pop-up Menu

You can reformat the display by right-clicking a graph and making a selection from the Bus Utilization pop-up menu.

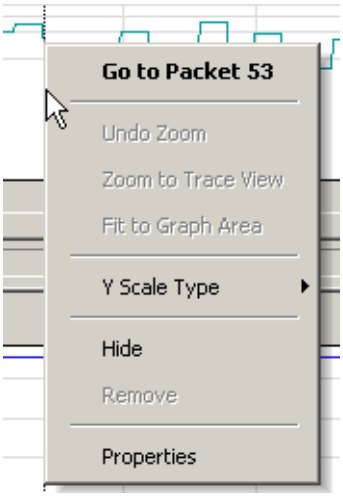

Go to Packet #: Relocates the CATC Trace to the selected packet number.

Undo Zoom: If you have zoomed in, this command undoes the zoom.

Zoom to Trace View: Zooms in on graph to show traffic currently displayed in the CATC Trace screen.

Fit to Graph Area: Redisplays graph so that the entire CATC Trace fits inside graph area.

Y Scale Type:

- **Linear**: Converts display to linear format
- **Logarithmic**: Converts display to logarithmic format

Hide: Hides the selected graph

Remove: Allows you to remove any graph that you created via the **New** command

Properties: Opens a dialog box with options for changing the Title, Type, Appearance, and Color of the graphs.

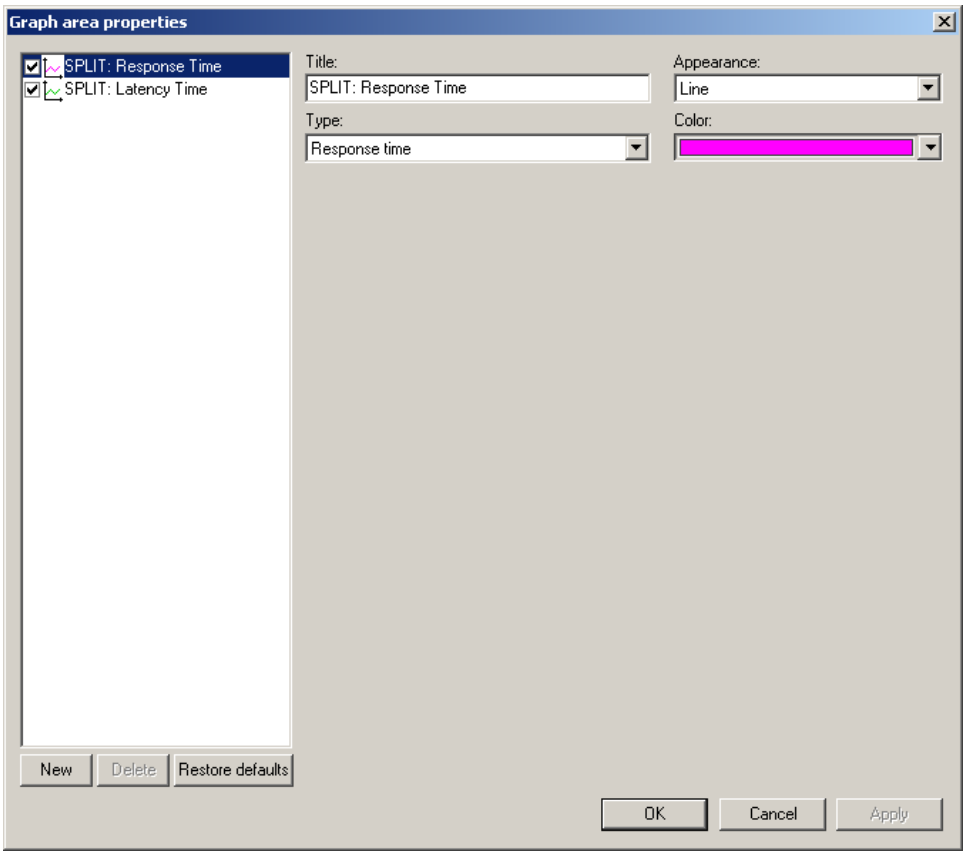

Bus Utilization Buttons

The Bus Utilization window buttons allow you to reformat the display and export data.

Button	Function
	Save. Saves Bus Utilization data to a bitmap file (***.bmp**).
	Email. Opens an email and attaches a bitmap file of the Bus Utilization data.
	Print. Prints the Bus Utilization data.
	Full Screen. Maximizes the Bus Utilization window.
	View Settings. Opens a sub-menu with the following choices: • Orient Horizontally • Tile Vertically • Show Markers • Show Plumbline • Status >> Bar Tool tips None • Grid Lines >> Both Axes X Axis Y Axis No Grid • Grid on Top • Fonts & Colors
	Horizontal zoom in
	Horizontal zoom out

Vertical zoom in

Vertical zoom out

Click and Drag zoom. Click and drag to zoom in on a part of the graph.

Select Range. Displays a dialog box for selecting a packet range.

Synchronize Graph Areas. If two or more graphs are displayed, this button synchronizes the graphs to one another. Once synchronized, the positioning slider of one graph moves the other graphs.

Graph Areas. Provides options for creating and displaying additional graphs of data lengths, packet lengths, and percentage of bus used.

9.5 Link Tracker

The Link Tracker window displays a detailed chronological view of events. Events are shown on a channel-by-channel basis in columns within the window.

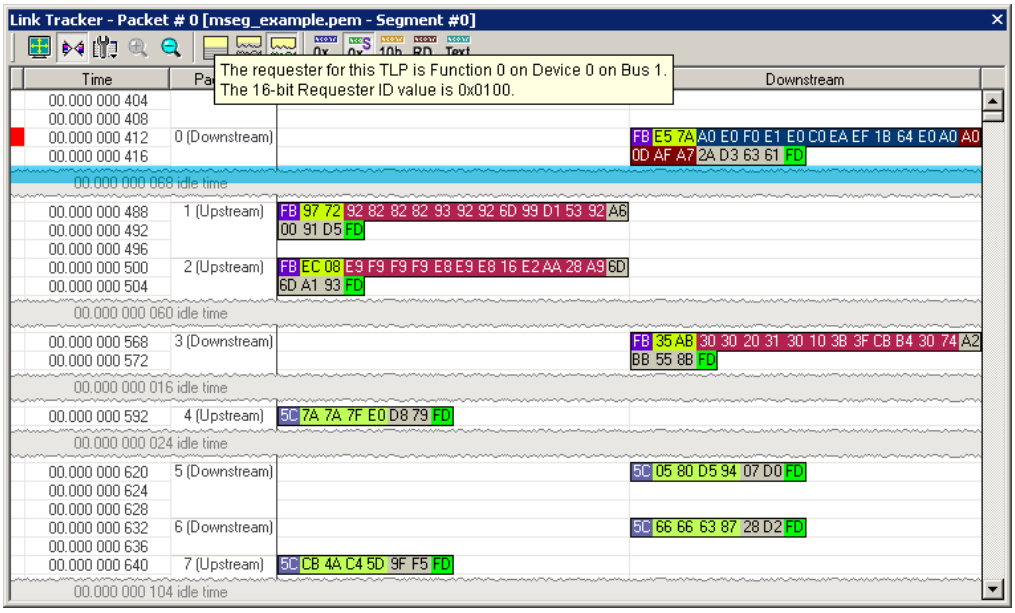

Each time slot in the vertical axis represents the minimum time that a DWORD requires to traverse the bus.

Toolbar: Presents buttons for changing the format of the Link Tracker window.

Main Display Area: Displays traffic chronologically as it occurred in the recording. The window divides into columns: the first column shows time and traffic is shown on a channel-by-channel basis in the columns on the right.

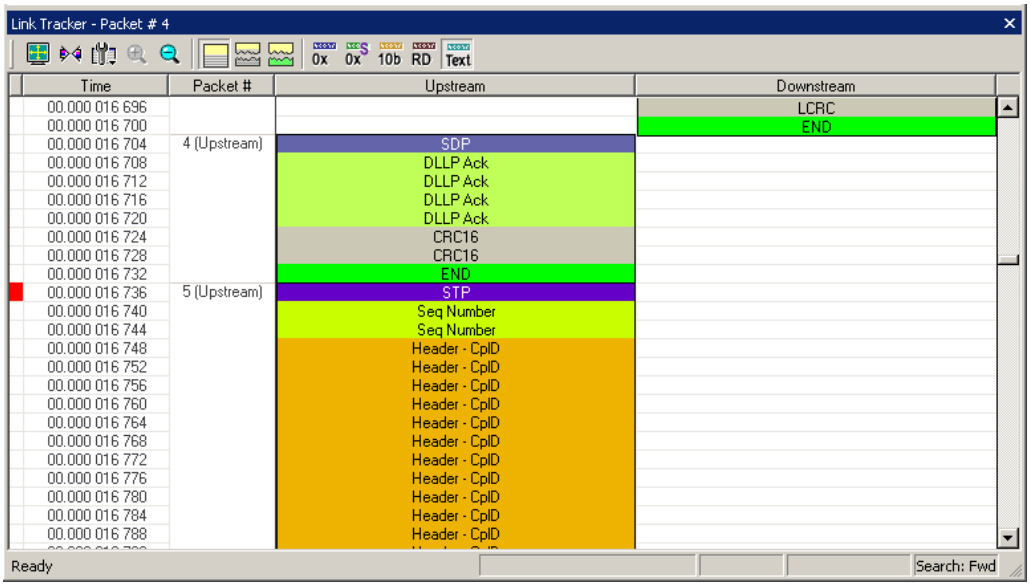

Using the Link Tracker Window

The Link Tracker window can be reformatted in several ways.

Zooming In and Out

Zooming out can give you a quick, high-level view of a CATC Trace. A fully zoomed out CATC Trace only shows columns and colored lines. Using the colors, you can see what types of traffic run through the CATC Trace.

Further information can be obtained on any point of interest in the CATC Trace by positioning your mouse pointer over it. Tool tips provide detailed description of events.

Note: When fully zoomed out, the smallest graphical unit is the DWORD, represented by a single line. Zooming out makes the CATC Trace appear smaller and increases the time scale in the first column.

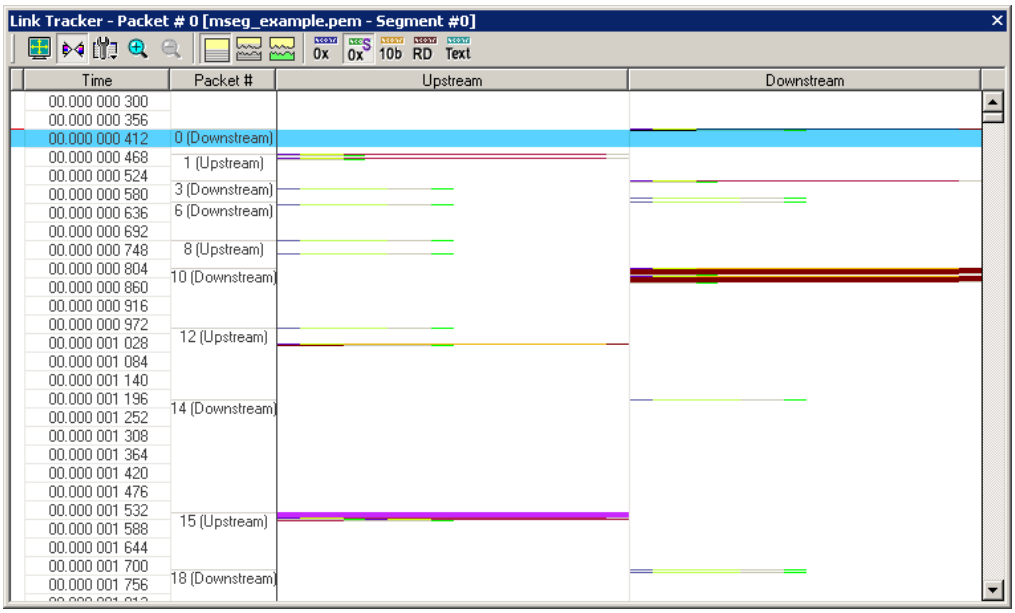

Collapsing Idle Time, Enabling Tool tips, and Resetting Column Widths

Click the **View Options** button to open a menu with options for formatting the display. Three options are presented:

Collapsible Idle Time: Opens a dialog box for setting the Idle time value. Setting a value tells the Analyzer when to collapse Idle times and display them as grayed out strips within the Bus View window.

Tooltip Display: Opens a menu with options for adding content to Tooltips. Tooltips display when you position the mouse pointer over an item in the Bus View window. The options are:

- Tooltips Display Values
- Tooltips Display Scrambled Values
- Tooltips Display 10-bit Codes
- Tooltips Display Symbols

Time Format: Seconds or Clock

Reset Column Widths: This option resets column widths to their defaults and enables columns to resize themselves automatically any time the application window is resized. Normally, columns automatically resize themselves if the application window is made larger or smaller. However, if you manually resize any columns in the Bus View window, column widths become static. Thereafter, if you resize the application window, the Bus View columns do not adjust automatically. Reset Column Widths re-enables the automatic resizing capability.

Reset Columns Order: Return to default column sequence.

Docking and Undocking the Window

You can undock the Link Tracker window by double-clicking the blue title bar along the left side of the window. Once undocked, the window can be dragged anywhere in the application. To redock, double-click again on the title bar.

Setting Markers

Markers can be set on any event within the Link Tracker window.

To set a marker, right-click an event, then select **Set Marker** from the pop-up menu.

Once marked, you can navigate to events with the **Go to Marker** command in the Search menu.

Markers set in the Link Tracker window display the packet number and DWORD number. In contrast, markers set in the CATC Trace window just show the packet number.

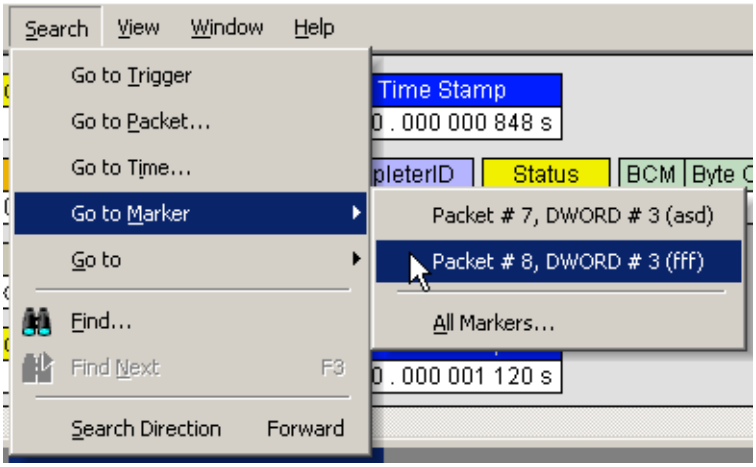

Calculating Time between DWORDs

You can calculate time between DWORDs by clicking an event and then positioning your mouse pointer over a second event and reading the ensuing Tool tip.

Click the **time value** for the first event. Scroll down through the CATC Trace to the second event and position the mouse pointer above its time value. A Tool tip appears showing the time interval between the first and second events.

Hiding Traffic

You can hide Idles and other data from the Link Tracker window by clicking the **Hide** buttons on the toolbar.

Link Tracker Buttons

The Link Tracker window has a row of buttons for changing the format of the displayed data and for exporting data: The buttons have the following functions:

Full Screen. Expands the Link Tracker window to fill the entire screen.

View Options. Opens a menu with three options:

- **Collapsible Idle Time** (Collapse Idle Bigger Than **n** nanoseconds. **Note:** Does not affect Collapse Idle Plus.)
- **Tooltip Display** (Values, Scrambled Values, 10-bit Codes, Symbols)
- **Time Format** (Seconds, Clock)
- **Reset Columns Widths** (return to default widths)
- **Reset Columns Order** (return to default column sequence)

See “Using the Link Tracker Window” on page 138 for further details.

Synchronize Trace View. Synchronizes the Trace View and Link Tracker windows so that a move in one window repositions the other.
Because of the differences in scale and logic between the Link Tracker and Trace view window, scrolling produces different effects depending on which window is being scrolled.
Scrolling in the CATC Trace window causes the Link Tracker window to rapidly jump from event to event. Long periods of idle time are thus skipped.
Scrolling in the Link Tracker window, in contrast, produces modest movements within the CATC Trace window.
Scrolling in the Link Tracker window causes the CATC Trace window to pause until the beginning of a packet is displayed. At that point, the CATC Trace window repositions itself. While scrolling long Idle periods or through the contents of a packet, the CATC Trace window does not move.

Zoom In

Zoom Out

Continuous Time Scale. No collapsing.

Collapse Idle. Do not show some periods of Link being idle.

Collapse Idle Plus. Do not show periods of Link being idle.

Show Values

Show Scrambled Values

Show 10b Codes

Show Symbols

Show Text

9.6 Data Flow Window

The Data Flow window shows marker, packet, direction, type, length, address, payload, handshake, and timestamp information.

To obtain the Data Flow window, select **Report > Data Flow**

or click the Data Flow toolbar icon.

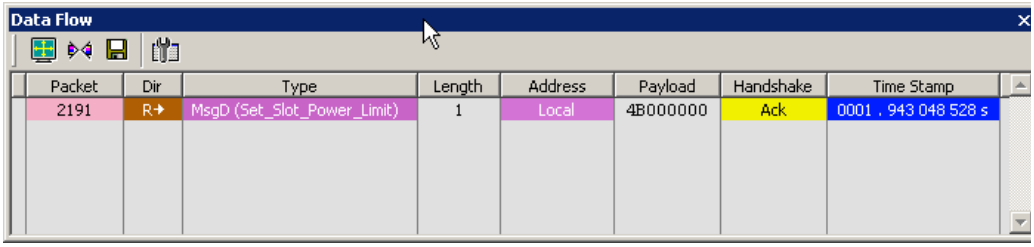

The toolbar allows you to:

- Expand the window to full screen or Collapse to a smaller window.
- Synchronize.
- Save.
- Select Data Flow columns to display and their widths:
  - Marker
  - Packet
  - Direction
  - Type
  - Length
  - Address
  - Payload
  - Handshake
  - Time Stamp

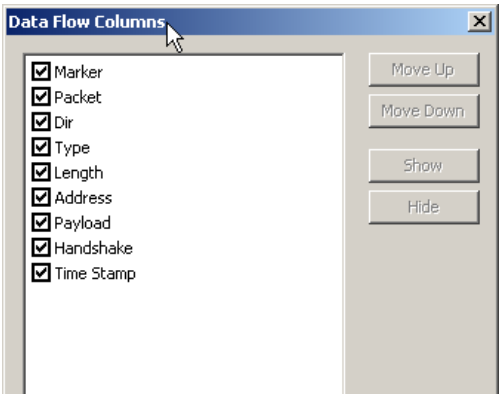

9.7 Using the Trace Navigator

The trace Navigator is a tool for navigating within the CATC Trace. It allows you to view the location of errors and triggers in a CATC Trace and to narrow the range of traffic on display. It also allows you to quickly jump to any point in the CATC Trace.

Displaying the Navigator

Click in the toolbar to display the Navigator. The Navigator appears on the right side of the Main window. It has a two-button toolbar and a vertical slider bar. It also has colored panes for navigating the CATC Trace in different ways. You set which panes are displayed through Navigator pop-up menus.

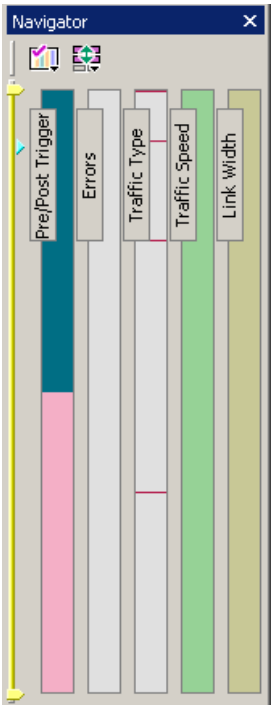

Navigator Toolbar

The Navigator toolbar lets you quickly set Navigator features. The toolbar has two buttons.

Navigator Ranges: This button brings up a pop-up menu that lets you reset the Navigator range. The range determines what packets are viewable in the CATC Trace display.

Navigator Panes: This button has two purposes: To select which Navigator panes appear and to bring up the Navigator legend. The legend determines how information is shown in the panes.

Navigator Ranges

You set the viewing range by dragging the **yellow range delimiters** along the slider.

To set the lowest packet viewable, drag the **top delimiter up**. As you do so, a tool tip appears to indicate the current range. Stop dragging when you reach the desired lowest packet.

To set the highest packet viewable, drag the **bottom delimiter down**. Stop when the tool tip indicates you are at the desired highest packet.

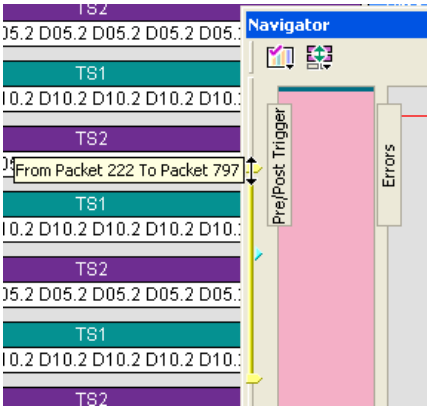

To Determine Current Position

In addition to the two range delimiters, the slider has a **blue current-position** indicator (see above). The current-position indicator shows where you are in the CATC Trace display with respect to the possible viewing range.

For example, suppose you set viewing range to packet 0 through packet 500 (the top range delimiter is at packet 0, and the bottom range delimiter is at packet 500). If you then move the current-position indicator on the slider to midway between the top and bottom delimiters, then packet 250 appears in the middle of the CATC Trace display.

To Reset Navigator Range

You can reset the Navigator range using the toolbar **Navigator Range** button. Press the button to bring up the Navigator Range drop-down menu.

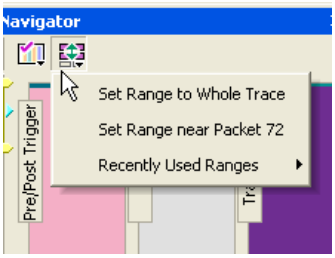

The menu has the following options:

- **Set Range to Whole Trace**: Allows you to reset the range to include the entire CATC Trace file contents. The top range delimiter is placed at the lowest packet number in the CATC Trace. The bottom range delimiter is placed at the highest packet number in the CATC Trace.
- **Set Range Near Packet xxx**: Allows you to collapse the range so that only the packets immediately above and below the xxx packet are displayed. The xxx packet is whatever packet is currently at the top in the CATC Trace display.
- **Recently Used Ranges**: Allows you to reset the range to any of a number of recently used (previously set) ranges.

Navigator Panes

You can display any combination of CATC Trace Navigator panes.

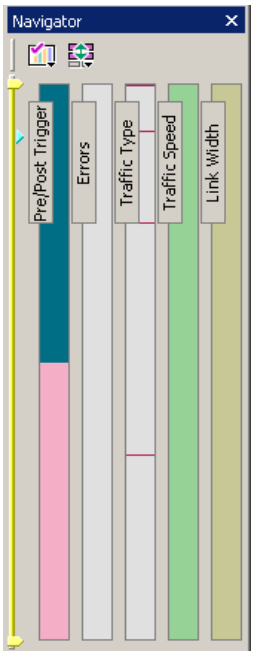

From left to right, the panes are: Pre/Post Trigger, Errors, Traffic Type, Traffic Speed, and Link Width. Each pane represents the entire CATC Trace with respect to different types of information. The top of each pane represents the start of the CATC Trace file, and the bottom represents the end of the CATC Trace file.

- **Pre/Post Trigger:** To view the trigger event in the CATC Trace and the relative size of pre-trigger and post-trigger portions of the CATC Trace. The two portions are set apart as different colors. The trigger event occurs at the point the two colors meet.
- **Errors:** To view any errors in the CATC Trace. A thin red line represents each error in the pane.
- **Traffic Type:** To view the types of packets that occur in the CATC Trace. A different color represents each packet type in the pane. The relative size of colored portions in the pane corresponds to the amounts of the various packet types in the CATC Trace. As described below, you can use the Navigator legend to change the types of packets that take precedence in the display.
- **Traffic Speed:** To view the speed that occurs in the CATC Trace.
- **Link Width:** To view the link width that occurs in the CATC Trace.

To Show/Hide Navigator Panes

You can show/hide any of the panes using pop-up menus accessible through left-click the **Navigator Panes** button or by right-click anywhere in any CATC Trace Navigator pane.

Navigator Slider

The Navigator slider appears at the left of Navigator panes. The slider has **yellow upper and lower range delimiters** and a **blue current-position** indicator.

The Navigator slider lets you to set the range of packets viewable in the CATC Trace display. In other words, it sets scrolling range of the display. You can scroll the display up to the lowest packet number in the viewing range. You can scroll the display down to the highest packet number in the viewing range.

Trace Navigator Legend

The Navigator legend lets you control the display of content in Navigator panes.

You bring up the legend through the Navigator Panes drop-down menu. Press the toolbar **Navigator Panes** button to access the menu. Select the **Legend** option to bring up the Navigator Legend dialog box.

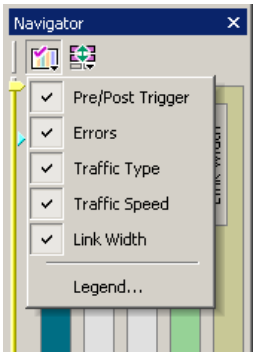

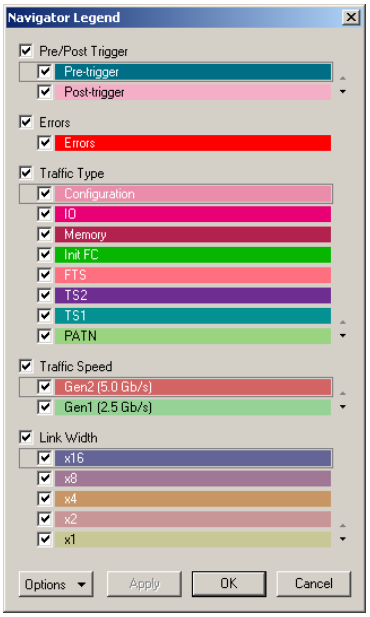

The Navigator Legend dialog box has areas corresponding to each of the panes. Each area has check boxes that allow you to hide/display information in the pane. You can set the priority of information displayed in the panes using the up and down triangles on the right.

Using the Legend to Show/Hide Navigator Panes

To use the legend to show/hide an entire pane, use the **checkbox** next to the name of each pane in the legend.

In the case of the Pre/Post Trigger and Errors areas, the action of show/hide in the legend is identical to that provided by Trace Navigator pop-up menus.

In the case of the Traffic Types pane, there is no equivalent show/hide available through the pop-up menus.

Using the Legend to Set the Priority of Information Display

You can use the legend to set the priority of information displayed in the Pre/Post Trigger Traffic Type panes. This is a two-step process.

Step 1 For a particular item in a pane, click the **column next to the checkbox** for the item. That labels the item as currently active.

Step 2 Next, use the **up-down** at the lower-right of the area to move the item higher or lower in priority.

In the case of the Traffic Type pane, priority determines display priority of each packet type. For portions of the CATC Trace that are dominated by a particular packet type, this setting no effect: only the color corresponding to that packet type is displayed in that portion of the pane. Suppose, however, that part of the CATC Trace includes equal or near equal numbers of several types of packets. In that case, you can use the legend to select which among those types is represented in that portion of the Traffic Types pane. This allows you to view only packets of interest in crowded portions of the CATC Trace display.

9.8 LTSSM Flow Graph

The LTSSM Flow Graph shows link state transitions that the link goes through, as recorded in the CATC Trace file.

To obtain the LTSSM Flow Graph, select **View > LTSSM Flow Graph**.

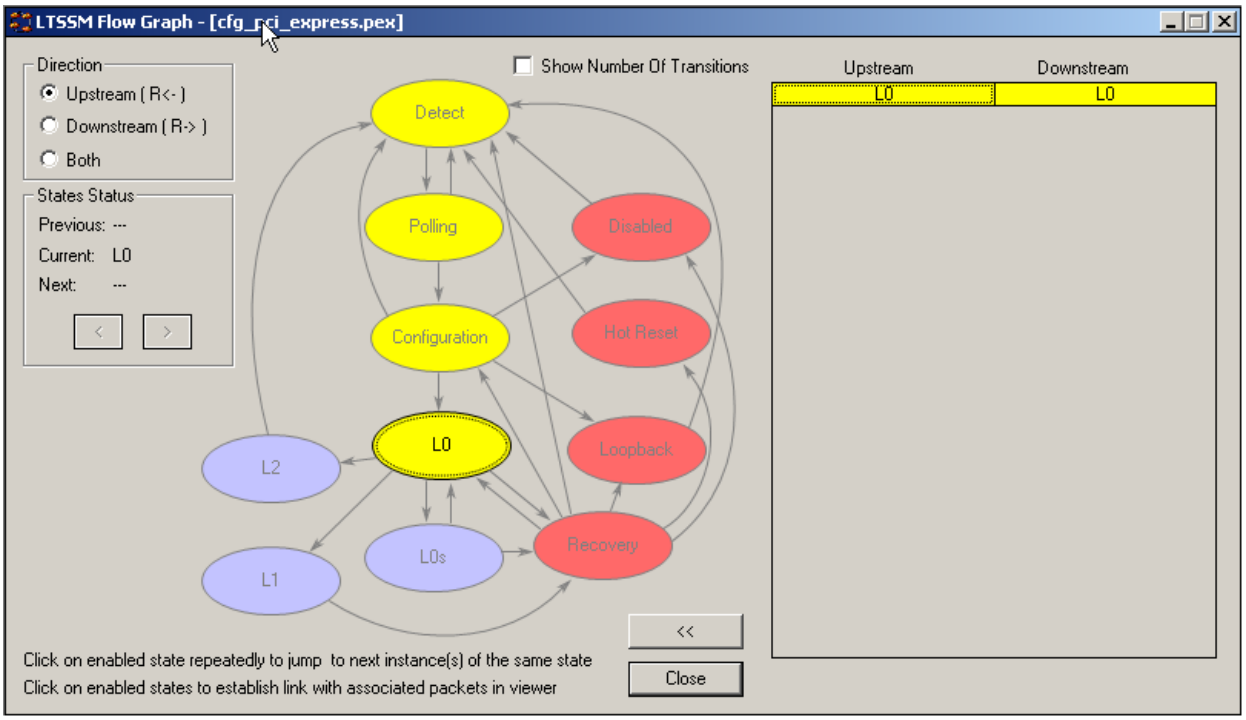

You can display the following directions:

- **Upstream**
- **Downstream**
- **Both**

You can **Show Number of Transitions**.

9.9 Packet Header Bar

The Packet Header bar shows packet header information.

To obtain the Packet Header bar, select **Report > Packet Header**

or click the Packet Header toolbar icon.

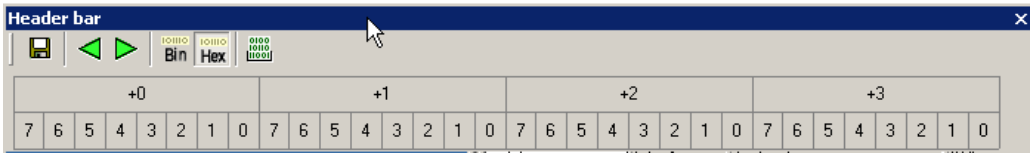

The toolbar allows you to Save, go to Previous or Next, display Hexadecimal or Binary, and show the Packet Data window.

9.10 Packet Data Window

The Packet Data window shows packet information.

To obtain the Packet Data window, select **Report > Packet Data**

or click the toolbar icon.

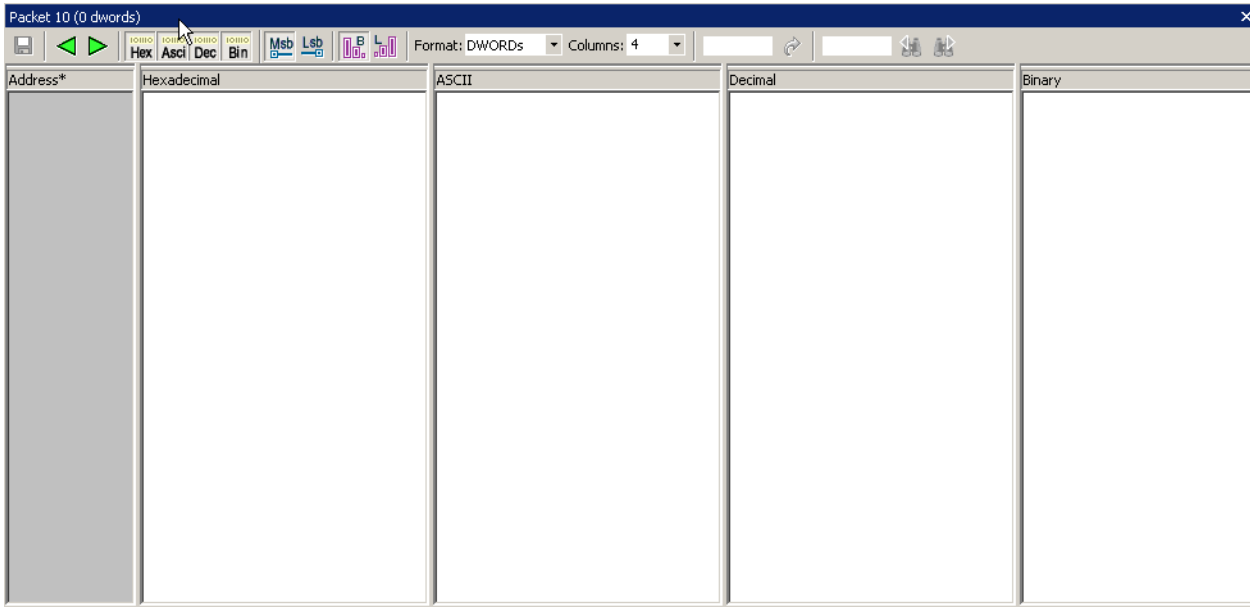

The toolbar allows you to Save; go to Previous or Next; display Hexadecimal, ASCII, Decimal, or Binary; use MSB Format or LSB Format; and use Big Endian or Little Endian.

Format and Columns allows you to enter the number of bytes, words, or dwords per line.

You can enter an Offset and scroll to it.

You can enter text and Search Previous or Search Next.

9.11 Configuration Space View

The Configuration Space View displays information about the Configuration Space state as of the current packet of the currently selected device. The view shows the Configuration Space Header and the PCI-compatible or PCI Express Capability Structures.

To display the Configuration Space View for a device at a packet:

Step 1 Open a CATC Trace, such as the sample file **cfg_pci_express.pex**.

Step 2 Scroll to a packet with a Configuration header.

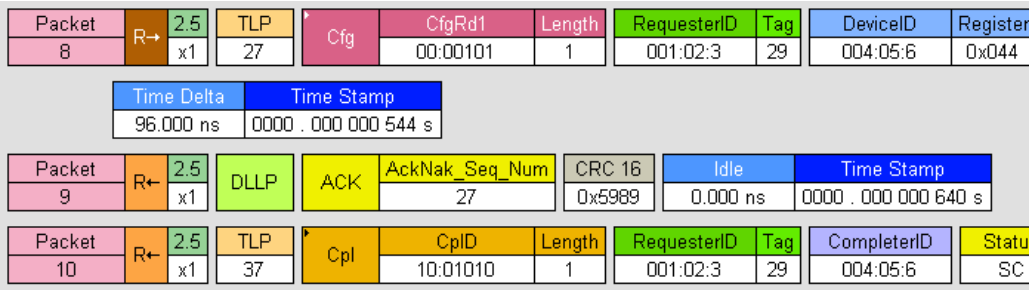

Step 3 Select **Report > Configuration Space > <device>** to display the Configuration Space View.

or

Click a **CompeterID** or **DeviceID** field. A pop-up menu opens.

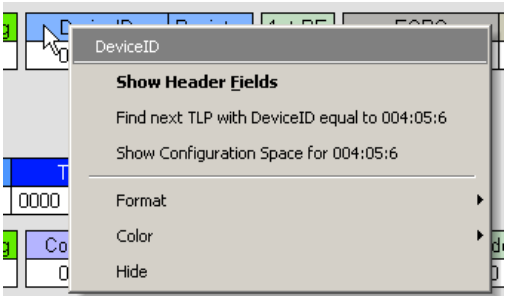

Select **Show Configuration Space for xxxx** from the menu, where **xxxx** is the device number. The Configuration Space View opens.

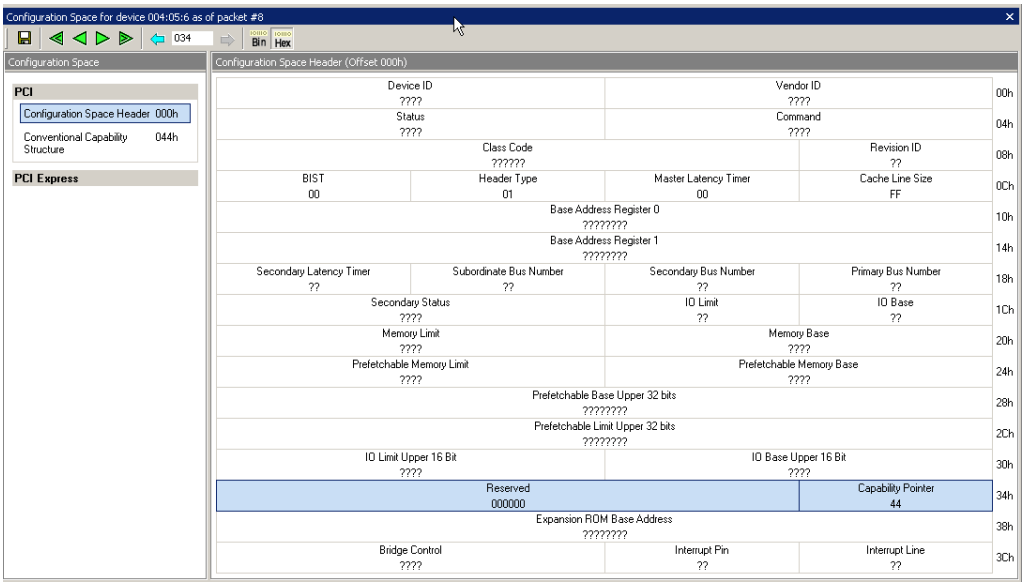
Configuration Space for device 004:05:6 as of packet #8
034
Bin
Hex
Configuration Space
PCI
Configuration Space Header 000h
Conventional Capability Structure 044h
PCI Express
Configuration Space Header (Offset 000h)
Device ID ???? Vendor ID ???? 00h
Status ???? Command ???? 04h
Class Code ?????? Revision ID ?? 08h
BIST 00 Header Type 01 Master Latency Timer 00 Cache Line Size FF 0Ch
Base Address Register 0 ???????? 10h
Base Address Register 1 ???????? 14h
Secondary Latency Timer ?? Subordinate Bus Number ?? Secondary Bus Number ?? Primary Bus Number ?? 18h
Secondary Status ???? IO Limit ?? IO Base ?? 1Ch
Memory Limit ???? Memory Base ???? 20h
Prefetchable Memory Limit ???? Prefetchable Memory Base ???? 24h
Prefetchable Base Upper 32 bits ???????? 28h
Prefetchable Limit Upper 32 bits ???????? 2Ch
IO Limit Upper 16 Bit ???? IO Base Upper 16 Bit ???? 30h
Reserved 000000 Capability Pointer 44 34h
Expansion ROM Base Address ???????? 38h
Bridge Control ???? Interrupt Pin ?? Interrupt Line ?? 3Ch

On the left, the view displays the Configuration Space for the selected CompleterID or DeviceID at the current packet. You can select **Configuration Space Header** or a **Capability Structure.**

The right displays the decoded data of the selected Configuration Space Header or a Capability Structure, up to the current packet. (The decoding builds while navigating through the next packets.)

The Configuration Space View toolbar allows you to Save, go to First, go to Previous, go to Next, go to Last, go to Previous Access to Selected Configuration Space Register, go to Next Access to Selected Configuration Space Register, and display Hexadecimal or Binary.

Note: See Appendix A “Configuration Space Decoding” on page 175.

9.12 Using Unit Metrics

For every protocol unit at the Link or Split transaction level, PE*Tracer*™ calculates and displays a set of metrics. Metrics are measurements of key operating parameters. You can use metrics to evaluate performance of traffic in the CATC Trace stream.

You can view metrics information in the CATC Trace display, the Traffic Summary window, and the Bus Utilization window.

PE*Tracer* defines different metrics for Link and Split transactions.

Metrics Defined for Link Transactions

Number of Packets: The total number of packets that compose this Link transaction.

Payload: The number of data payload bytes this Link transaction transferred.

Response Time: The time it took to transmit this Link transaction on the PE link, from the beginning of the first packet in the transaction to the end of the last packet in the transaction.

Data Throughput: The payload divided by response time, expressed in megabytes per second.

Note: Usually, the Number of Packets metric for a link transaction is two (in case of explicit acknowledge) or one (in case of implicit acknowledge). However if Naks/link level retries are involved, this metric might be higher. As a result, the Number of Packets metric is useful in highlighting unusual link transactions.

Metrics Defined for Split Transactions

The following types of metrics currently are defined for Split transactions:

Number of Link Transactions: The total number of Link transactions that compose this Split transaction.

Payload: The number of payload bytes this Split transaction transferred.

Response Time: The time it took to transmit this Split transaction on the PE link, from the beginning of the first packet in the Split transaction to the end of the last packet in the Split transaction;

Data Throughput: The transaction payload divided by response time, expressed in megabytes per second.

Latency Time: The time measured from the end of the request transaction to the first completion transmitted in response to the request within this Split transaction.

Note: The Number Of Link Transactions metric for a Split Transaction usually is two for a Configuration or IO request. It can be bigger then two for a Memory Read request.

Show Metrics in the CATC Trace Display

In the CATC Trace view display of Link Transaction or Split Transaction levels, all metrics information applicable to a specific protocol unit is displayed in a Metrics header. The header is located close to the end of the unit, in front of the Time cell. You can expand and collapse the header to show or hide the metrics information.

Collapsed Metrics Header Display

Following is a collapsed metrics display for a unit of Link Transaction. The collapsed header display shows only the metrics cell representing the Number of Packets.

Following is a collapsed metrics display for a unit of Split Transaction. The collapsed header display shows only the metrics cell representing Number of Link Transactions.



Metrics Tool Tip Display

In both CATC Trace level views, you can view the summary of all the unit metrics in the Metrics header tool tip. To view the tool tip, simply place the mouse cursor over the Metrics header. Following is the tool tip for a unit in the Link Transaction view.

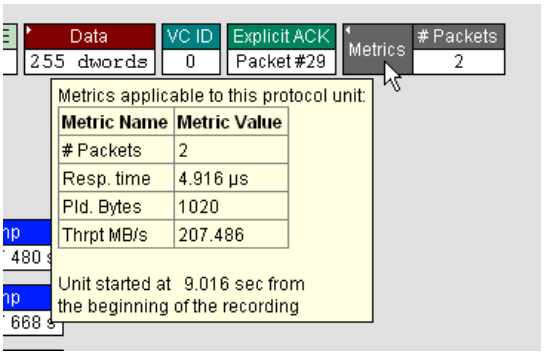

Note: The tool tip also presents information for time passed from the start of the recording till the beginning of this Link or Split Transaction.

Expanded Metrics Header Display

When you expand the Metrics header, the display creates a separate cell for each applicable metric:

Following is the expanded Metric header for a unit in the Split Transaction view.

Metrics	# LinkTras	Resp. time	Latency	Thrpt MB/s	Pld. Bytes
	2	7.460 µs	6.736 µs	2.145	16

Following is the expanded Metric header for a unit in the Link Transaction view.

Metrics	# Packets	Resp. time	Pld. Bytes	Thrpt MB/s
	2	536.000 ns	64	119.403

Note: Each of the metric cells pops up a tool tip window with the explanation of what the metric means.

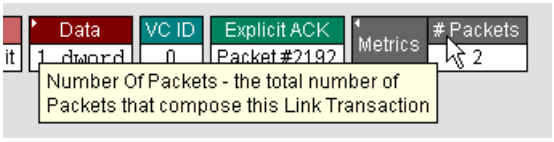

Show Metrics in the Traffic Summary Window

Some of the Traffic Summary reports at the Link and Split Transaction levels are based on metrics collected for the corresponding protocol units in the CATC Trace.

Reports at Split Transaction Level

Split Transaction Performance: This report table groups the Split Transactions by Requester-Completer pair and displays Minimum/Average/Maximum data for Number Of Link Transactions and Response Time metrics.

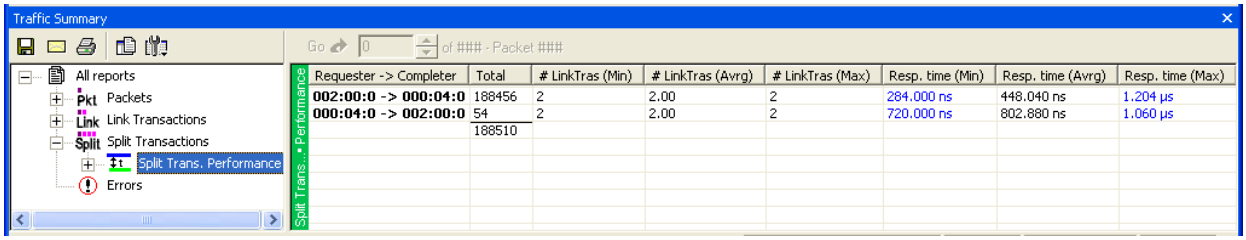
Traffic Summary
All reports
Packets
Link Transactions
Split Transactions
Split Trans. Performance
Errors
Split Trans... - Performance
Requester -> Completer | Total | # LinkTras (Min) | # LinkTras (Avrg) | # LinkTras (Max) | Resp. time (Min) | Resp. time (Avrg) | Resp. time (Max)
002:00:0 -> 000:04:0 | 188456 | 2 | 2.00 | 2 | 284.000 ns | 448.040 ns | 1.204 µs
000:04:0 -> 002:00:0 | 54 | 2 | 2.00 | 2 | 720.000 ns | 802.880 ns | 1.060 µs
188510

Read Requests Performance: This report table includes only the Split Transactions that present Read Requests (Configuration, IO and Memory). It groups them by the combination of Requester-Completer pair, request type, and Traffic Class and displays Minimum/Average/Maximum data for Throughput, Response Time, and Latency metrics.

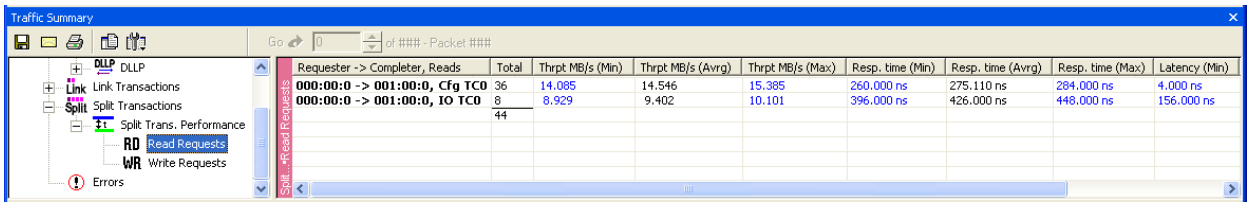
Traffic Summary
DLLP
Link Transactions
Split Transactions
Split Trans. Performance
RD Read Requests
WR Write Requests
Errors
Split...-Read Requests
Requester -> Completer, Reads | Total | Thrpt MB/s (Min) | Thrpt MB/s (Avrg) | Thrpt MB/s (Max) | Resp. time (Min) | Resp. time (Avrg) | Resp. time (Max) | Latency (Min)
000:00:0 -> 001:00:0, Cfg TC0 | 36 | 14.085 | 14.546 | 15.385 | 260.000 ns | 275.110 ns | 284.000 ns | 4.000 ns
000:00:0 -> 001:00:0, IO TC0 | 8 | 8.929 | 9.402 | 10.101 | 396.000 ns | 426.000 ns | 448.000 ns | 156.000 ns
44

Write Requests Performance: This report table includes only the Split Transactions that present Write Requests (Configuration and IO). It groups them by the combination of Requester-Completer pair, request type, and Traffic Class and displays Minimum/Average/Maximum data for Throughput, Response Time, and Latency metrics.

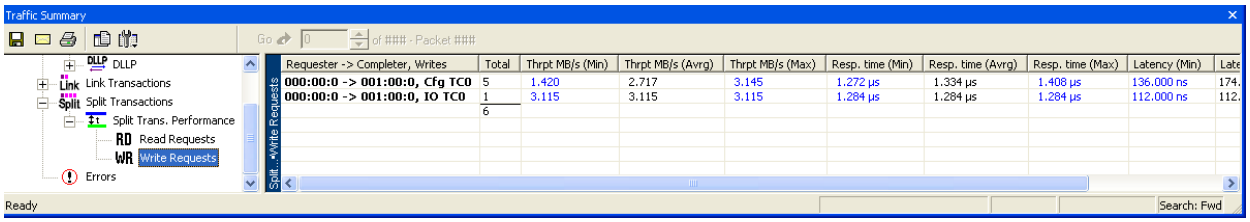
Traffic Summary
DLLP
Link Transactions
Split Transactions
Split Trans. Performance
RD Read Requests
WR Write Requests
Errors
Split...-Write Requests
Requester -> Completer, Writes | Total | Thrpt MB/s (Min) | Thrpt MB/s (Avrg) | Thrpt MB/s (Max) | Resp. time (Min) | Resp. time (Avrg) | Resp. time (Max) | Latency (Min)
000:00:0 -> 001:00:0, Cfg TC0 | 5 | 1.420 | 2.717 | 3.145 | 1.272 µs | 1.334 µs | 1.408 µs | 136.000 ns
000:00:0 -> 001:00:0, IO TC0 | 1 | 3.115 | 3.115 | 3.115 | 1.284 µs | 1.284 µs | 1.284 µs | 112.000 ns
6
Ready
Search: Fwd

Reports at the Link Transaction Level

The following metric-based reports are displayed at the Link Transaction level:

Link Transaction Performance: This report table groups the Link Transactions by TLP Type and displays Minimum/Average/Maximum data for Number Of Packets, Response Time and Payload Bytes metrics.

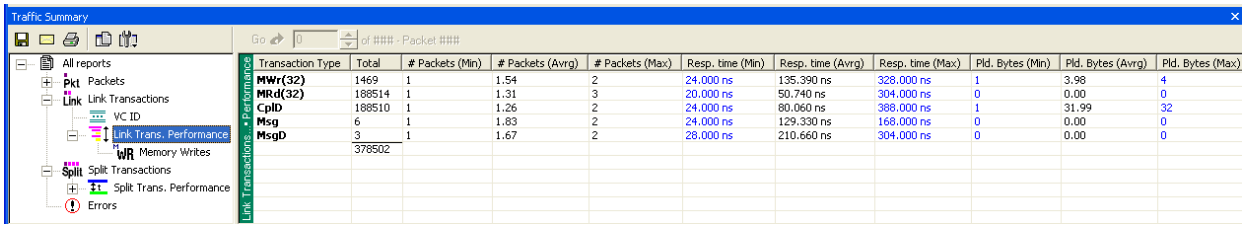
Traffic Summary
All reports
Packets
Link Transactions
VC ID
Link Trans. Performance
Memory Writes
Split Transactions
Split Trans. Performance
Errors
Link Transactions - Performance
Transaction Type | Total | # Packets (Min) | # Packets (Avrg) | # Packets (Max) | Resp. time (Min) | Resp. time (Avrg) | Resp. time (Max) | Pld. Bytes (Min) | Pld. Bytes (Avrg) | Pld. Bytes (Max)
MWr(32) 1469 1 1.54 2 24.000 ns 135.390 ns 328.000 ns 1 3.98 4
MRd(32) 188514 1 1.31 3 20.000 ns 50.740 ns 304.000 ns 0 0.00 0
CplD 188510 1 1.26 2 24.000 ns 80.060 ns 388.000 ns 1 31.99 32
Msg 6 1 1.83 2 24.000 ns 129.330 ns 168.000 ns 0 0.00 0
MsgD 3 1 1.67 2 28.000 ns 210.660 ns 304.000 ns 0 0.00 0
378502

Memory Writes: This report table includes only the Link Transactions that present Memory Write Requests. Memory Writes are the only (posted) requests that don't get promoted to the Split transaction level, therefore their performance should be viewed at the Link transaction level. The table groups Memory Writes by the combination of Requester ID and Traffic Class and displays Minimum/Average/Maximum data for Response Time, Payload and Throughput metrics.

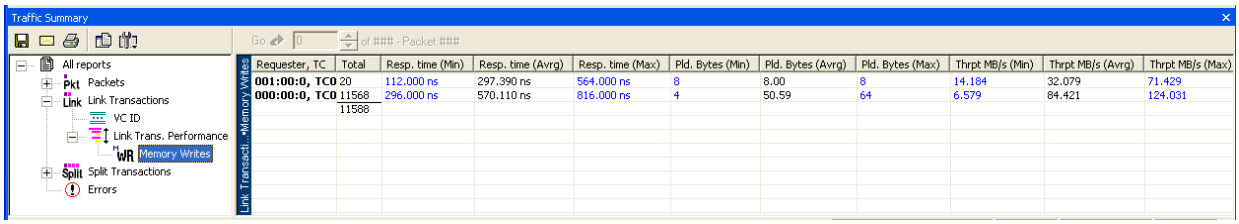
Traffic Summary
All reports
Packets
Link Transactions
VC ID
Link Trans. Performance
Memory Writes
Split Transactions
Errors
Link Transacti...Memory Writes
Requester, TC | Total | Resp. time (Min) | Resp. time (Avrg) | Resp. time (Max) | Pld. Bytes (Min) | Pld. Bytes (Avrg) | Pld. Bytes (Max) | Thrpt MB/s (Min) | Thrpt MB/s (Avrg) | Thrpt MB/s (Max)
001:00:0, TC0 20 112.000 ns 297.390 ns 564.000 ns 8 8.00 8 14.184 32.079 71.429
000:00:0, TC0 11568 296.000 ns 570.110 ns 816.000 ns 4 50.59 64 6.579 84.421 124.031
11588

Following features apply to all of the report tables described above for the Split Transaction and Link Transaction levels:

- Each report row for the defined tables contains the total number of units in this group for the CATC Trace (total number of units for Split Transaction performance, Read Requests performance, Memory Writes, and so on).
- In many cases, the Maximum and Minimum values in the report tables are navigable. By clicking table cells, you reposition the corresponding CATC Trace view to the Split or Link Transaction that has yielded this maximum or minimum value. This can help you to find specific units in the CATC Trace, such as transactions that produced spikes in Response Time or Throughput.

Show Metrics in the Bus Utilization Window

The Bus Utilization window provides graphs for packet-level information in the CATC Trace. The window also provides graphs for information on Split and Link Transaction levels, plotted over time. The graphs for Split and Link Transaction levels are based on metrics collected for the transactions throughout the CATC Trace.

The seven graphs related to Split and Transaction levels are:

1. Pending Requests at Split Transaction level.
2. Response Time at Split Transaction level.
3. Latency Time at Split Transaction level.
4. Throughput Per Transaction at Split Transaction level.
5. Response Time and Latency Time at Split Transaction level (combined graph).
6. Response Time at Link Transaction level, for Memory Writes only.
7. Throughput at Link Transaction level, for Memory Writes only.

The following is an example of Bus Utilization window display of graph numbers 1, 4, 5, 6 and 7:

Unit-Based Averaging

The Analyzer builds metric graphs using unit-based averaging (as opposed to time-based averaging). For the total duration of a certain request (or Memory Write transaction), the graph value is assumed equal to the corresponding metric for this request (transaction). If there are overlapping operations for a certain time period, then the value is calculated as an average of metric values for all the overlapped requests (transactions).

It is important to remember that the Analyzer uses unit-based averaging rather than time-based averaging. Time-based averaging can be misleading in some situations. For example, consider the Throughput Per Transaction graph. Sometimes, while many outstanding requests are in progress, latency (and response time) grows for each of the transactions, resulting in a lower throughput per transaction over time (which is reflected in the graph). This happens even though aggregated throughput across all the transactions is constant.

Bus Utilization Window Features

For the seven Split- and Transaction-level graphs listed, all Bus Utilization window features are available, such as zooming in/out, changing scale type, scrolling, context-sensitive status, and graph synchronization. See Bus Utilization and Bus Utilization Buttons for more on these features.

Note: Clicking a certain place within a graph area repositions the CATC Trace display at the Link or Split transaction level to the transaction that was in progress at that time.

Split Transaction Level Graphs

Transactions at the Split level combine all the non-posted requests with corresponding completions. This includes Configuration and IO Read and Write requests, as well as Memory Read requests.

The following shows the graphs for the Split level:

Note: The Pending Requests graph is not directly defined by metrics, but it is useful when considering metrics. The Pending Requests graph presents the unit-averaged number of requests that were pending (in progress) at any moment of time. It allows you to correlate the number of requests posted to a completer with other performance metrics.

Link Transaction Level Graphs

Memory Writes are the only (posted) requests that do not get promoted to the Split transaction level. Therefore, Memory Write performance should be viewed at the Link Transaction level. That is the reason graphs at the Link level only present the Memory Write-related metrics and are titled **Writes: Response Time:** and **Writes: Throughput**.

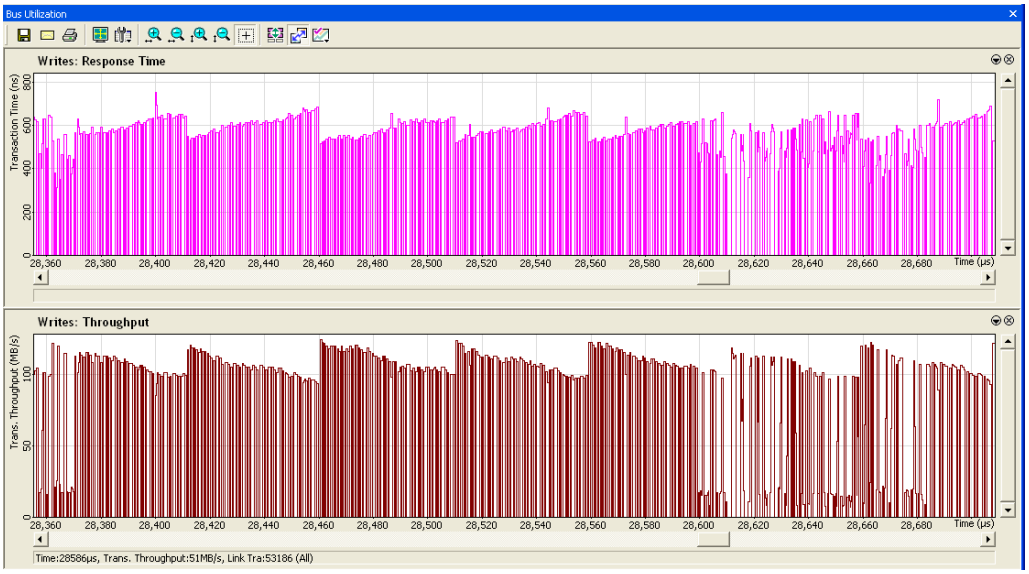

9.13 Real-Time Statistics Window

The Real-Time Statistics Window displays Link Utilization, performance measurements, and statistical values for a PCI Express link plotted in real time.

Click to open the Real-Time Statistics window.

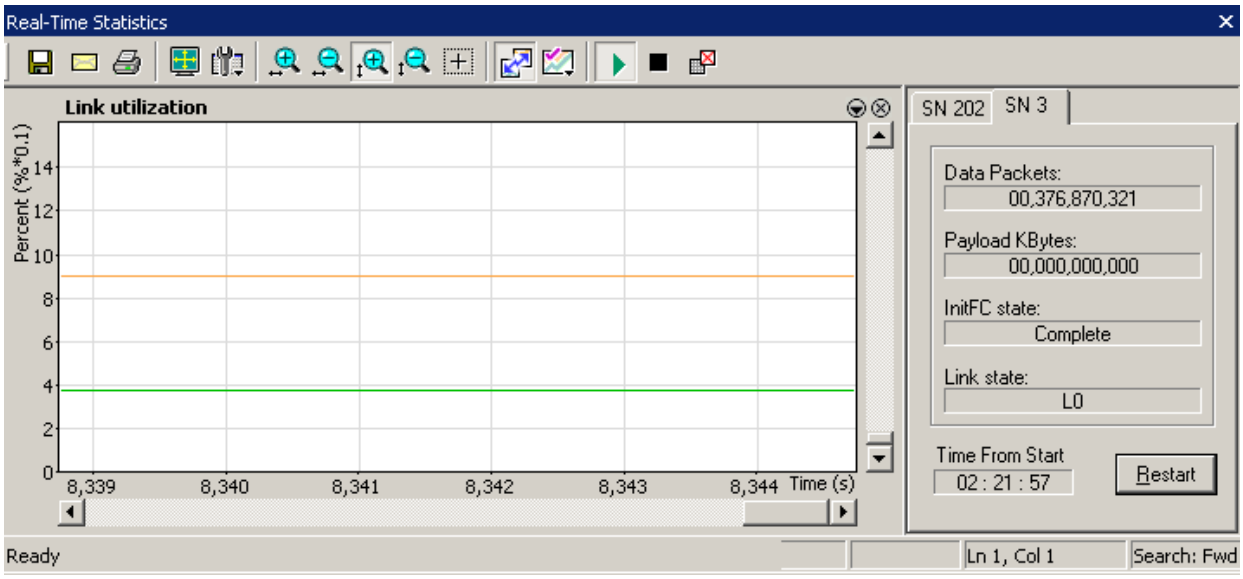

Start **PCI Express™** link activity.

To start the monitor, press .

To stop the monitor, press .

The remaining Real-Time Statistics buttons provide options for changing the format of the display.

Additional formatting options are available through the Real-Time Statistics pop-up menu and the Real-Time Statistics toolbar.

Real-Time Statistics Buttons

Additional formatting options are available through the Real-Time Statistics toolbar.

Button	Function
	Save. Saves Real-Time Statistics data to bitmap file (*.bmp).
	Email. Opens an email and attaches a bitmap file of the Real-Time Statistics data.
	Print. Prints the Real-Time Statistics data.
	Full Screen. Maximizes the Real-Time Statistics window.
	View Settings. Opens a sub-menu with the following choices: • Orient Horizontally • Tile Vertically • Show Markers • Show Plumbline • Status >> Bar Tool tips None • Grid Lines >> Both Axes X Axis Y Axis No Grid • Grid on Top • Fonts & Colors
	Horizontal zoom in
	Horizontal zoom out

Vertical zoom in

Vertical zoom out

Click and Drag Zoom. Click and drag to zoom in on a part of the graph.

Synchronize Graph Areas. If two or more graphs are displayed, this button synchronizes the graphs to one another. Once synchronized, the positioning slider of one graph moves the other graphs.

Graph Areas. Allows you to hide or display the graphs and the counters. You can toggle Statistics Accumulation, Link Utilization, Data Payload Throughput, and Data Packet Count.

Start real-time statistics. Starts the real-time statistical monitor.

Stop real-time statistics. Stops the real-time statistical monitor.

Reset Graphs. Resets the graphs.

Real-Time Statistical Monitor Pop-up Menu

Additional formatting options are available through the Real-Time Statistics pop-up menu. Right-click a graph in the Real-Time Statistical Monitor window to display a pop-up menu with options for changing the format of the display.

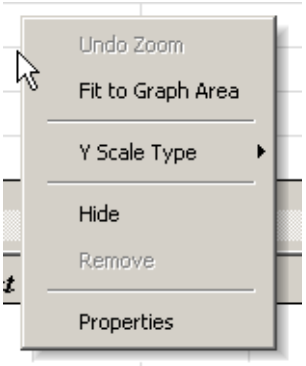

Undo Zoom: If you have zoomed in, this command undoes the zoom.

Fit to Graph Area: Redisplays graph so that the entire CATC Trace fits inside graph area.

Y Scale Type:

- **Linear**: Converts display to linear format.
- **Logarithmic**: Converts display to logarithmic format.

Hide: Hides the selected graph

Properties: Opens a dialog box with options for changing the Title, Appearance, and Color of the graph.

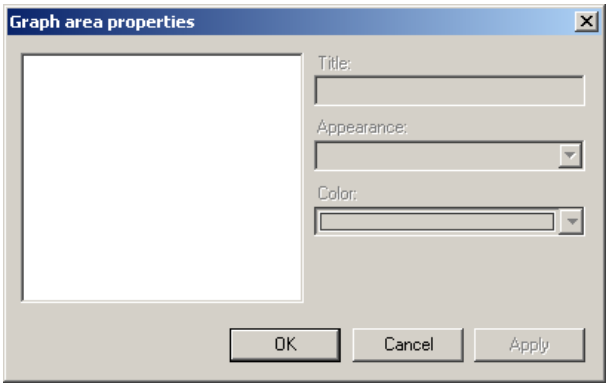

Real-Time Statistics Graph Areas

The Real-time Statistics window has three graph areas:

- Link Utilization
- Data Payload Throughput
- Data Packet Count

Each graph area has Upstream and Downstream graphs for a device (if connected to a host machine).

The Statistics Accumulation area shows the PE*Tracer* statistics tab:

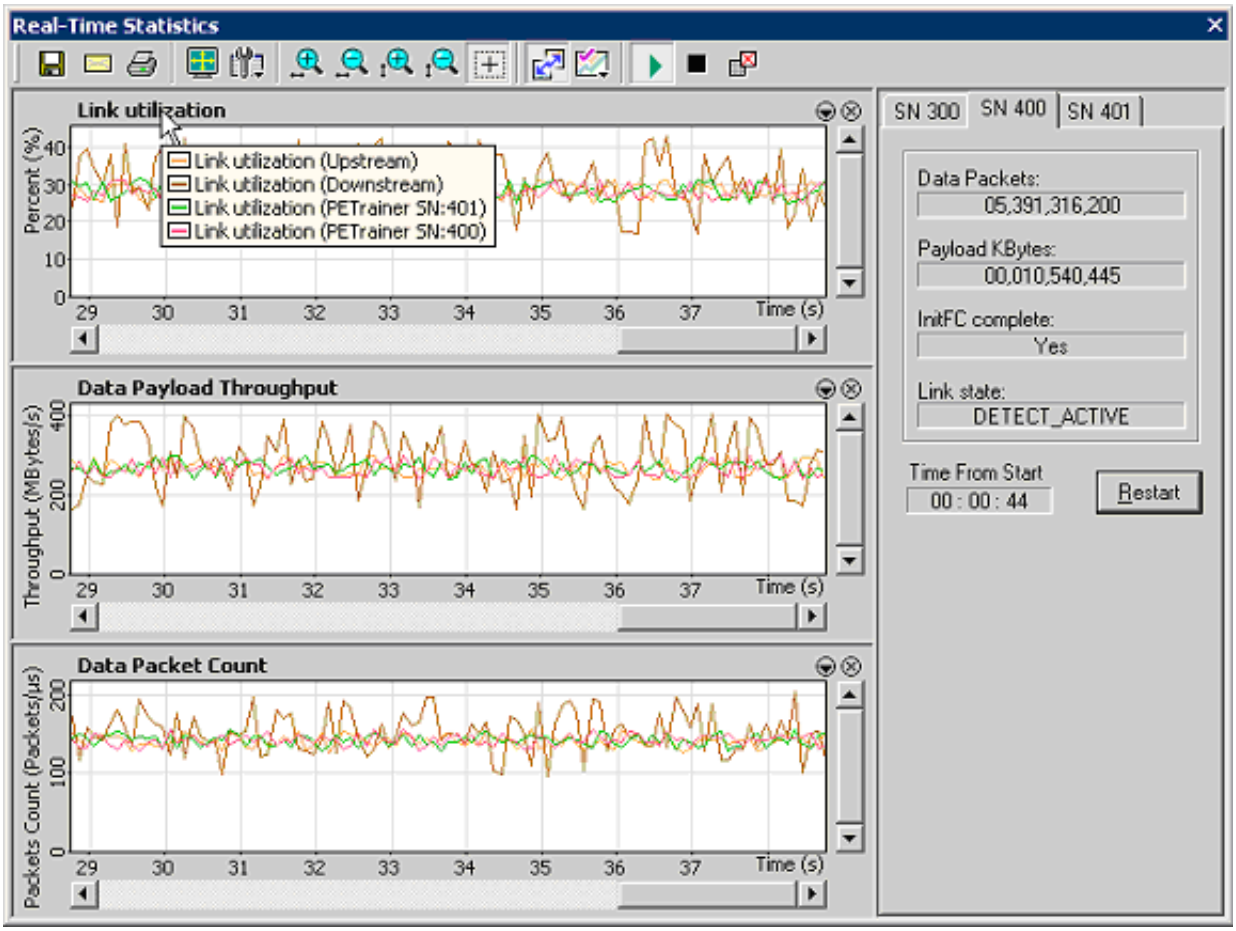

9.14 TC to VC Mapping

TC to VC Mapping displays how Traffic Classes are mapped to Virtual Channels (to simplify navigation) and how the CATC Trace display was changed (for example, in Split Transactions).

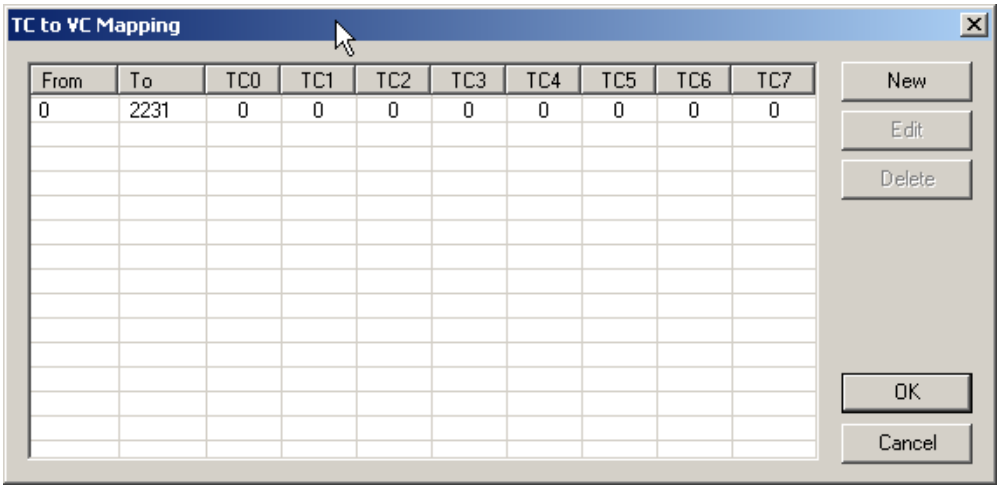

9.15 Timing and Bus Usage Calculations

The Timing and Bus Usage Calculator allows you to calculate time between packets.

Select **Reports > Timing Calculations** to obtain the Timing Calculator dialog box.

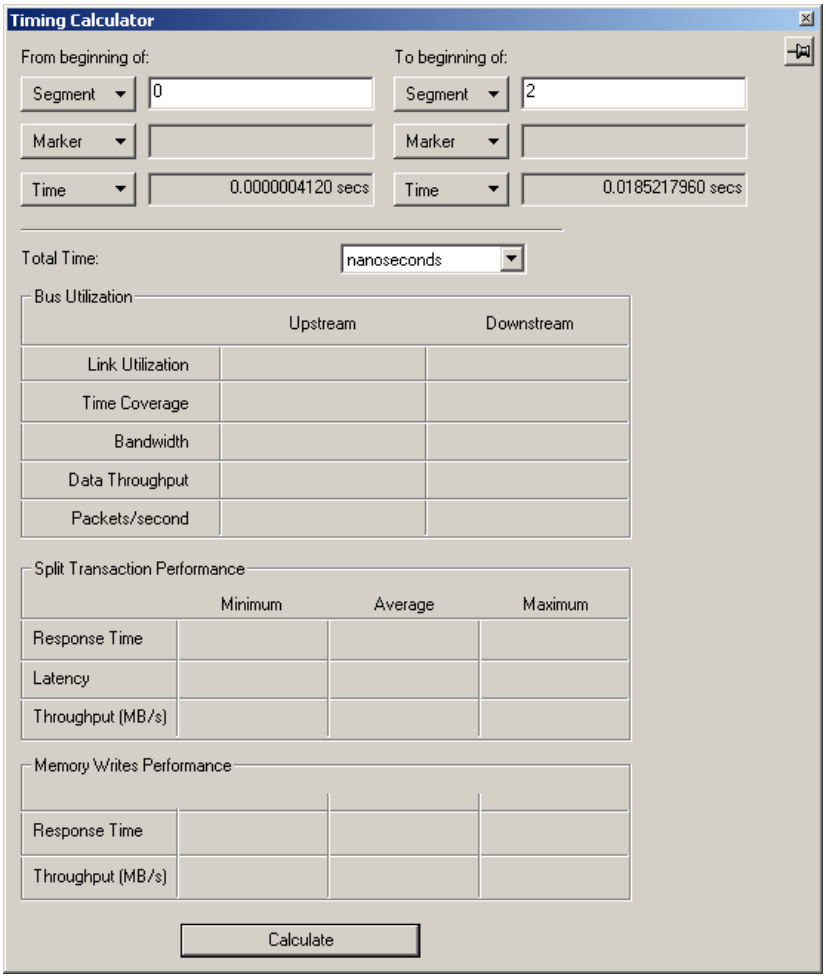

Total Time: Total time from beginning of the first unit to beginning of the second unit.

Bus Utilization

This portion of the Timing Calculator window gives values that are cumulative for all packets during the timing period. For example, throughput is combined throughput of all packets during the timing period.

Upstream is from endpoint devices to the root complex. Downstream is from the root complex to endpoint devices.

Link Utilization: Percentage of non-idle symbols in total number of symbols transferred.

Time Coverage: Percentage of non-idle symbol times in total number of symbol times. (Non-idle symbol time occurs when at least on one of the lanes there were non-idle symbols transferred.)

Bandwidth: Number of non-idle symbol bits transferred per second.

Data Throughput: Number of TLP payload bytes transferred per second.

Packets/second: Number of packets transferred per second.

Split Transaction Performance

This portion of the Timing Calculator window gives minimum, maximum, and average values for all Split transactions during the timing period. For example, minimum throughput is throughput of the Split transaction that passes the least amount of data. Maximum throughput is throughput of the Split transaction that passes the most amount of data. Average throughput is the average calculated for all Split transactions during the timing period.

Response Time: The time it took to transmit this Split transaction on the PE link, from the beginning of the first packet in the Split transaction to the end of the last packet in the Split transaction.

Latency: The time measured from the end of the request transaction to the first completion transmitted in response to the request within this Split transaction.

Throughput: The transaction payload divided by response time, expressed in megabytes per second.

Memory Writes Performance

This portion of the Timing Calculator window gives minimum, maximum, and average values for all Memory Write transactions during the timing period. For example, minimum throughput is throughput of the Memory Write transaction that passes the least amount of data. Maximum throughput is throughput of the Memory Write transaction that passes the most amount of data. Average throughput is the average calculated for all Memory Write transactions during the timing period.

Response Time: The time it took to transmit this Memory Write on the PE link, from the beginning of the first packet in the Memory Write to the end of the last packet in the Memory Write.

Throughput: The Memory Write payload divided by response time, expressed in megabytes per second.

9.16 Running Verification Scripts

You can run verification scripts to check errors, link transactions, split transactions, metrics, ordered sets,replays, DLLPs, and TLPs.

To obtain the Verification Script dialog box, select **Tools > Run verification scripts**

or click the icon.

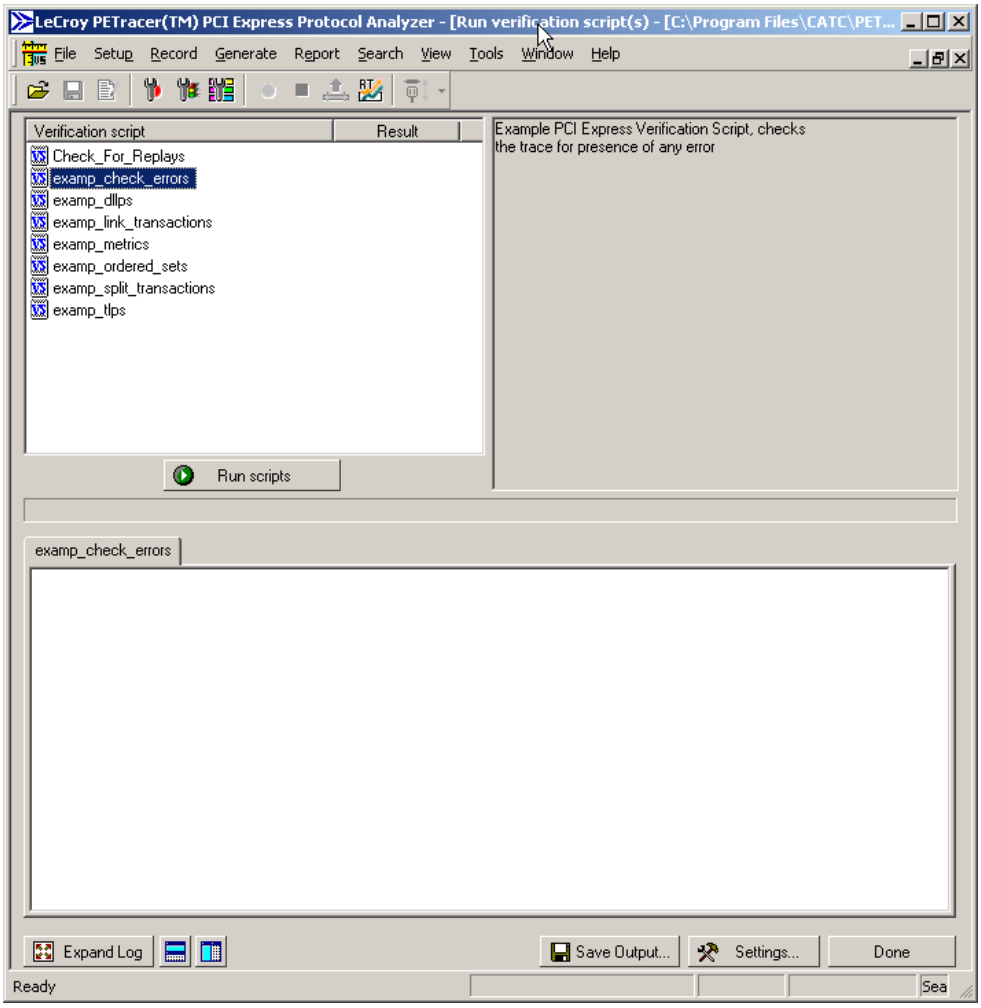

The available verification scripts are in the Verification script section.

To run a script, select it, then click the **Run Scripts** button  .

The results appear in the bottom window. You can expand or collapse this window. You find a view related to the CATC Trace and place this window under or to the right of it. You can Save the results.

Click the **Settings** button to display the Settings window.

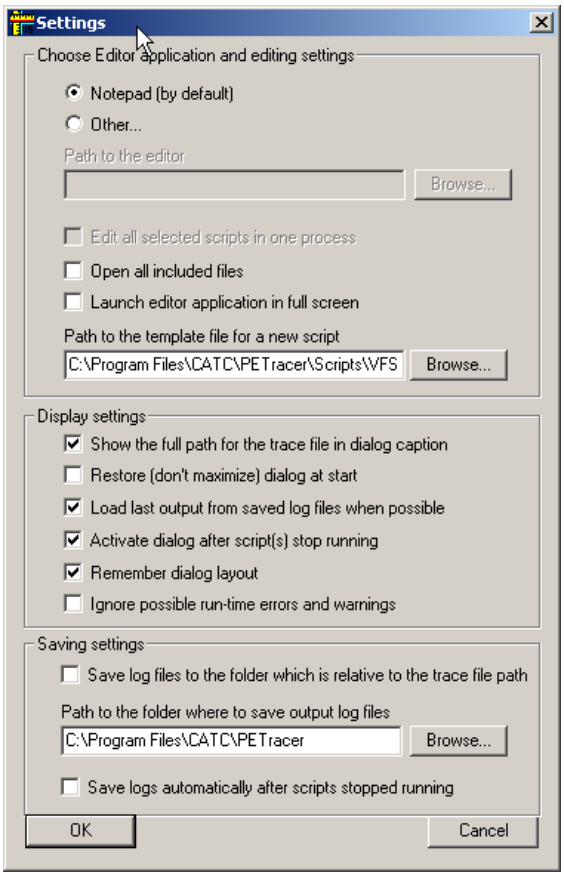
Settings
Choose Editor application and editing settings
Notepad (by default)
Other...
Path to the editor
Browse...
Edit all selected scripts in one process
Open all included files
Launch editor application in full screen
Path to the template file for a new script
C:\Program Files\CATC\PETracer\Scripts\VFS
Browse...
Display settings
Show the full path for the trace file in dialog caption
Restore (don't maximize) dialog at start
Load last output from saved log files when possible
Activate dialog after script(s) stop running
Remember dialog layout
Ignore possible run-time errors and warnings
Saving settings
Save log files to the folder which is relative to the trace file path
Path to the folder where to save output log files
C:\Program Files\CATC\PETracer
Browse...
Save logs automatically after scripts stopped running
OK
Cancel

You can choose the editor, display settings, and saving settings.

Chapter 10: Updates and Licensing

10.1 Updating the Card

BusEngine™ and/or Firmware updates are now automatic processes that run anytime a new version of the PE*Tracer*™ software is installed that is incompatible with the currently installed BusEngine or Firmware. The update process generates on-screen instructions.

If, however, you need to manually perform BusEngine or Firmware updates, follow these steps:

Step 1 Select **Setup > Update Device** … from the menu to display the Update PETracer Edge dialog box for **PE*Tracer* Edge:**

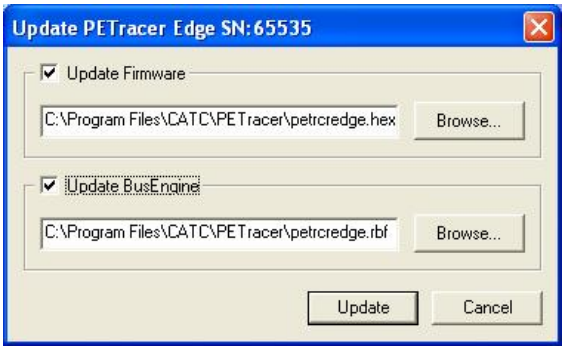

Step 2 Select the appropriate file locations for the Firmware and/or BusEngine, using Browse, if necessary.

Step 3 Check the appropriate options (if in doubt, check all options).

Step 4 Click **Update** to initiate the updating of the Edge card.

10.2 License Keys

A License Key is necessary to enable software maintenance. If you attempt to record with the Analyzer without an installed License Key, a message appears to indicate that a License Key is necessary in order to record traffic.

A License Key must be obtained from Teledyne LeCroy for each Analyzer.

After you obtain the License Key, follow these steps to install it:

Step 1 Select **Help > Update License**… from the menu bar. to display the Update License dialog box.

Step 2 Enter the **path** and **filename** for the License Key or use the Browse button to navigate to the directory that contains the License Key.

Step 3 Select the **.lic** file, and then click **Update Device**.

You can also update your licensing information by selecting **Setup > All Connected Devices** …, then clicking **Update License**.

10.3 License Information

You can view Licensing information for your Analyzer by selecting **Help > Display License Information**... from the menu bar. The License Information window displays data about the maintenance expiration and purchased features.

Appendix A: Configuration Space Decoding

The decoded capability structures in the Configuration Space Viewer and Editor are based on programmed definitions in the PE*Tracer* software and on Configuration Space Decode Scripts.

Configuration Space Decode Scripts are tools to define capability structures and instruct the Configuration Space Viewer or Editor how to decode them. These scripts are in the **\CfgSpaceScripts** sub-directory below the **\Scripts** directory in the application directory.

You can write Configuration Space Decode Scripts using the CATC Scripting Language (CSL). See the *Teledyne LeCroy Analyzers File Based Decoding Manual* for reference.

PCI Express Configuration Space Decode Scripts have the file extension **.pecfgdec**.

A.1 Mandatory Definitions

Configuration Space Decode Scripts must set the following reserved variables.

- **CapabilityName**: Name of the capability structure
- **CapabilityID**: ID of the capability structure
- **ExtAddSpace**: Set to 1 if Extended Configuration Space.
  Otherwise, set to 0 for PCI.

A.2 Mandatory Module Functions

Modules are collections of functions and data dedicated to decoding a specific capability structure. Each module has one primary Configuration Space Decode Script file (extension **.pecfgdec**) and optionally has include files (**.inc**).

A module function is an entry-point into a decoding module. To help display a capability structure, the application calls a module function.

The Configuration Space Editor and Viewer support only the **DecodeRegister(offset)** and **GetSize( )** functions.

DecodeRegister(offset)

The application calls this function while decoding a specific DWORD offset of the specified CapabilityID. The offset is the decoding entry point, where the decoding path starts.

The Configuration Space Editor calls this function to determine how to decode the assigned configuration space. The **offset** parameter is the DWORD to decode.
An offset of 0 indicates bytes 00h-03h, an offset of 1 indicates bytes 04h-07h, and so on.

Note: The Configuration Space Editor can only decode one DWORD at a time.

GetSize()

This function returns the size of the capability structure specified by CapabilityID.

A.3 Configuration Register Types

The following reserved variables are defined global constants.

- CFGREG_UNDEFINED
- CFGREG_HWINIT
- CFGREG_RO
- CFGREG_RW
- CFGREG_RW1C
- CFGREG_ROS
- CFGREG_RWS
- CFGREG_RW1CS
- CFGREG_RSVDP
- CFGREG_RSVDZ

Note: These reserved variables match the Configuration Register Types of Table 7-2 in Section 7.4 of the PCI Express Base Specification, Rev. 2.1.

A.4 Primitives

Decoding uses the following primitives.

GetRegisterField(dword_offset, bit_offset, field_length)

This function returns a register field of length **field_length**, starting at bit position **bit_offset** in DWORD **dword_offset**.

- **dword_offset**: DWORD offset of the register field location
- **bit_offset**: Bit offset of the register field location
- **field_length**: Length of the register field

For example, **GetRegisterField(1, 9, 2);** means: Go to DWORD 1, bit offset 9, and returns 2 bits.

AddField(field_name, field_length, configuration_reg_type, tooltip, encoding_table = NULL)

This function adds a register field to the Capability View and returns a pointer to the field, for adding subfields.

- **field_name**: Name of the register field to display in the Capability View
- **field_length**: Length of the register field
- **configuration_reg_type**: Configuration register type of the register field. Note: If subfields are defined, their configuration register types override this setting for their specified bits.
- **tooltip**: Tooltip displayed for the register field in the Capability View
- **encoding_table**: Optional. Displays encodings as lists for select values.
- For example, user input becomes a combo box for the field in the Field View.

As examples:
AddField("PCI Express Extended Capability ID", 16, CFGREG_RO, "");
means: Add the field "PCI Express Extended Capability ID" with length 16 and cfg register type CFGREG_RO.

capability_reg = AddField("Capability Register", 32, CFGREG_RW, "");
means: Added the field "Capability Register" with length 32 and cfg register type CFGREG_RW and stored a pointer to this field in variable capability_reg, which can be used to add subfields to this field.

AddSubField(parent_field, subfield_name, subfield_length, configuration_reg_type, tooltip, encoding_table = NULL);

This function adds a subfield to a register field in the Capability View. Subfields are modifiable and visible in the Field View and appear in the tooltips of register fields.

- **parent_field**: Pointer to a register field in the Capability View
- **subfield_name**: Name of the subfield, displayed in the Field View
- **subfield_length**: Length of the subfield
- **configuration_reg_type**: Configuration register type of the subfield field. Note: This overrides the configuration_reg_type of the parent field.
- **tooltip**: Tooltip displayed for the subfield in the Capability View
- **encoding_table**: Optional. Displays encodings as lists for select values.
- For example, user input becomes a combo box for the field in the Field View .

For example,
AddSubField(capability_reg, "Mode Supported", 4, CFGREG_RO, "Indicates the Function modes,"), ModeEncodings);
means: Add the subfield "Mode Supported" to the parent field "capability_reg" with length 4, type CFGREG_RO, a tooltip in the Capability View, and a combo box displaying "mode encodings" for input in the Field View.

A.5 Helper File

ConfigSpaceCommon.inc include file contains useful functions for script decoding.

Appendix B: China Restriction of Hazardous Substances Table

The following tables are supplied in compliance with China's Restriction of Hazardous Substances (China RoHS) requirements:

	有毒有害物质和元素					
部件名称	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr^{6+})	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
PCBAs	X	O	X	X	X	X
机械硬件	O	O	X	O	O	O
金属片	O	O	X	O	O	O
塑料部件	O	O	O	O	X	X
电源	X	X	X	O	X	X
电源线	X	O	X	O	X	X
保护外壳(如有)	O	O	O	O	X	X
电缆组件(如有)	X	O	X	O	X	X
风扇(如有)	X	O	X	O	X	X
交流滤波器和熔丝组件(如有)	X	O	X	O	O	O
外部电源(如有)	X	X	X	O	X	X
探头(如有)	X	O	X	O	X	X
O: 表明该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求之下。						
X: 表明该有毒有害物质至少在该部件的某一均质材料中的含量超过 SJ/T11363-2006 标准规定的限量要求。						

EFUP (对环境友好的使用时间) 使用条件：参阅本手册“规范”部分规定的环境条件。

	Toxic or Hazardous Substances and Elements					
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr^{6+})	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCBAs	X	O	X	X	X	X
Mechanical Hardware	O	O	X	O	O	O
Sheet Metal	O	O	X	O	O	O
Plastic Parts	O	O	O	O	X	X
Power Supply	X	X	X	O	X	X
Power Cord	X	O	X	O	X	X
Protective Case (if present)	O	O	O	O	X	X
Cable Assemblies (if present)	X	O	X	O	X	X
Fans (if present)	X	O	X	O	X	X
AC Filter/Fuse Assy (if present)	X	O	X	O	O	O
Ext Power Supply (if present)	X	X	X	O	X	X
Probes (if present)	X	O	X	O	X	X
O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement specified in SJ/T11363-2006.						
X: Indicates that this toxic or hazardous substance contained in at least one of the homogenous materials used for this part is above the limit requirement specified in SJ/T11363-2006.						

EFUP (Environmental Friendly Use Period) Use Conditions: refer to the environmental conditions stated in the specifications section of this Manual.

How to Contact Teledyne LeCroy

Type of Service	Contact	
Call for technical support…	US and Canada: Worldwide:	1 (800) 909-7112 1 (408) 653-1260
Fax your questions…	Worldwide:	1 (408) 727-6622
Write a letter…	Teledyne LeCroy Protocol Solutions Group Customer Support 3385 Scott Blvd. Santa Clara, CA 95054-3115 USA	
Send e-mail…	psgsupport@teledynelecroy.com	
Visit Teledyne LeCroy's web site…	teledynelecroy.com/	

[This page is intentionally blank]

Index

Symbols

.lic files 174
.opt files 92
.pem file 41
.pem files 41
.pex files 41, 43
.rec files 41
+ Packet # button 86

A

Actions Properties dialog box 117
Activity 35
Add Analyzer dialog box 18
Add Counter command 121
Adding an Attachment 62
address 179
Advanced Hiding Options 27
All Connected Devices command 174
All Markers Window 70
Analyzer
    license 174
    networked 18
analyzer
    testing 37
Analyzer Network Chat Bar command 46
Analyzer Network command 18
Analyzer Network dialog box 18
Any Event 124
Any TLP event 123
application 13
Attaching Markers 62
Auto-Configure Lane Polarity 101
Available Events area 106
    103
averaging 161

B

Bandwidth 170
Base Spec 1.0 Rev Compatibility Mode 101
Beep When Trigger Occurs 99
Bitmask 122
blue current-position indicator 148
Both directions 150
browsing network 18
Buffer Size 94, 95
Bus Utilization 132, 170
    buttons 135
    features 161
    metrics 160
    pop-up menu 133
BusEngine update 173

C

calculating time between DWORDs 140
CATC Technical Support 179
CATC Trace 4
cells 48
    resizing 47
    states 104
Change Counter Value command 120
changing
    markers 54
Channels 116
Chat session 46
Chat window 46
Clear Marker command 54
Clocks radio button 58
Collapse Idle 141
Collapse Idle Plus. 141
Collapsible Idle Time 139
collapsing 47
Color Format Hiding tab 85
Color pop-up menu 87
colors 86
Combining Specified Event Groups 80
Combo box 154
Comma Separated Value files 44
Comment field 53
comment string 53
CompeterID field 154
components 9
Configuration Space 153
Configuration Space dialog box 153
Configuration Space Header 154
Configuration Space View 153, 154
configuring
    Recording Options 37
conflicts 108
Connect/Disconnect button 37
connecting
    USB cable 17

connectors
receptacles and cables 11
contact 179
Continue option 38
Continuous Time Scale 141
Control-b command 78
Control-f command 78
controls
Analyzer ML 10
Count action 107
Count field 121
Counter 116
Counters 120
counters
setting 121
counting 120
CSV files 44
current-position indicator 148

D

data cells 47
Data Field 47
Data Flow command 143
Data Flow window 143
Data Throughput 155, 170
data_pem_files directory 39
data.pem file 39
data.pex file 38, 41
dataXYZ.pem files 98
decode levels 55
decoding 55
default options file 102
default.opt file 92
default.rec file 102
delimiters 148
Description String 116
descriptive label 102
DeviceID field 154
Direction field 80
Disable Descrambling 101
Display area 22
Display Configuration Name 85
Display License Information command 174
Display Options 83
command 83
dialog box 83
fFiles 41
loading 92
saving 92
Display Options button 83
DLLP Packet Properties dialog 119
Do not save hidden packets option 43
Downstream direction 150
Drag an event here to create a new sequence 104
DWORD 122
DWORDs
timing 140

E

Edge 3
update 173
Edit Comment command 45
Edit Marker 69
Edit Marker command 54
Edit Marker for Packet # pop-up 53
e-mail 179
Email CATC Support 179
Enable Tool tips 84
environmental conditions 11
Error Properties dialog box 117
Error Summary dialog box 129
error types 117
Errors pane 147
event
counting 120
Event Groups menu 80
Event Icon Preview 116
Event Navigation 131
Event Properties dialog box 116
Event Trigger recording type 95
events
searching 57
Event-specific Settings 117
Exclude option 80
Expand Data command 47
exporting 44

F

fax number 179
field
hiding 89
Field Colors tab 86
Field Formats tab 88
file formats 44
File Information window 128
File Menu 28
filter 125
Filter action 107
Filter In button 125

Filter Out button 125
Find command 79
Find dialog box 79
Find Next command 81
finding 79
Firmware update 173
First, Prev, Next, and Last buttons 154
Fit to Graph Area 133, 166
Flush option 38
Fonts 84
format
    field 88
From packet # field 45
From Packet field 43
Functionality of Markers 60

G

General tab 37, 83, 94
Generator file format 44
Global State 104
Global State Cell 106
Go To Marker command 58
Go to Marker command 140
Go To menu 77
Go to Packet # 133
Go to Packet command 57, 58
Go to Trigger command 57
Grid Lines 131
Group and Colors column 86, 88

H

hardware 3
    specifications ML 11
hardware wizard 15
header fields 50
Help Menu 33
Hexadecimal vs. Binary tabs 154
Hide 133, 166
Hide buttons 26, 140
Hide Downstream button 26
Hide SKIP and Update FC button 26
Hide Training button 26
Hide Upstream button 26
hiding 89, 90
    Idles 140
Hiding tab 90
Hierarchy Lines 84
host machine 13
host machine requirements 9
host machine software requirements 11
humidity 11

I

Icon Label 116
Idle errors 117
information
    priority 149
Inhibit Channel 100
Install Software command 13
installing interposer 16
interface 13
internal rules 108
Intersection option 80
Invert Polarity 100

K

Key
    License 174
keyboard shortcuts 34
keystrokes 34

L

label 102
Latency 170
Latency Time 155
Latency Time at Split Transaction level 160
layout 22
LeCroy PETracer command 13
LEDs
    Analyzer ML 10
Legend option 148
level hiding 90
Level Hiding tab 90
levels 55
license files 174
License Information window 174
License Key 174
licensing information 174
Linear 133, 166
Link level decode 55
Link section 37, 100
Link Settings 94
Link Tracker
    buttons 141
    toolbar 137
Link Tracker window 137
    docking 139
    markers 140
    reformat 138
link training 37
Link Transaction
    metrics 159

Link Transaction Level graphs 162
Link Transaction Performance 159
Link Utilization 170
Link Width 100
Link Width pane 147
Load button 92, 102
Load command 92, 102
loading 92, 102
Logarithmic 133, 166
long format 47
LTSSM Flow Graph 150
LTSSM Flow Graph command 150

M

Main Display Area 137
Main display area 103
Manual Trigger
  recording type 95
Markers 59
  Adding an Attachment 62
  Attachment Types and Visualization 64
  Embedded Attachments to a Marker 64
  Recording an Audio File 63
  Video Files supported 63
markers 53
  deleting 54
  editing 54
  setting 53, 140
Markers Overview 59
Mask (hex) entry 123
Match (hex) entry 123
MB Segments field 39
memory requirements 11
Memory Write event 124
Memory Writes 159
Memory Writes Performance 170
Menu bar 22
menus 28
  pop-up 48
metrics 155
  Bus Utilization 160
  Link Transaction 159
  Link Transactions 155
  Split Transaction 158
  Split Transactions 155
  trace 156
  Traffic Summary 158
  unit-base averaging 161
Metrics Header 156
Metrics Tooltip 156
Misc 94, 99
Msb -> Lsb checkboxes 89
Multi-Lane verification system 3
Multisegment
  viewing 98
Multisegment recording 39
Multi-Segment Toolbar 25
multi-segmenting 39

N

navigating 144
Navigator 144
  displaying 144
  legend 148
  panes 145, 147
  range 145, 146
  ranges 145
  slider 148
  toolbar 145
Navigator Legend dialog box 148
Navigator Panes button 148
Navigator Range button 146
Network Browse list 46
networked Analyzer 18
New Event button 106
New Events button 116
Number of Link Transactions 155
Number of Packets 155

O

Offset dword 122
opening
  program 14
operating temperature 11
options files 102
Options Name 94, 97
Options Name box 102
Ordered Set Properties dialog box 120
Origin field 80
overview 3

P

package contents 11
Packet # 86
Packet # field 53
Packet Data command 152
Packet Data window 152
Packet Directionality Cell 51
Packet errors 117

Packet Header bar 151
Packet Header Cell 52
Packet Header command 151
Packet Heading Cell 51
Packet level decode 55
Packets/second 170
pane checkbox 148
Payload 155
payload pattern match 122
Payload Properties dialog box 119
Payload tab 122
PC requirements 9
PC software requirements 11
PCI Express Multi-Lane advanced verification system 3
Pending Requests at Split Transaction level 160
PETracer
    options 94, 96
PETracer Edge 3, 9
    setting up 15
PETracer EML
    opening 14
PETracer ML
    opening 14
PETracer SN message 35
petrcedg.sys file 13
Pin Button 116
Playback Window 75
Playlist Functionality 73
Playlist Playback Control 75, 76
Plug-and-Play instructions 15
plus symbol 86, 88
pop-up menus 48
Port 1 100
Port 2 100
power
    requirements 11
Pre/Post Trigger pane 147
Preserve TC to VC mapping across the channels 99
Print command 45
Printer button 45
printing 45
probing characteristics 11
product
    overview 3
program
    opening 14
Properties 134, 166
Properties button 116
Properties command 106
Properties dialog 116
Properties dialog box 106, 115
protocol unit 155

R

range delimiters 148
Raw 10b Codes 49
Read Requests Performance 158
reading 47
Ready message 35
Real-Time Statistical Monitor window 166
Real-Time Statistics
    buttons 164
    pop-up menu 166
    toolbar 164
Real-Time Statistics window 163
Real-time Statistics window 167
Recently Used Ranges 146
Record button 38
Record Menu 29
recorded activity 36
recording 37, 93
    memory size 11
    multi-segment 39
    stopping 38
Recording button 107
Recording Options
    command 93
    configuring 37
    dialog box 93
    files 41
    loading 102
    saving 102
    settings 102
Recording Options command 37
recording progress 35
Recording Progress Bar 35
Recording Rules
    buttons 105
    examples 108
    logic 108
    toolbar 105
Recording Rules tab 103
recording status 35
Recording Type 94, 95
Remove 133
Report Menu 30
Report menu 127
Reporting 12
reports 127
Reset Column Widths 139

resizing 47
Response Time 155, 170
Response Time and Latency Time at Split Transaction level 160
Response Time at Link Transaction level 160
Response Time at Split Transaction level 160
Reverse Lanes 100
Right click cell context menu 84
Row Selection 131
rules
    internal 108
Run verification scripts command 171

S

Save As command 43
Save As Default 92, 102
Save As Default. 102
Save As MultiSegment Trace 94, 98
Save as Multisegment trace 39
Save button 92
Save External Interface Signals 99
Save packet range command 43
saving 43, 92, 102
Search 35
    command 57
Search Bwd message 78
search direction 36
Search Direction command 78
Search For menu 79
Search Fwd message 78
Search Menu 31
searching 57
Seconds radio button 58
segmenting 39
segments
    viewing 98
segments.col file 40
Select command 18
Send command 46
Sequence Cell 106
Sequence State 104
servicemarks ii
Set Display Options command 86
Set Marker command 53, 140
Set Range Near Packet xxx 146
Set Range to Whole Trace 146
setting markers 53
Settings button 172
Settings window 172
Setup Menu 29
short format 47
shortcuts 34
Show Configuration Space for xxxx 154
Show Header Fields command 50
Show Header Fields dialog box 50
Show Number of Transitions checkbox 150
Show Raw 10b Codes command 49
small triangle 47
Snapshot recording type 95
software 21
    installation 13
    update 173
specifications
    ML 11
Specify Action command 107
Split level decode 55
Split Transaction
    metrics 158
Split Transaction Level graphs 161
Split Transaction Performance 158, 170
StandardSettings.rec file 97
Start menu 13
statistics 12
Statistics Accumulation area 167
Status Bar 35
Status bar 22
Stop button 38
Stop option 38
stopping recording 38
storage temperature 11
support 179
Swap Recording Channels 101
Synchronize Trace View 141

T

Target Analyzer 94, 96
Technical Support 179
telephone number 179
temperature range 11
testing 37
text files 44
Throughput 170
Throughput at Link Transaction level 160
Throughput Per Transaction at Split Transaction level 160
Tight Columns 131
time between DWORDs 140
Time Coverage 170
Time Stamp 84
time value 140

time-based averaging 161
Timestamp at the beginning 84
Timing and Bus Usage Calculator 169
Timing Calculations command 169
Timing Calculator dialog box 169
Title bar 22
TLP Header Properties dialog box 118
TLP Prefix Properties dialog box 118
TLP type 122
To packet # field 45
To Packet field 43
Tool tip Display 139
Toolbar 23, 103
22
Tools Menu 33
Tools menu 127
Tooltips 34
trace
cells 48
exporting 44
files 41
metrics 156
saving 43
Trace Filename & Path 94
Trace Filename and Path 96
Trace Viewer 14
Trace Viewing Level 84
traces
searching 57
trademarks ii
traffic 47
analyzing 127
Traffic Speed pane 147
Traffic Summary
buttons 131
metrics 158
Traffic Summary window 130
moving to packets 130
Traffic Type pane 147
triangle 47
trigger
basic events 12
Trigger action 107
Trigger Position 94, 96
triggers
count 120

U

Undo Zoom 133, 166
Union option 80
unit 155
unit-based averaging 161
Update command 173
Update Device command 173, 174
Update License command 174
Update License dialog box 174
Update PETracer Edge dialog box 173
updates 173
Upload Size 94
Uploading 35
Uploading data message 35
Upstream direction 150
USB cable
connecting 17
USB drivers 13
Use External Reference Clock 101

V

Verification Script dialog box 171
View Data Block command 48, 49
View Menu 32
View Options 141
View Options button 139
View Settings 135
Viewer 14
Viewing Attachments of a Marker 65

W

web site 179
Website, CATC 179
Window Menu 33
Windows hardware wizard 15
Wrap 84
Write Requests Performance 158
Writes Response Time 162
Writes Throughput 162

Y

Y Scale Type 133, 166
yellow range delimiters 148

Z

zoom 138
Zoom Level 84
Zoom to Trace View 133